

nutribullet

BABY[®]


Steam + Blend



User guide.

⚠ WARNING! To reduce the risk of serious injury, carefully read all instructions before operating your nutribullet Baby[®] Steam + Blend.

Important safeguards.

 **WARNING!** To reduce the risk of serious injury, carefully read all instructions before operating your nutribullet Baby® Steam + Blend. When using any electrical appliance, basic safety precautions should always be observed, including those detailed in this guide. Be sure anyone who uses the Steam + Blend understands and can follow this important safety information.

! Save these instructions! ● FOR HOUSEHOLD USE ONLY

GENERAL SAFETY INFORMATION

- Close supervision is necessary when any appliance is used by or near children. Keep cord out of reach of children. This appliance is not a toy. **Do not allow children to play with it.**
- The appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- To protect against fire, electrical shock, and injury to persons, do not immerse the motor base, cord, or plug in water or any other liquid.
- Turn the appliance OFF, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord as it may cause shock or hazard. Allow to cool before putting on or taking off parts to reduce the risk of burn or scalds.
- Avoid any contact with blades or moveable parts to reduce the risk of scrapes or cuts. Do not attempt to defeat any safety interlock mechanisms to prevent damage to the work bowl and reduce the risk of burns and scalds.
- Prior to each use inspect the supply cord, plug, and appliance for damage. Do not operate any appliance with a damaged cord or plug.

Do not operate if the appliance has malfunctioned, or has been dropped or damaged in any manner. Contact our customer service department for assistance at 1 (800) 523-5993.

- Do not use attachments that are not recommended for this nutribullet® product, as they may cause fire, electric shock, personal injury, or product damage, and will void the warranty.
- This appliance is intended for household use only. Do not use this appliance for anything other than steaming and blending baby food. Do not use in moving vehicles or boats. Do not use outdoors. Misuse may cause injury.
- To reduce the risk of the product spilling or falling, do not let the power cord hang over the edge of a table or countertop.
- Do not let the power cord touch hot surfaces.
- Do not let the power cord become knotted or tangled.



WARNING! The nutribullet Baby® Steam + Blend will generate very hot steam when cooking food. Do not touch hot surfaces to reduce the risk of burn or scalds. Use handles or knobs and handle with care.

- Always make sure the appliance is properly and completely assembled before plugging in. Securely attach the Work Bowl and Work Bowl Lid. See assembly instructions for proper placement. Do not remove the Work Bowl Lid or the Work Bowl while the appliance is in operation.
- Always ensure the appliance is unplugged after each use. Make sure the Blending Blade has stopped rotating and the motor has completely stopped before disassembling. Always allow Work Bowl to cool before disassembling.
- To reduce the risk of cut injuries, never place cutting blade on base without first putting bowl properly in place. Bowl must be in place before replacing knife blades.
- Do not use the appliance if the Blending Blade is damaged.
- To avoid burn hazards do not attempt to move unit while operating. Allow unit to cool before moving.
- Do not use the Work Bowl as a serving cup.

ADDITIONAL SAFEGUARDS

- Remove and safely discard any packaging material or promotional labels before using the appliance for the first time.

- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this appliance.
- Do not touch the cutting blades/teeth on the Blending Blade. Blades are loose and sharp. Handle carefully to reduce the risk of cuts or severe injury.
- Do not put any non-food items into the Work Bowl. Cuts or burns may result if the Work Bowl breaks.
- Always make sure the appliance is properly and completely assembled before connecting to power outlet and operating.
- The appliance may vibrate during normal operation. Ensure that the operating surface is stable, level, clean, and dry to reduce the risk of the appliance falling.
- Any significant spillage onto the surface under or around the appliance, or onto the appliance itself, should be cleaned and dried before use.
- The appliance is not designed for hard fruits and vegetables, citrus rinds or pits, or seed stones. These may result in potential choking hazards or damage to the Blending Blade or motor.
- The appliance is intended for processing small quantities of food for consumption, and is especially recommended for preparing baby food. Allow food to cool before feeding. The appliance is not intended to prepare large quantities of food at one time.
- Do not fill ingredients above the vents of the pour spout to avoid risk of injury due to damage over the cover or bowl.
- Extreme caution must be used when moving an appliance containing hot oil or liquids to reduce the risk of burns or scalds.
- Avoid sudden temperature changes, such as adding refrigerated foods into a heated pot or bowl to avoid cracking or damage.
- Do not leave the appliance unattended when in use.
- Keep hands and utensils away from the cutting blade while chopping food to reduce the risk of severe injury to persons or damage to the food chopper. A scraper may be used but only when the food chopper is not running and blade is stopped.
- Keep the appliance clean. Refer to the Care & Maintenance section for tips and best practices.

- Do not attempt to repair or service this appliance yourself. Contact Customer Service for assistance at **1 (800) 523-5993**.
- If any of the contained instructions or warnings are not understood, please contact Customer Service for assistance at **1 (800) 523-5993**.

POLARIZED PLUG INFORMATION

- This appliance has a polarized plug (one prong is wider than the other) to reduce the risk of electric shock. This plug will correctly fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.
- This appliance has important markings on the plug blade. The attachment plug or entire cordset (if plug is molded onto cord) is not suitable for replacement. If damaged, the appliance shall be replaced, as damaged plugs or cords may result in fire hazard or injury due to malfunction.

POWER CORD INFORMATION:

- A short power-supply cord (or detachable power-supply cord) is provided to reduce

the risk resulting from becoming entangled in or tripping over a longer cord.

- Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- If a longer detachable power-supply cord or extension cord is used: the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance; the cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally; and if the appliance is of the grounded type, the cord set or extension cord should be a grounding-type 3-wire cord.

VENTILATION SAFETY

- Never place your nutribullet Baby® Steam + Blend on top of flammable items such as newspapers, tablecloths, napkins, dish towels, placemats, or other similar materials.
- Always operate the nutribullet Baby® Steam + Blend on a level surface, leaving unobstructed space beneath and around the Motor Base to permit proper air circulation.

EXTERNAL HEAT WARNING

- Do not place any of the nutribullet Baby® Steam + Blend parts on or near a hot gas or electric burner, or in a microwave, heated oven, or stovetop pot, immerse in boiling water, as this may result in damage or possible bodily injury.

! Save these instructions


Contents.



- 10 What's included**
- 11 Assembly guide**
- 12 Control panel**
- 14 Assembly**
 - 14 Before first use
 - 14 Assembly
 - 16 Initial cleaning cycle
- 18 Using the Steam + Blend**
 - 20 Using the Steam setting
 - 21 Using the Blend setting
- 25 After use**
- 27 Steam + Blend: tips, tricks, and FAQs.**
 - 27 Tips
 - 28 Troubleshooting
 - 29 FAQ
- 31 Care & maintenance**
 - 33 Food and appliance storage
 - 33 Replacement parts
- 34 nutribullet Baby® Steam + Blend one-year limited warranty**
- 37 Product registration**

Thank you for purchasing the nutribullet Baby® Steam + Blend.


What's included.

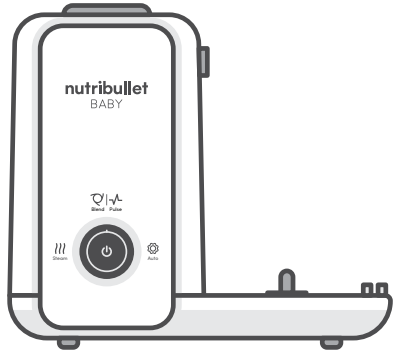



motor base with
water reservoir and cap



work bowl lid

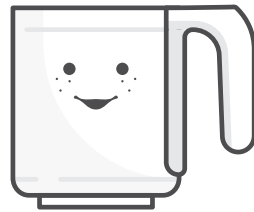


work bowl

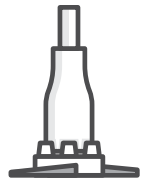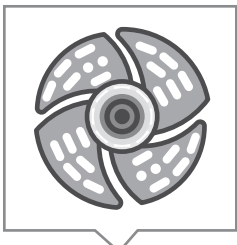

blending blade







blade holder

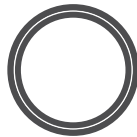

sealing ring

! WARNING! Blades are sharp. Handle carefully.

Assembly guide.

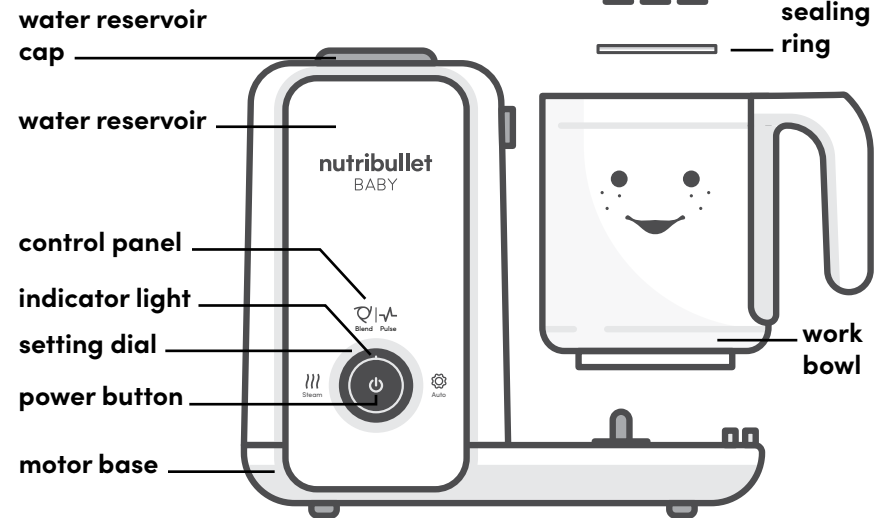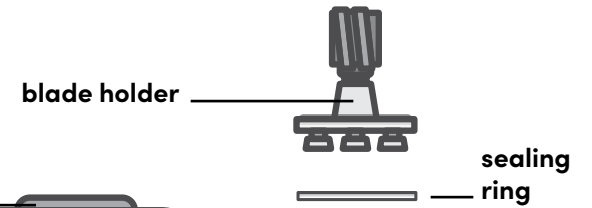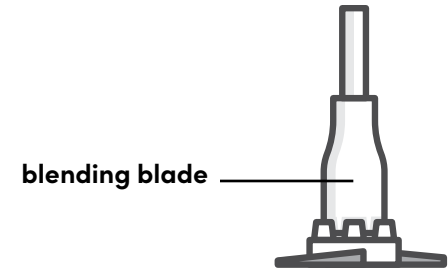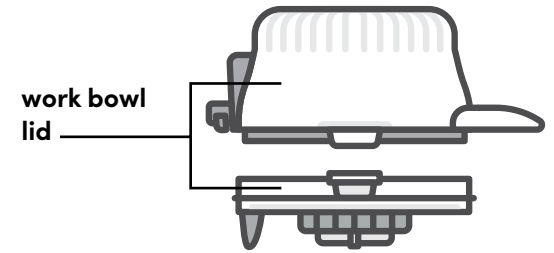


Control panel.

This appliance can steam and blend vegetables and fruits (peeled and cored, with seeds removed) as well as meats and fish (with bones removed).

For cooking times, see Steaming and Blending Tips on page 27.


! WARNING! For your child's safety, always check food temperature before feeding.

! WARNING! Always unplug after each use. Allow Work Bowl to cool for 10 minutes and make sure the Blending Blade has stopped rotating and the motor has completely stopped before disassembling.

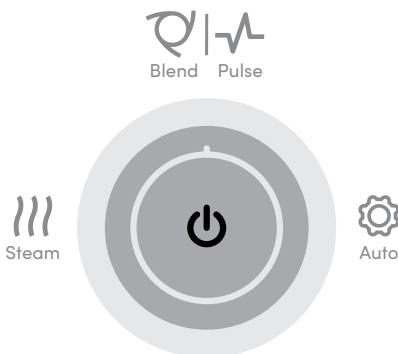


POWER BUTTON:

- Activates the selected setting.
- Reactivates Standby mode if pressed during operation.

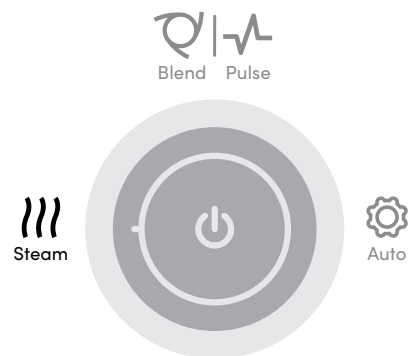


STEAM SETTING:

- Steams food.

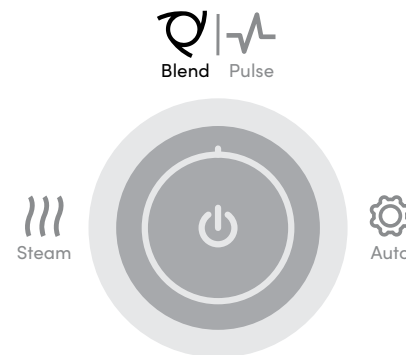


BLEND SETTING:

- Blends hot, steamed ingredients or other soft or cooked foods.
- Default blending time is 1 minute.

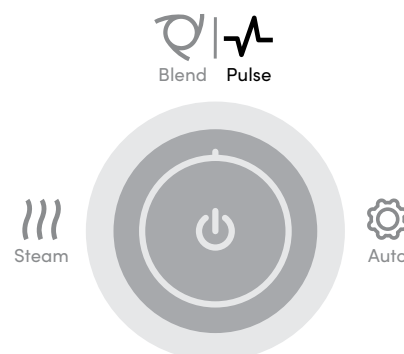

PULSE SETTING:

- Allows you to blend ingredients in short bursts to create coarser textures.

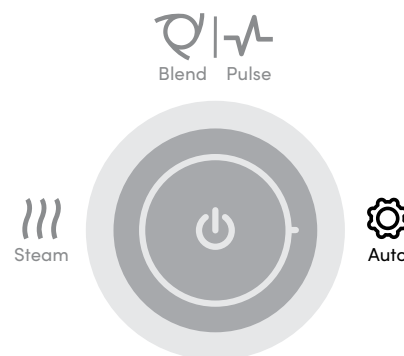

STEAM AND BLEND SETTING:

- Automatically steams then blends food in one continuous process.

Assembly & use.

Before first use.

Before using your nutribullet Baby® Steam + Blend for the first time, please take a moment to perform the steps below.

1. UNPACK

Open box. Remove the **Motor Base** and all attachments. Place all parts on a flat, dry surface.


2. CLEAN

Wash the **Blending Blade, Work Bowl, and Work Bowl Lid** in soapy water, then let everything dry. Clean the **Motor Base** with a clean, damp cloth.


! WARNING! The Blending Blade is extremely sharp. Handle with care. Never submerge the Motor Base in liquid. See Care & Maintenance instructions on page 31 for more detailed cleaning instructions.

Assembly.


Review all warning and caution statements in the Important Safeguards section (pages 3-7) and above before proceeding to Step 1.

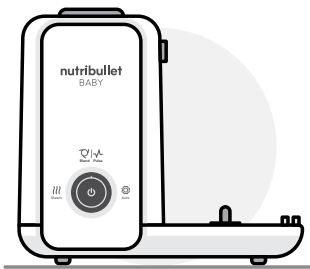


- 1** Place the **Motor Base with Water Reservoir** on a clean, dry, flat surface, like a countertop or table.

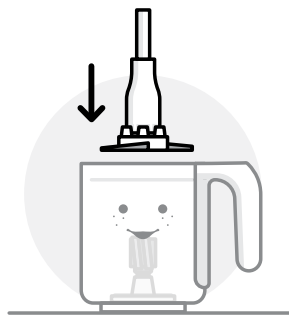


- 2** Gently lower the **Blending Blade** vertically onto the **Blade Holder** in the center of the **Work Bowl**, securing it in place.

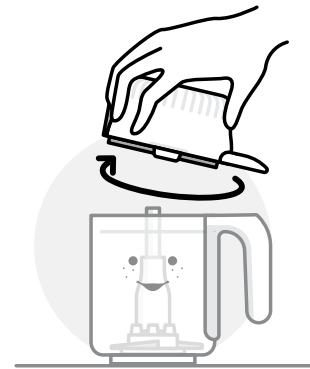

- 3** Twist the **Work Bowl Lid** onto the **Work Bowl** by turning clockwise until it is securely in place.

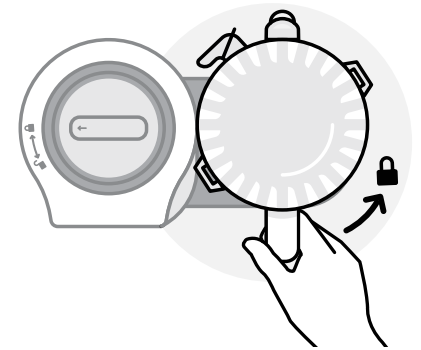


- 4** Place the **Work Bowl** on the **Motor Base** by lining up the black arrow towards the bottom of the **Work Bowl** with the **Unlock** icon on the **Motor Base**. Use one hand to firmly hold down the **Motor Base**, and use your other hand to turn the **Work Bowl** counter-clockwise to lock the **Work Bowl** securely into place.

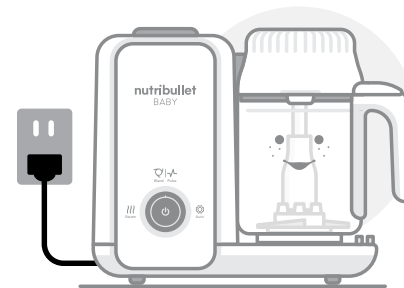


- 5** Connect the **Steam + Blend** to a power source. The appliance will beep once, and the **Indicator** light will illuminate blue when it is ready for use.


Initial cleaning cycle.

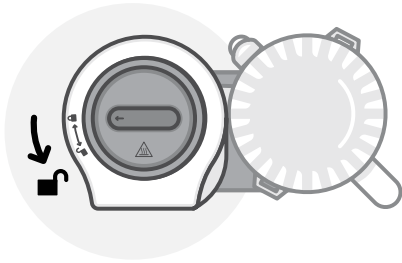


- 1** Turn the **Water Reservoir Cap** counter-clockwise to unlock and remove.

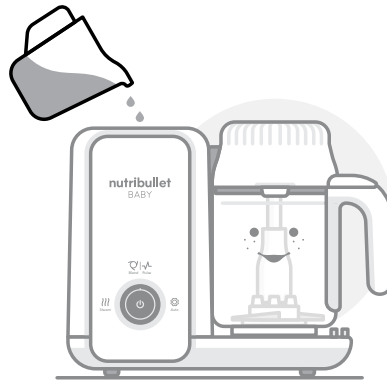


- 2** Fill the **Water Reservoir** to the 25-minute line with water.

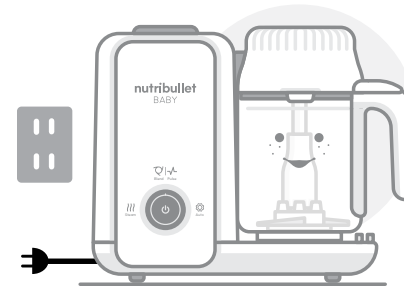


- 5** After the **Steam** or **Blending Cycle** finishes, unplug the appliance and let it cool down completely.

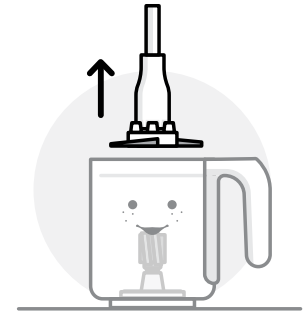

- 6** Gently lift the **Blending Blade** vertically out of the center of the **Work Bowl** using a mitt. Then, discard any remaining water from the **Water Reservoir** and **Work Bowl**.

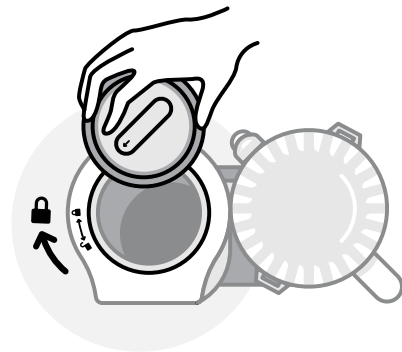

- 3** Replace the **Water Reservoir Cap** and turn clockwise to close and lock.

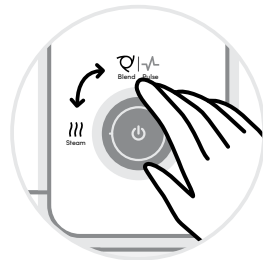

- 4** Perform a **Steam** or **Blending Cycle** by following the steps explained in the Using the Steam + Blend section, page 18.


The nutribullet Baby® Steam + Blend is now ready to use.

! WARNING! The Blending Blade is extremely hot and sharp. Handle with care.


Using the Steam + Blend.



- 1 Gather your desired ingredients and wash them. Prepare the ingredients to be steamed by cutting, skinning, and removing any rinds, stems, or stone seeds.

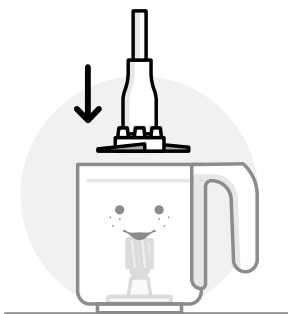

- 3 Gently lower the **Blending Blade** vertically onto the **Blade Holder** in the center of the **Work Bowl**, securing it in place.

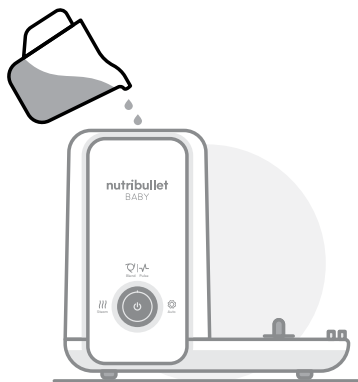

- 2 Fill the **Water Reservoir** with cold water. Twist the **Water Reservoir Cap** clockwise onto the **Water Reservoir** to secure it in place. Make sure it's tightly sealed.

WARNING! DO NOT add water while the unit is on or hot, as this may result in serious burn or scalding injuries.


NOTE: For the proper amount, refer to Steaming and Blending Tips on page 27.



- 4 Add prepped ingredients into the **Work Bowl**. Then, place the **Work Bowl Lid** onto the **Work Bowl**. Turn the lid clockwise to close and lock.


WARNING! Do not block steam vents with food as this may cause pressure buildup.

NOTE: Do not put food or liquid inside the **Work Bowl Lid** assembly.

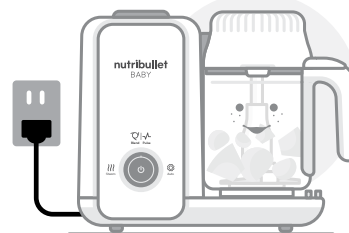

- 6 Connect the **Steam + Blend** to a power source. The appliance will beep once, and the **Indicator** light will illuminate blue when it is ready for use.

WARNING! Do not use a voltage converter or adapter — doing so could result in a fire hazard and will damage the product.

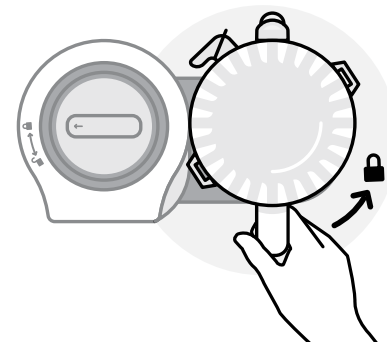

- 5 Place the **Work Bowl** on top of the **Motor Base**. Turn the **Work Bowl** counter-clockwise to lock into place.

NOTE: All settings can only run when the **Work Bowl** and **Work Bowl Lid** are properly assembled on the **Motor Base**. If they are not assembled correctly, the appliance will beep 6 times to alert you when you try to operate it. If this occurs, remove the **Work Bowl** from the **Motor Base**, reassemble, then continue on with the process.

Using the steam setting.




- 1 Turn the **Setting Dial** to select the **Steam** setting and press the **Power** button. The **Indicator** light will flash blue throughout the steaming process to indicate normal operation.

! WARNING! The nutribullet Baby® Steam + Blend will generate very hot steam when cooking food. Handle all parts with care.

NOTE: The appliance will stop working if the **Work Bowl Lid** is opened during operation. Close the **Work Bowl Lid** and press the **Power** button to resume operation.

NOTE: If the water level gets too low during steaming, the appliance will beep three times and the blue **Indicator** light will flash. If this occurs, turn the appliance off and refill the **Water Reservoir** to the required level. The **Indicator** light will appear a solid blue when the **Water Reservoir** is properly filled. Press the **Power** button to resume steaming operation.

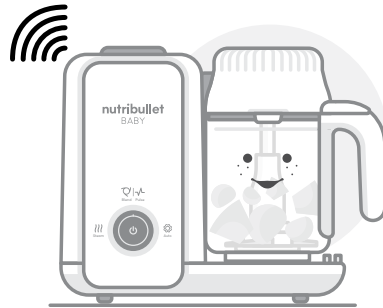

- 2 When the **Steam Cycle** is complete, the appliance will beep 5 times, then enter **Standby** mode.

! WARNING! The surfaces of the nutribullet Baby® Steam + Blend get hot during use. Allow the unit and food to completely cool before handling to reduce risk of burns and scalds.

Using the blend setting.

You have three options for blending with the nutribullet Baby® Steam + Blend:

Continuous (Standard) Blend: An automatic one-minute blending cycle that can be turned off easily if ingredients require less time.

Steam and Blend: An automatic cycle that first steams, then blends ingredients without requiring any manual operation.

Pulse Blend: Allows you to blend ingredients in quick bursts to create coarser textures.

CONTINUOUS (STANDARD) BLEND SETTING:



- 1 Turn the **Setting Dial** to select the **Blend** setting and press the **Power** button. The **Indicator** light will flash blue throughout the blending process to indicate normal operation.

NOTE: The appliance will stop working if the **Work Bowl Lid** is opened during operation. Close the **Work Bowl Lid** and press the **Power** button to resume operation.



- 2 When the **Blend Cycle** is complete, the appliance will beep 5 times, then enter the **Standby** mode.

STEAM + BLEND SETTING:



- 1 Turn the **Setting Dial** to select the **Steam + Blend** setting and press the **Power** button. The **Indicator** light will flash blue throughout the steaming process to indicate normal operation.

NOTE: The appliance will stop working if the **Work Bowl Lid** is opened during operation. Close the **Work Bowl Lid** and press the **Power** button to resume operation.

NOTE: If the water level gets too low during steaming, the appliance will beep three times and the blue **Indicator** light will flash. If this occurs, turn the appliance off and refill the **Water Reservoir** to the required level. The **Indicator** light will appear a solid blue when the **Water Reservoir** is properly filled. Press the **Power** button to resume steaming operation.



- 2 After steaming is complete, the appliance will automatically enter into **Blending** mode.



- 3 When the **Blend Cycle** is complete, the appliance will beep 5 times, then enter **Standby** mode.

! WARNING! The surfaces of the nutribullet Baby® Steam + Blend get hot during use. Allow the unit and food to completely cool before handling to reduce risk of burns and scalds.

PULSE BLEND SETTING:



- 1 To enter **Pulse** mode, turn the **Setting Dial** to the **Blend** setting, then push and hold the **Power** button for 3 seconds, until the appliance beeps 3 times.



- 2 Push and hold the **Power** button to blend, and release it to stop blending. Repeat as desired.




- 3 **Exiting Pulse mode:** The **Steam + Blend** will go back to regular **Blend** mode if no action is taken after 60 seconds or with any interrupting actions such as rotating the dial or removing the **Work Bowl**.

DEFROST SETTING:

Microwave heating often results in uneven food temperatures where one area of the food is still cold and another area is very hot. These hot spots are very dangerous, because they could easily burn a baby's mouth. We recommend defrosting your frozen **nutribullet Baby**® servings with your handy **nutribullet Baby**® **Steam + Blend**!

Defrosting has never been easier. Simply pop your frozen **nutribullet Baby**® serving into the **Work Bowl** and in just minutes you'll have warm and delicious baby food! Always check temperature of food before serving.

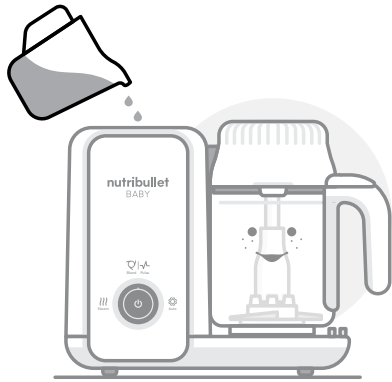

- 1 Fill the **Water Reservoir** to the 10-minute line with water.



- 3 Turn the **Setting Dial** to select the **Steam** setting and press the **Power** button.

Repeat if desired.




- 2 Pop a frozen **nutribullet Baby**® serving into the **Work Bowl**.

After use.


- 1 Make sure the appliance is unplugged and cooled before starting disassembly.

Let it cool for 10 minutes. Ensure that the motor is completely turned off, the **Blending Blade** has stopped rotating, and all moving parts have come to a complete stop before disassembling the appliance and removing any food from the **Work Bowl**.


- ⚠ **WARNING!** The surfaces of the **nutribullet Baby**® **Steam + Blend** get hot during use. Allow the unit to completely cool to reduce the risk of burning and scalding.

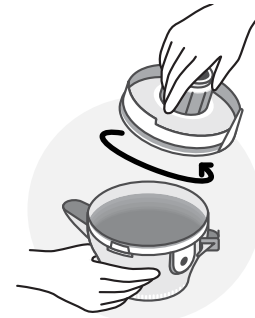

- 3 Separate the **Work Bowl Lid** into two pieces to remove any remaining food or water and dry fully. To separate, twist the circular bottom grip of the **Work Bowl Lid** counter-clockwise.

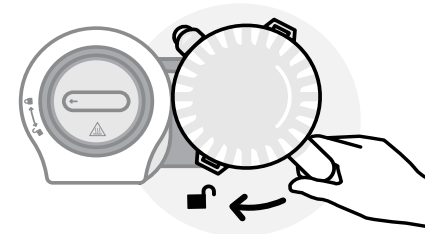


- 2 Firmly grasping the **Work Bowl** handle, unlock the **Work Bowl** from the **Motor Base** by twisting it clockwise. Carefully open the **Work Bowl Lid**.

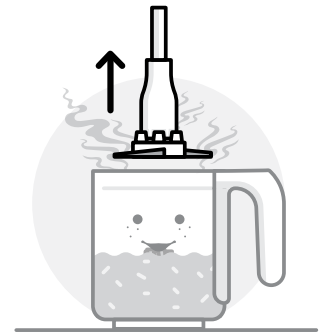

- 4 Gently lift the **Blending Blade** vertically out of the center of the **Work Bowl** using a mitt.

- ⚠ **WARNING!** The **Blending Blade** is extremely hot and sharp. Handle with care.


TIP: Clean the **Blending Blade** immediately after use for best results. (See **Care & Maintenance** section, page 31.)

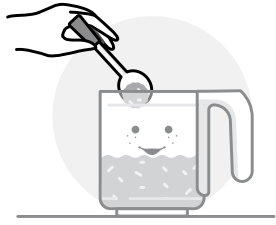

- 5** Remove steamed or blended food from the inside of the **Work Bowl**.

You can set the food aside in a bowl for immediate use, store it for later (in the **Work Bowl** or in your own container), or empty unwanted food into a waste bin or garbage disposal.

! WARNING! The nutribullet Baby® Steam + Blend will generate very hot steam when cooking food. Handle all parts with care.

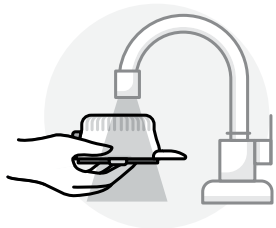


- 7** Clean the **Blending Blade**, **Work Bowl**, and **Work Bowl Lid**. (See Care & Maintenance section, page 31.)


TIP: Use a cleaning cloth or a brush with soft bristles to scrape any food residue out of the **Work Bowl**, or off the inside of the **Work Bowl Lid**.



- 6** Untwist the **Water Reservoir Cap** and remove any remaining water from the **Water Reservoir**.

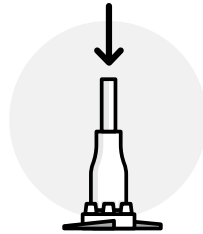

- 8** Clean the inside of the **Blade Stem** to remove any remaining food or water and dry fully.

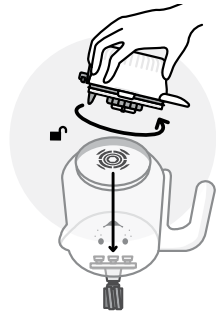

NOTE: The inner **Work Bowl Lid** can be used to unlock the **Blade Holder** for cleaning with a simple twist. Align the inner lid with the bottom of the **Work Bowl**, twist counter-clockwise to unlock the **Blade Holder**. Twist clockwise to re-lock the **Blade Holder** into place.

Steaming + Blending: tips, tricks, and FAQs.

Tips.

The steaming times below indicate the number of minutes recommended for each food item, and are calculated for approximately 200ml or 1 cup of food.

All ingredients should be cut into roughly ½-inch [1-2cm] cubes before steaming.

Never exceed the MAX fill line on the Work Bowl.

! WARNING! Always check that food is fully cooked and at a safe temperature before feeding to your infant.

STEAMING TIME AND WATER LEVELS:

Food	Steam time/ Tank markings	Type of food	Water amount (oz)
Spinach	10	Vegetable	3oz
Carrot	25	Vegetable	5oz
Potato	25	Vegetable	5oz
Sweet potato	25	Vegetable	5oz
String beans	15	Vegetable	5oz
Apple	15	Fruit	5oz
Fish	15	Meat	5oz
Shrimp	15	Meat	5oz
Chicken/ Beef/Pork	20	Meat	6.5oz

Troubleshooting.

PROBLEM

The appliance won't operate, and the Indicator light is not turning on.

SOLUTION

Unplugged: Make sure the appliance is plugged into a power source. When the power is connected, the appliance will beep once, and the Indicator light will illuminate blue.

PROBLEM

The appliance won't operate, and the Indicator light is on.

SOLUTIONS

Work Bowl not properly

positioned: Make sure the Work Bowl is installed in the proper position on top of the Motor Base.

Work Bowl Lid open or not fully

closed: Make sure the Work Bowl Lid is properly positioned atop the Work Bowl, fully closed, and tightly sealed.

Water level low: Make sure the Water Reservoir contains enough water. Fill with room-temperature water.

PROBLEM

The Steam setting cannot be activated (appliance does not steam or doesn't produce steam).

SOLUTIONS

Work Bowl not properly

positioned: Make sure the

Work Bowl is installed in the proper position on top of the Motor Base.

If it is not correctly installed, the appliance will beep 6 times to indicate all settings cannot be activated.

Water level low: Make sure the Water Reservoir has enough water. Fill with room-temperature water.

PROBLEM

The Blend setting cannot be activated (appliance does not blend).

SOLUTION

Work Bowl not properly

positioned: Make sure the Work Bowl is installed in the proper position on top of the Motor Base.

If it is not correctly installed, the appliance will beep 6 times to indicate the Blend setting cannot be activated.

PROBLEM

My appliance was working but has now stopped.

SOLUTION

The Work Bowl Lid may have

opened: The appliance will stop working if the Work Bowl Lid is opened during operation.

Close the Work Bowl Lid and press the Power button again to resume operation.

PROBLEM

My appliance was working but has now stopped. The Work Bowl and Work Bowl Lid are both positioned properly.

SOLUTION

The water level likely got too

low: If the water level in the Water Reservoir gets too low during operation, the appliance will stop working.

The appliance will alert you that your water level is too low by

beeping 3 times and flashing the blue Indicator light.

Add room-temperature water to the Water Reservoir, then press the Power button to resume operation.

After the appliance is refilled with enough water, the blue Indicator light will illuminate solidly. Resume operation by pressing the Power button.

FAQ.

What are the primary parts that are included with this appliance?

- Water Reservoir, Water Reservoir Cap
- Work Bowl with integrated handle, Work Bowl Lid
- Motor Base, Blending Blade, Blade Holder

How many blending speeds does the nutribullet Baby® Steam + Blend have? Is there a Pulse setting?

The nutribullet Baby® Steam + Blend has one blending speed.

However, there are two ways to blend with the nutribullet Baby® Steam + Blend.

Activate standard Blend mode by setting the dial to Blend, then pressing the Power button. You can either allow the blender to run its full 1-minute Blend cycle, or press the Power button at any time to stop blending.

You can also change the blend setting so it will Pulse ingredients by turning the Setting Dial to Blend and pressing the Power button for roughly 3 seconds. Once in Pulse mode, simply press and release the Power button in quick succession until food reaches the desired consistency. This is helpful for creating more textured purées.

What options do I have for Blending?

You have three blending options:

- **Continuous Blend** (push the Power button to start blending, push Power again to stop).
- **Steam-and-Blend** (run a Steam cycle first, then automatically start a Blend cycle).
- **Pulse Blend** (Hold the power button for 3 seconds to activate the pulse setting to start blending in quick bursts, in pulsing fashion).

Can you tell me more about how Pulse mode works?

To enter Pulse mode: turn the dial to Blend, then push and hold the Power button for about 3 seconds, until the appliance beeps 3 times.

Once in Pulse mode, simply press and release the Power button in quick succession until food reaches the desired consistency. This is helpful for chopping and mincing food to create more textured purées.

Do I need to use the Blending Blade (place it in the Work Bowl) when I am just steaming (not blending)?

The Blending Blade is not

required during steaming operation, but since it contains drainage holes, it can be used to keep excess water from mixing with steamed ingredients.

When is it safe to begin Disassembly?

Make sure the unit has cooled for 10 minutes, the Blending Blade has stopped rotating, and the motor has completely come to a stop before disassembling.

What should I do once I'm done steaming or blending?

Always make sure the appliance is turned off after each use. Unplug the appliance if you won't be using it for a while.

To store the appliance, keep parts together and place assembled appliance in a dry, cool place.

When should I unplug the appliance?

If you won't be steaming or blending for a while after use, or you want to store the appliance, unplug the power cord from the electrical outlet.

Care & maintenance.

Cleaning the **nutribullet Baby® Steam + Blend** is quick and easy. All components attach and detach easily, and except for the Motor Base, Blending Blade, and Blade Holder, all are dishwasher safe.

STEP 1:

Make sure Motor Base is unplugged before you begin assembly, disassembly, cleaning, or storage of appliance. Turn off power, unplug the appliance, and let it cool down completely before cleaning.

STEP 2:

Once food is emptied from the Work Bowl, rinse all parts except the Motor Base under running water. Right after steaming or blending, make sure to:

- Rinse the Work Bowl and Work Bowl Lid under running water.

- Rinse the Blending Blade under running water. Make sure to hold it by a non-sharp area.
- Be sure to properly clean the Blending Blade every time you blend, as minerals from fruits and vegetables (or other food residue) can cause buildup, which may inhibit optimal operation.



WARNING! The Blending Blade is extremely sharp. Handle with care.

STEP 3:

To clean the Motor Base, wipe down with a clean, damp cloth.

CLEANING TIPS AND BEST PRACTICES:

- **Before first use, before each use, and after every use:** wash the Work Bowl and Work Bowl Lid in warm soapy water or use a dishwasher (top shelf only) and dry thoroughly.
- Wash the Blending Blade and Blade Holder in warm soapy water and dry thoroughly.

- To remove the Blade Holder from the Work Bowl, rotate the bottom of the Blade Holder.



WARNING! The Blending Blade is extremely sharp. Handle with care.

NOTE: The Blending Blade and Blade Holder are not recommended for the dishwasher.

- After cooling, always clean the Work Bowl, Work Bowl Lid, and Blending Blade as soon as possible after steaming or blending.

If allowed to sit, food residue will dry and become more difficult to rinse or scrub off.

If this happens, let the part soak in hot water for 30 minutes to loosen residue.
- After every use, wipe the entire Motor Base with a damp cloth but do not submerge in water.
- All components except the Blending Blade, Blade Holder, and Motor Base are dishwasher-safe.

You may hand-wash all parts except the Motor Base with warm soapy water.

DESCALING:

- We recommend descaling every 4 weeks, but it may be needed sooner if you notice limescale buildup earlier.
- If descaling after a steam cycle, let the appliance cool down completely before beginning the descaling process.
- **DESCALING PROCESS:** Discard any remaining water from the Water Reservoir. Purchase a suitable chemical-free descaler or pour 8oz of white vinegar into the Water Reservoir. Leave for at least 30 minutes, or up to 24 hours depending on the extent of limescale buildup. Pour the white vinegar liquid down the sink. Rinse the Water Reservoir with cool water to remove any buildup that came loose during descaling, then pour it down the sink. After descaling, boil with fresh water several times and discard water. Repeat the process, if necessary, to remove any residual buildup or white vinegar. Follow the Initial cleaning cycle process in the Assembly section to run a final cleaning cycle. You may need to repeat this process if you find that limescale buildup is still present.
- Alternatively, to reduce limescale build up, use filtered water to fill the Water Reservoir.

Food and appliance storage.

STORING FOOD:

In your own container.

Store the container upright in your refrigerator, with the lid tightly sealed.

Do not stack anything on top of the container lid.

For best taste, and to avoid spoilage, consume all leftover food within 48 hours.

STORING THE APPLIANCE:

Unplug the appliance if you won't be steaming or blending for a while.

For longer-term storage, keep all the pieces of the Steam + Blend appliance together, and place the assembled appliance in a dry, cool place.

When storing the appliance, place it in a safe place where it will not be damaged and won't cause harm.

Replacement parts.

To order additional parts and accessories, please visit our website at nutribullet.com/shop/accessories or feel free to contact Customer Service: **1 (800) 523-5993**.

nutribullet Baby[®] Steam + Blend one-year limited warranty.

LIMITED WARRANTY FOR NUTRIBULLET[®]

nutribullet's limited warranty obligations are confined to the terms set forth below:

Limited warranty terms and conditions for your nutribullet Baby[®] are set forth below: Capital Brands Distribution, LLC, the distributor of the nutribullet Baby ("nutribullet Baby") warrants the nutribullet Baby against defects in materials and workmanship for a period of one year from the date of original retail purchase. This limited warranty is valid only in the country in which the product is purchased and comes with the product at no extra charge (an additional four-year extended warranty can be purchased separately, please see details below), however shipping and processing fees will be incurred for returns, replacements and or refunds.

If a defect exists, and Capital Brands Distribution is obligated under this limited warranty, at its option Capital Brands Distribution will (1) repair the product at no charge, using new or refurbished replacement parts,

(2) exchange the product with a product that is new or that has been manufactured from new or serviceable used parts and is at least functionally equivalent to the original product, or (3) refund the purchase price of the product. A replacement product assumes the remaining warranty of the original product. A repaired product has a one-year warranty from the date of repair. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Capital Brands Distribution's property. When a refund is given, your product becomes Capital Brands Distribution's property.

OBTAINING WARRANTY SERVICE

For limited warranty service, simply call our customer service department at 1 (800) 523-5993 or contact us via email from our website. Simply click the Contact Us link, fill out and submit the customer contact form and we will be glad to help you. When you contact our customer service department you will be asked to furnish your name, address, telephone number and to provide proof of the original purchase (receipt) containing a description

of the product(s), purchase date, and the appropriate nutribullet Baby bar code(s). Before you send your product for limited warranty service please make sure to keep a copy of all relevant documents for your files (receipt, etc.). It is always recommended to purchase product insurance and tracking services when sending your product for service. Remember, shipping and processing fees will be incurred and are not covered by the one-year limited warranty.

EXCLUSIONS & LIMITATIONS

- 1 This nutribullet Baby One-Year Limited Warranty applies only to nutribullet Baby products distributed by Capital Brands Distribution that can be identified by the "nutribullet Baby" trademark, trade name, logo affixed to it and bar code. nutribullet Baby's One-Year Limited Warranty does not apply to any other product that may appear to be authentic, but were not distributed/sold by Capital Brands Distribution.
- 2 Normal wear and tear is not covered by this limited warranty. This

limited warranty applies to consumer use only, and is void when the product is used in a commercial or institutional setting.

- 3 This limited warranty extends only to the original consumer purchaser and is not transferable. In addition, proof of purchase must be demonstrated.
- 4 Repair or replacement of the product (or, if repair or replacement is not feasible, a refund of the purchase price) is the exclusive remedy of the consumer under this limited warranty. Capital Brands Distribution shall not be liable for any incidental or consequential damages for breach of this limited warranty or any implied warranty on this product.
- 5 This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Capital Brands Distribution is not liable for any damage to products not covered by this warranty (e.g., cups, book, Recipe Guide).

Product registration.

- 6 This limited warranty does not apply: (a) to damage caused by accident, abuse, misuse, or misapplication; (b) to damage caused by improper maintenance (including unauthorized parts service); (c) to a product or a part that has been modified in any way; (d) if any nutribullet Baby bar code or trademark has been removed or defaced; and or (e) if the product has been used with an adapter/converter.

This limited warranty and the remedies set forth above are exclusive and in lieu of all other warranties, remedies and conditions, whether oral or written, express or implied. Capital Brands Distribution specifically disclaims any and all implied warranties, including, without limitation, warranties of merchantability and fitness for a particular purpose. If Capital Brands Distribution cannot lawfully disclaim implied warranties under this limited warranty, all such warranties, including warranties of merchantability and fitness for a particular purpose are limited in duration to the


duration of this limited warranty.
No nutribullet Baby reseller, agent, or employee is authorized to make any modification to this warranty.

Capital Brands Distribution is not responsible for direct, special, incidental or consequential damages resulting from any breach of warranty or condition, or under any other legal theory, including but not limited to lost profits, downtime, goodwill, damage to or replacement of equipment and property. Capital Brands Distribution specifically does not represent that it will be able to repair any product under this limited warranty.

Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages or exclusions or limitations on the duration of implied warranties or conditions, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary by state or province.

Please visit nutribullet.com/shop/accessories or call **1 (800) 523-5993** to register your new nutribullet Baby® Steam + Blend. You will be asked to enter the **Serial Number*** of your product, along with the purchase date and place of purchase.

The registration will enable us to contact you in the unlikely event of a product safety notification.

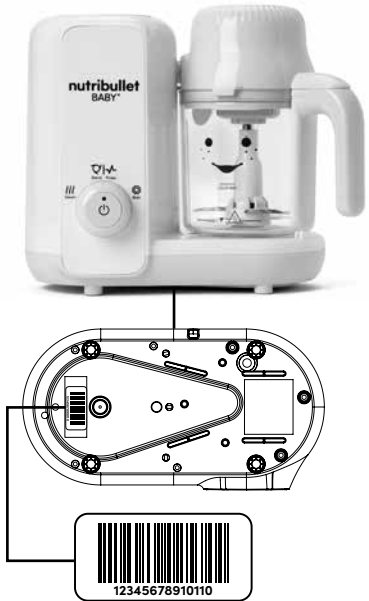

How to find serial number under the Motor Base.



Capital Brands Distribution, LLC | nutribullet.com | All rights reserved.

nutribullet® and the nutribullet logo are trademarks of CapBran Holdings, LLC registered in the U.S.A. and worldwide.

Illustrations may differ from the actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

221116_NBY50200