

# nutribullet®

BREW CHOICE™  
POD + CARAFE



# User guide.

# Important safeguards.

**Warning!** To avoid the risk of serious injury, carefully read all instructions before operating your NutriBullet®. When using any electrical appliance, basic safety precautions should always be observed, including the following important information.

## ! Save these instructions! ● FOR HOUSEHOLD USE ONLY

### GENERAL SAFETY INFORMATION

- Close supervision is necessary when any appliance is used by or near children. Keep cord out of reach of children. This appliance is not a toy. Do not allow children to play with it.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats.  
**DO NOT USE OUTDOORS.** Misuse may cause injury.
- During a brew cycle, in order to disconnect or turn off the unit, press the Start/Cancel button to cancel (or stop)

the brewing process. Then, remove the plug from the wall outlet. Always unplug appliance from outlet before putting on or taking off parts, and before cleaning or attempting to move the appliance.

### Always make sure the unit is properly and completely assembled before connecting to a power outlet and operating.

- Do not fill water reservoir above MAX fill line or use distilled water, milk, or other liquids.
- Do not run a brew cycle without water. This can cause damage to the unit and cause malfunction.
- Use the unit in an upright position only. Allow unit to cool completely (2 hours) prior to moving it or turning it in any position other than upright.

**WARNING:** To avoid the risk of injury, do not open any part of the NutriBullet® Brew Choice™ Pod + Carafe Brew Area during a brew cycle.

### ELECTRICAL SAFETY

- To protect against fire, electrical shock, and injury to persons, do not immerse the appliance, cord, or plug in water or any other liquid.
- Regularly inspect the power cord, plug, and actual appliance for any damage.
- **Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact NutriBullet® Customer Service for assistance at 1 (800) 523-5993.**
- The use of attachments not recommended or sold by NutriBullet® may cause fire, electric shock, or injury.
- A short power supply cord (or detached power-supply cord) is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
- Longer detachable power-supply cord or extension cord may be purchased and used if care is exercised in their use.

- If an extension cord or longer detachable power cord is used:
  - The marked electrical rating of the extension cord must be at least or greater than the electrical rating of the appliance.
  - If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord.
  - The longer cord should be arranged so that it will not drape over the countertop or table top where it can be pulled on by children or tripped over.
- Do not let the power cord hang over the edge of a table or countertop.
- Do not let the power cord touch hot surfaces, or become knotted or tangled.
- To disconnect the Brew Choice™ at any time, remove the plug from the wall outlet.

**WARNING!** This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

**WARNING:** To reduce the risk of fire or electric shock, never remove the bottom cover of the Brew Choice™. No user-serviceable parts are inside. Repair should be done by authorized service personnel only.

## HEAT SAFETY

- Ensure that the surface where the appliance operates is stable, level, clean, and dry. Do not place on or near a hot gas or electric burner, or in a heated oven.

**When the coffee maker is on, or during a brew cycle, never place a plastic cup or brewing vessel directly on the heat plate, base of the unit, or on the removable mug platform. It will cause melting and permanent damage to the unit and may cause fire or injury.**

**WARNING:** Always make sure the carafe, your mug, or your travel mug are positioned properly to accept the dispensed hot liquid. Overflow can lead to scalding hazards.

**WARNING!** Scalding may occur if the Pod + Carafe Brew Area is opened during the brewing process.

Never put your hands directly on hot surfaces. Use handles or knobs. Care must be taken, as burns can occur from touching hot parts or from spilled, hot liquid.

- **DURING BREWING:** When brewing is in process, the heat plate, base of the Brew Choice™ Pod + Carafe, and the Removable Mug Platform will be **HOT**. Additionally, the liquid and steam coming out of the coffee spout will be **HOT**. **USE CAUTION** when touching the coffee maker. Avoid putting your hands beneath the coffee spout and always make sure your mug or carafe is positioned properly to accept the dispensed hot liquid.
- **AFTER BREWING:** Once brewing is complete, the heat plate and base of the unit may remain hot for up to two hours. **USE CAUTION** when touching or moving the Brew Choice™ Pod + Carafe.
- Any significant spillage onto the surface under or around the appliance, or onto the appliance itself (especially on the heat plate), should be cleaned and dried before continuing to use the appliance.

## CARAFE SAFETY

- The glass carafe is designed for use with this appliance. It must never be used on a range top or microwave.
- Do not set hot carafe on a wet or cold surface.
- If carafe becomes cracked or handle becomes loose, do not use to avoid spilling hot liquid.
- Make sure carafe lid is tightly sealed before serving any beverages.
- Do not clean carafe with abrasive cleaners, steel wool, or other abrasive material.

## \*K-CUP® POD & REUSABLE POD SAFETY

**WARNING!** Used \*K-Cup® pods should be removed from the pod holder, and areas holding coffee grounds should be rinsed clean after brewing, or in part with the daily cleaning routine.

Only use \*Keurig® K-Cup® pods in this appliance. Do not remove foil lid. The use of \*non-K-Cup® pods or accessories may cause brewer malfunction or injury.

There are sharp needles that puncture the \*K-Cup® pod. To avoid risk of injury, be aware of the needle locations. Never stick your fingers in the Pod Holder.

## VENTILATION WARNING

- When using this appliance, provide adequate air space above and on all sides for circulation.

## ADDITIONAL SAFEGUARDS

- Remove and safely discard any packaging material or promotional labels before using this appliance for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this appliance.
- Keep the appliance clean. Refer to the Care and Maintenance section for tips and best practices.
- Any maintenance other than cleaning should be performed by an authorized NutriBullet® Service Center. Do not attempt to repair or service this appliance yourself. Contact NutriBullet® Customer Service for assistance at **1 (800) 523-5993**.
- If any of the contained instructions or warnings are not understood, please contact NutriBullet® Customer Service for assistance at **1 (800) 523-5993**.

**! Save these instructions!**

# Contents.



## NutriBullet® Brew Choice™ Pod + Carafe Technical Specifications


Item number: NBC50200

Rated power: 1250 W | Water Reservoir Capacity: 67.2oz | Carafe: 12 (5oz) cups

- 08 What's included**
- 09 Assembly guide**
- 10 Two ways to brew under one roof**
- 11 Control panel**
- 13 Usage instructions**
  - 13 Before first use
  - 13 Assembly
  - 15 Initial cleaning cycle
  - 18 Pod brewing
  - 22 Carafe brewing
- 25 Additional information**
  - 26 Tips & tricks
- 26 Troubleshooting**
- 28 Care & maintenance**
  - 28 How to store
  - 28 Replacement parts
- 29 NutriBullet® Brew Choice™ Pod + Carafe one-year limited warranty**
- 32 Warranty registration**

Thank you for purchasing the NutriBullet® Brew Choice™ Pod + Carafe.


# What's included.

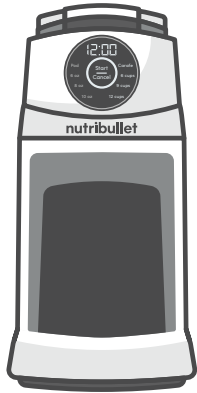

**body  
(unit base)**



**12-cup glass  
carafe with  
removable lid**

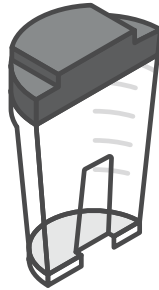

**67.2oz  
removable  
water reservoir**




**brew basket**



**pod holder**



**gold tone filter**

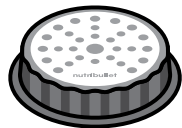

**removable mug  
platform**  
For pod brewing only.




**coffee ground  
scoop**



**reusable pod**  
Fits ~10g of coffee  
grounds, depending on  
the brand and coarseness  
of the grounds.


# Assembly guide.

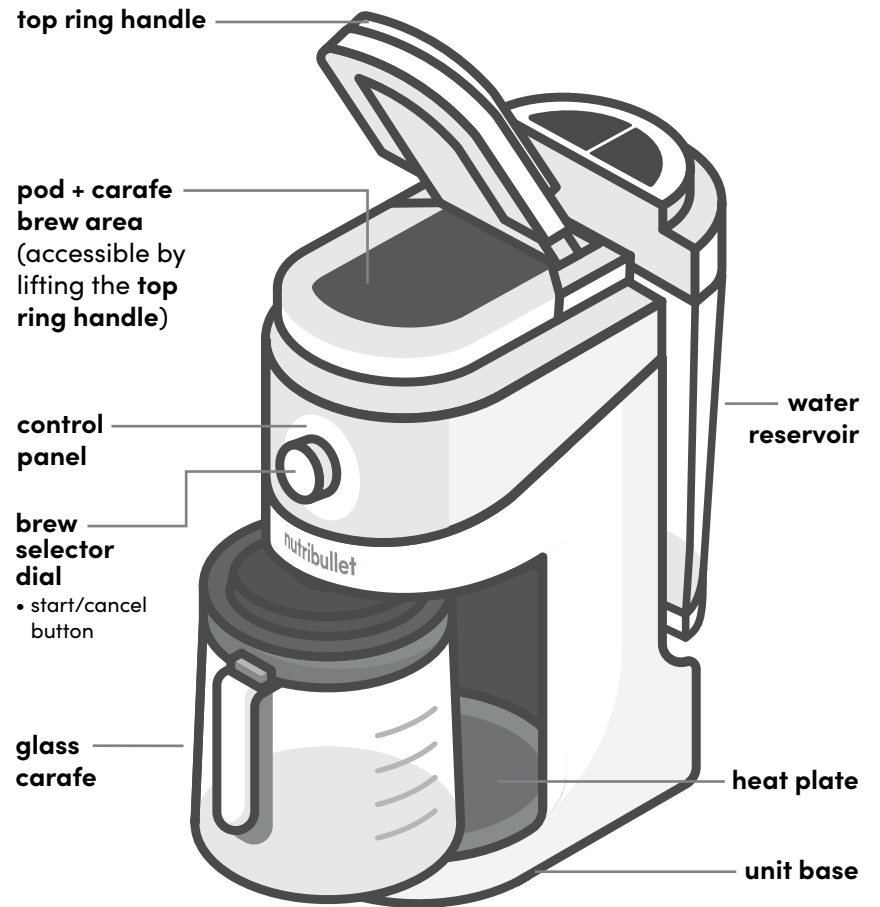

**NOTE:** Attached power cord not shown.

**removable mug platform**


**NOTE:**  
For pod  
brewing only.

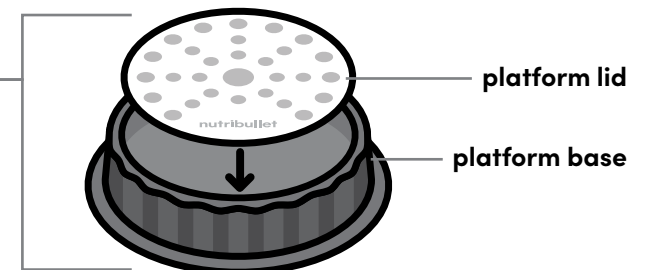

# Two ways to brew under one roof.

The **NutriBullet® Brew Choice™ Pod + Carafe** let's you brew a cup with a \*K-Cup® or reusable pod, or a carafe with coffee grounds.

## POD BREWING:

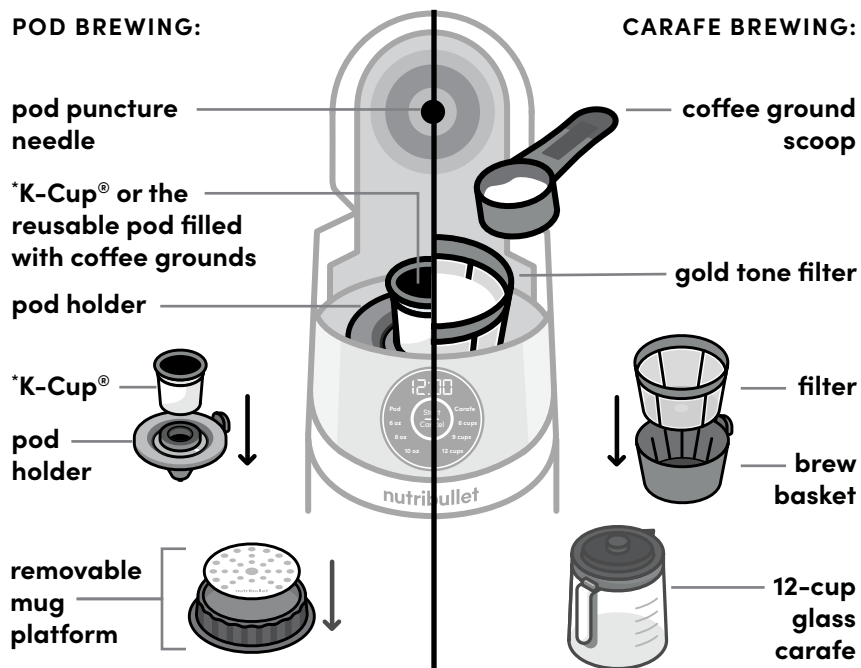

Pop in a \*K-Cup® pod or the Reusable Pod, choose your cup size, and hit the ground running for optimum convenience.

Open the Pod + Carafe Brew Area. Place the Pod Holder inside, then add a \*K-Cup® or Reusable Pod with coffee grounds.

Place the Removable Mug Platform on the heat plate before brewing.


## CARAFE BREWING:

Brew a carafe of your favorite ground blend using a filter for a classic coffee experience.

Open the Pod + Carafe Brew Area. Place the Brew Basket inside, then add the Gold Tone Filter. Use the Coffee Ground Scoop to measure and spoon your coffee grounds into the filter.

Place the Glass Carafe on the heat plate before brewing.

# Control panel.

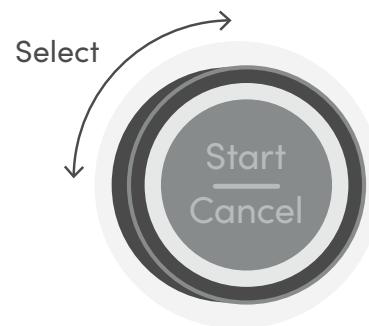

## BREW SELECTOR DIAL:

Use the **Brew Selector Dial** to choose your brew size. With Brew Sense™ Technology, the **Control Panel** will illuminate either "Pod" or "Carafe" depending on whether the **Pod Holder** or **Gold Tone Filter + Brew Basket** is inserted into the **Pod + Carafe Brew Area**. Three associated sizes will also illuminate. To scroll through these sizes, simply turn the dial in either direction. The size in turn will appear brighter than the other two size options.



## POD:

When the **Pod Holder** is inserted into the **Pod + Carafe Brew Area**, the left side of the **Control Panel** will illuminate blue, showing you 3 pod sizes: 6, 8, and 10oz.



## CARAFE:

When the **Gold Tone Filter + Brew Basket** is inserted into the **Pod + Carafe Brew Area**, the right side of the **Control Panel** will illuminate white, showing you 3 carafe sizes: 6, 9, or 12 cups.

# Usage instructions.



## START/CANCEL BUTTON:

Once you've used the **Brew Selector Dial** to choose your desired brew size, push the **Start/Cancel Button** to begin brewing. The Brew Choice™ will beep to let you know that brewing has started. During the brew cycle, your selected size will fade in and out continuously until the your coffee is ready. Push the **Start/Cancel Button** again to cancel a brew cycle at any time. The Brew Choice™ will beep to let you know that brewing has been cancelled.



## ADD WATER ALERT:

When the Brew Choice™ does not have enough water in the **Water Reservoir** to complete a brew cycle, it will:

- Beep 3 times.
- Flash your last selected brew size on the **Control Panel**.
- Display "H2O" on the **Control Panel** and flash in sync with the selected size.
- Extinguish all brew sizes.

**NOTE:** The Brew Choice™ may run out of water mid-cycle.



**WARNING:** To avoid the risk of injury, do not fill your **Water Reservoir** mid-cycle. If you add water, press the **Start/Cancel Button** to cancel the brew cycle, then re-fill your **Water Reservoir**.

## Before first use.

Before using your NutriBullet® Brew Choice™ Pod + Carafe for the first time, please take a moment to perform the steps below.

### 1. UNPACK

Open the box and remove the appliance with its various components, placing all parts on a flat, level, and dry heat-resistant surface. Remove and/or discard any packaging material, promotional labels, and tape from the unit.


### 2. CLEAN

Immerse the **Brew Basket, Water Reservoir, Glass Carafe, Removable Mug Platform, Gold Tone Filter, Reusable Pod, and Coffee Ground Scoop** in warm, soapy water. Rinse and dry. Clean the outside of the body of the Brew Choice™ with a clean, damp cloth. Avoid using abrasive cleaners on the **Unit Base**.

**WARNING:** Never submerge the **Unit Base** in water or any other liquid.

## Assembly.

Review all warning and caution statements in the Important Safeguards section (pages 2-5) and in the section above before proceeding to Step 1.

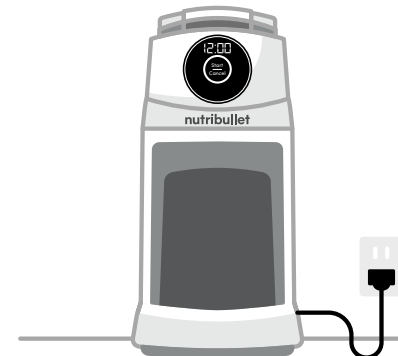

### 1 Plug in the Brew Choice™


Insert the power cord into an electrical outlet to power on. You will be prompted to set the clock once the unit turns on.





- 2 Set the clock.** Hold down the **Start/Cancel Button** for 5 seconds. The hour digits will flash on the **Control Panel** to notify you that it's time to set your clock. First, set your hours. Turn the **Brew Selector Dial** clockwise to increase hours or counterclockwise to decrease hours. Once you reach your desired hour, press the **Start/Cancel Button**.

Then, minute digits will flash on the **Control Panel**. To set your minutes, turn the **Brew Selector Dial** clockwise to increase minutes or counterclockwise to decrease minutes. Once you reach your desired minutes, press the **Start/Cancel Button**. The unit will then allow you to begin making your brew selections.

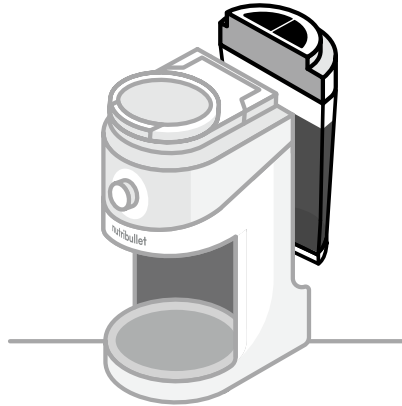


- 3 Fill your Water Reservoir.** Detach the **Water Reservoir** from the **Unit Base** and add fresh water to the MAX fill line.

## Initial cleaning cycle.

Before indulging in your morning brew, be sure to run an initial cleaning cycle through your Brew Choice™ Pod + Carafe.

**NOTE:** This initial cleansing brew cycle may take a few minutes longer than an average brew cycle, as the unit is just heating up for the first time.

### POD BREWING:

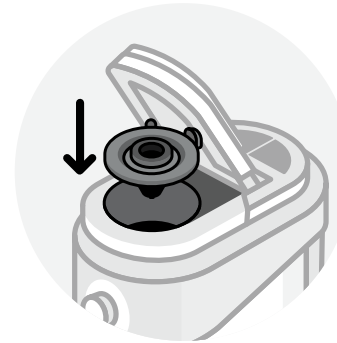

- 1 Insert your Pod Holder into the Pod + Carafe Brew Area.** Shut the **Top Ring Handle** until the lid is tightly fastened. **Do not insert a \*K-Cup® pod.**



- 2 Place the Removable Mug Platform** on top of the heat plate, just below the coffee spout. Then, place a cup on the **Removable Mug Platform**.



- 3 On the left side of the Control Panel, select 10oz, then click the Start/Cancel Button to begin your cleansing brew cycle.**


**NOTE:** The Brew Choice™ will beep to let you know the cleaning cycle has started. During the brew cycle, your selected size will fade in and out continuously until the brew cycle is complete.






- 4** The unit will beep once the cycle is complete. Carefully remove your cup from the **Removable Mug Platform** and pour the hot water into the sink.

#### CARAFE BREWING:

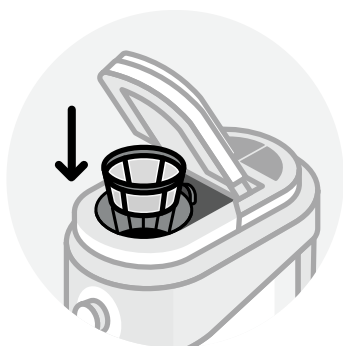

- 1** Insert the Brew Basket into the Pod + Carafe Brew Area. Then, add your Gold Tone Filter to the Brew Basket. Shut the **Top Ring Handle** until the lid is tightly fastened. **Do not insert coffee grounds into the filter.**

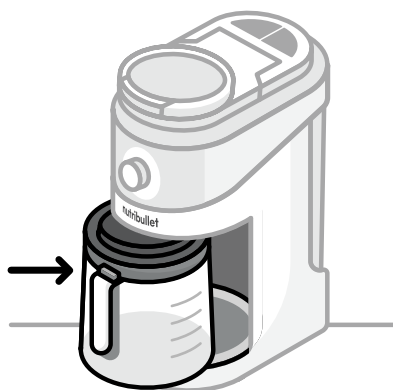


- 2** Place your Carafe on the heat plate on the Unit Base so that it is beneath the coffee spout.



- 3** On the right side of the Control Panel, select 12 cups, then click the **Start/Cancel Button** to begin your cleansing brew cycle.

**NOTE:** The Brew Choice™ will beep to let you know the cleaning cycle has started. During the brew cycle, your selected size will fade in and out continuously until the brew cycle is complete.

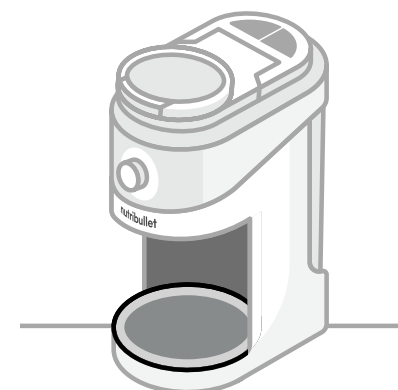


- 4** The unit will beep once the cycle is complete. Carefully remove your **Carafe** from the heat plate and pour the hot water into the sink.

# Pod brewing. Compatible with \*K-Cup® pods.\*\*


Pop in a \*K-Cup® pod or fill the Reusable Pod with coffee grounds, choose your cup size, and hit the ground running for optimum convenience.

**Accessories needed:** Pod Holder, \*K-Cup® pod, Reusable Pod, and Removable Mug Platform.

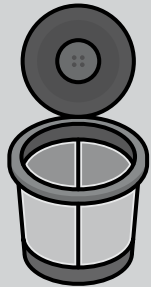

## USING YOUR REUSABLE POD\*\*\*

Your NutriBullet® Brew Choice™ Pod + Carafe comes with a **Reusable Pod** that allows you to brew your favorite coffee grounds into a 6, 8, or 10-oz cup yield. Simply scoop your coffee grounds into your **Reusable Pod**, close the pod lid to secure, then follow **Pod Brewing steps 1-9**. Be sure not to overfill with grounds.

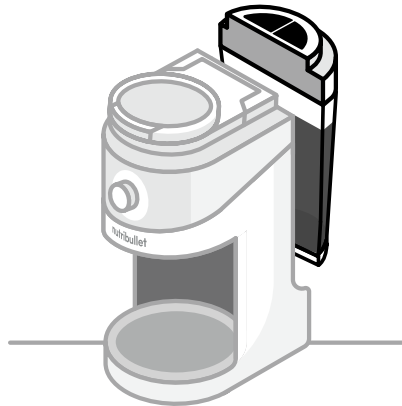

- 1 Fill the Water Reservoir.** Before brewing, ensure there's enough water in the **Water Reservoir**. To add water, detach it from the **Unit Base** by positioning your fingers under the top lip and pulling upwards.

At your sink, fill the **Water Reservoir** to the MAX fill line. Then reattach it to the **Unit Base**, ensuring the lid and **Water Reservoir** base are secured tightly.


 **WARNING:** Be careful not to overfill the **Water Reservoir**.




- 2 If you're brewing into a cup, place the Removable Mug Platform** on top of the heat plate, just below the coffee spout. Then, place a cup on the **Removable Mug Platform**.



**If you're brewing into a travel mug, you won't need the Removable Mug Platform.** Instead, place your travel mug directly on top of the heat plate, just below the coffee spout.

 **WARNING:** When brewing into a smaller cup or mug, always use the **Removable Mug Platform** to raise it closer to the coffee spout. Do not place your cup or mug directly on top of the heat plate to avoid splashing.

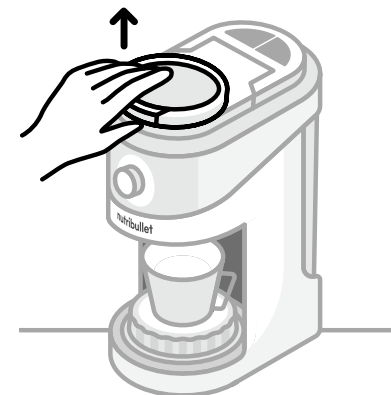


- 3 Access the Pod + Carafe Brew Area.** Place your hands on the **Top Ring Handle** and pull up until the lid is fully open.


\*Keurig® and K-Cup® are registered trademarks of Keurig Green Mountain, Inc.

\*\*The NutriBullet® Brew Choice™ Pod + Carafe is compatible with all generic, universal K-Cup® pods (for use with versions 1.0 and 2.0). Do not use anything other than a Keurig® K-Cup pod in this appliance. Do not remove foil lid. The use of non-K-Cup® pods or accessories may cause brewer malfunction or injury.

\*\*\*Fits ~10g of coffee grounds, depending on the brand and coarseness of the grounds.

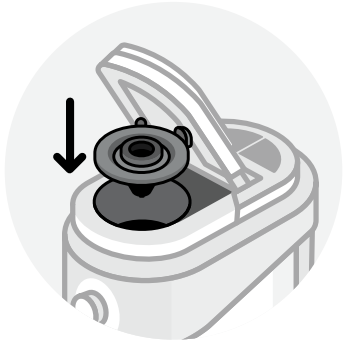

**4** Insert the Pod Holder into the Pod + Carafe Brew Area.

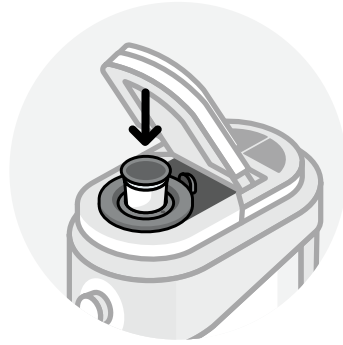

**5** Insert a \*K-Cup® pod or your Reusable Pod filled with coffee grounds into the Pod Holder. Make sure your pod is secured.




**8** Push the Start/Cancel Button to begin brewing.

**NOTE:** The Brew Choice™ will beep to let you know the brew cycle has started. During the brew cycle, your selected size will fade in and out continuously until your coffee is ready. To cancel brewing at any time, push the Start/Cancel Button again. The Brew Choice™ will beep to let you know that brewing has been cancelled.



**9** Your Brew Choice™ will beep when the brew cycle is complete. Remove your mug and enjoy!

**NOTE:** Remember to dispose of any used pods left in the Pod + Carafe Brew Area. Be sure to clean the Brew Choice™ Pod + Carafe, the Removable Mug Platform, and its accessories after each brew cycle.

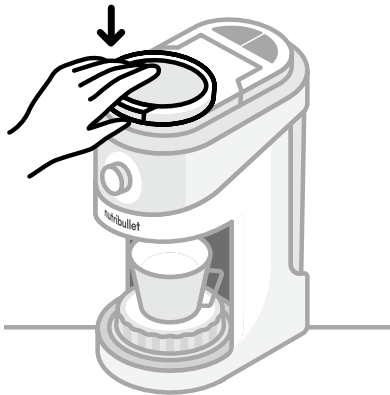

**6** Close the Pod + Carafe Brew Area. Pull the Top Ring Handle down to close. Once secured, it will click. The brew cycle will not begin unless this lid is fully closed.

**NOTE:** The left side of the control panel ("Pod") will illuminate and display the 3 pod cup sizes – 6, 8 or 10oz.




**7** Select brew size. Use the Brew Selector Dial to scroll through the cup size options.

# Carafe brewing.

Brew a pot of your favorite ground blend using a filter for a classic coffee experience.

**Accessories needed:** Brew Basket, Gold Tone Filter, and Coffee Ground Scoop.

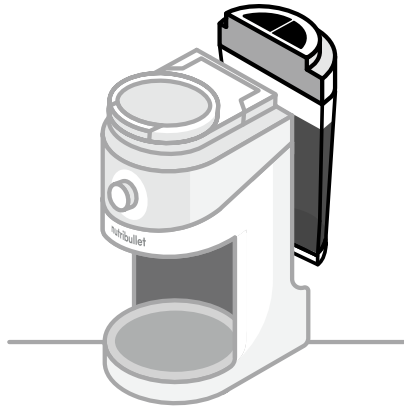


- 1 Fill the Water Reservoir.** Before brewing, ensure there's enough water in the **Water Reservoir**. To add water, detach it from the **Unit Base** by positioning your fingers under the top lip and pulling upwards.

At your sink, fill the **Water Reservoir** to the MAX fill line. Then reattach it to the **Unit Base**, ensuring the lid and **Water Reservoir** base are secured tightly.

**! WARNING:** Be careful not to overfill the **Water Reservoir**.



- 2 Place the Carafe on top of the Unit Base, resting on the heat plate.**

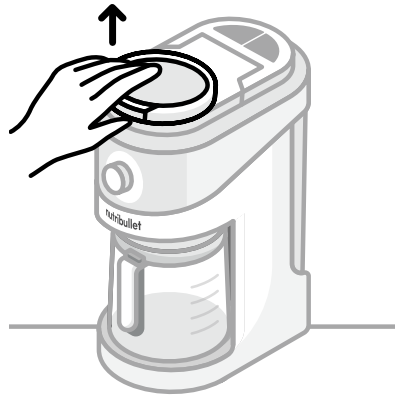


- 3 Access the Pod + Carafe Brew Area.** Place your hands on the **Top Ring Handle** and pull up until the lid is fully open.



- 4 Insert the Brew Basket into the Pod + Carafe Brew Area. Then add your Gold Tone Filter to the Brew Basket.** Use the **Coffee Ground Scoop** to measure the appropriate amount of coffee grounds into your filter.

**NOTE:** Reference page 25 for more information on how to properly measure the amount of grounds for the carafe size you're brewing.

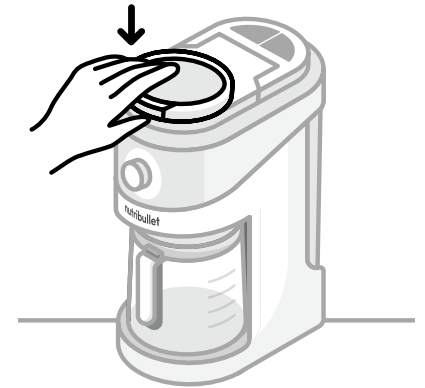


- 5 Close the Pod + Carafe Brew Area.** Pull the **Top Ring Handle** down to close. Once secured, it will click. The brew cycle will not begin unless this lid is fully closed.

**NOTE:** The right side of the control panel ("Carafe") will illuminate and display the 3 carafe sizes – 6, 9 or 12 cups.

# Additional information.



- 6 Select brew size.** Use the **Brew Selector Dial** to scroll through the carafe size options.

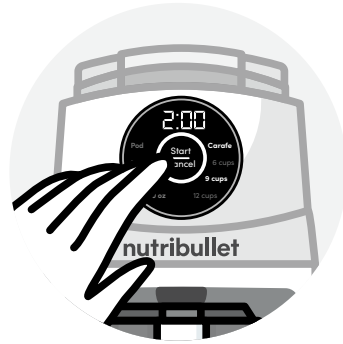

- 7 Push the Start/Cancel Button to begin brewing.**

**NOTE:** The Brew Choice™ will beep to let you know the brew cycle has started. During the brew cycle, your selected size will fade in and out continuously until your coffee is ready. To cancel brewing at any time, push the **Start/Cancel Button** again. The Brew Choice™ will beep to let you know that brewing has been cancelled.



- 8 Your Brew Choice™ will beep when the brew cycle is complete.** Remove your **Carafe**, grab your mug, and enjoy!

**NOTE:** Remember to dispose of any used coffee grounds left in the **Pod + Carafe Brew Area**. Be sure to clean the **Brew Choice™ Pod + Carafe** and its accessories after each brew cycle.

**! WARNING:** When carafe brewing is complete, the **Heat Plate** will remain on for two hours to keep your coffee hot. Use caution when touching or moving the **Brew Choice™** during this time.



**CAUTION:** During pod brewing, the **Removable Mug Platform** sits right on top of the heat plate. Due to residual heat during the brewing process, this platform may become warm. Use caution when coming in contact with the **Removable Mug Platform**.

## COFFEE STRENGTH

For carafe brewing, use the **Coffee Ground Scoop** to properly measure the amount of grounds to place in your **Gold Tone Filter** and **Brew Basket**.



- 6 cups: 3 scoops
- 9 cups: 4.5 scoops
- 12 cups: 6 scoops

**Note:** The **Coffee Ground Scoop** is equivalent to ~1.2 Tbsp.

## AFTER BREWING

Once your brew cycle is complete, remember to dispose of any used **K-Cups®** or coffee grounds left in the **Pod + Carafe Brew Area**. Be sure to clean the **Brew Choice Pod + Carafe** and its accessories after each brew cycle.

**NOTE:** The **Brew Choice™** will not allow you to begin a new brew cycle until

you've opened the **Brew Area**, removed used **K-Cups(s)®** or coffee grounds, and re-closed the **Brew Area**. If the user tries to start a brew cycle without this action, the **Control Panel** will appear as follows:

- All sizes extinguished.
- Clock time is extinguished.
- Dial is inactive.

If the user tries to turn the dial or hit the **Start/Cancel Button** before opening the **Pod + Carafe Brew Area**, "Pod" and "Carafe" will flash three times. This will persist until the user opened the **Top Ring Lid**.

## SLEEP MODE

The unit enters sleep mode if it is not brewing and has been inactive for 5 minutes (or 1 hour if the heat plate is cooling down).

All sizes are extinguished, the **Brew Selector Dial** is inactive, and the **Control Panel** continues to display time.

## TO EXIT SLEEP MODE:

A user action (such as pressing **Start/Cancel Button**, turning the **Brew Selector Dial**, opening/closing lid) "wakes" the unit.

The unit then returns to a "Ready to Brew" state.

## TURN POWER OFF WHEN NOT IN USE

Always turn the master power off and unplug the unit when the machine is not in use.

# Tips & tricks.

- Brew a stronger, more concentrated cup of coffee by selecting a smaller pod size, like 6 or 8oz.
- Always fill your Water Reservoir with fresh filtered water. The better the quality of your water, the better tasting your coffee will be.
- Recycle or compost your used \*K-Cup® pods. If you purchase biodegradable pods, the entire pod can be added to a composter. Used coffee grounds can be added to soil to enrich garden beds.

# Troubleshooting.

**PROBLEM:** Unit won't brew once size is selected and Start/Cancel Button is pushed.

**SOLUTION 1:** If the Water Reservoir becomes empty during the brew cycle, the Brew Choice™ Pod + Carafe will:

- Beep 3 times.
- Flash your last selected brew size on the Control Panel.
- Display "H2O" on the Control Panel and flash in sync with the selected size.
- Extinguish all brew sizes.

Add water to the Water Reservoir up to the MAX fill line.

**NOTE:** The Brew Choice™ may run out of water mid-cycle.



**WARNING:** To avoid the risk of injury, do not fill your Water Reservoir mid-cycle. If you add water, press the **Start/Cancel Button** to cancel the brew cycle, then re-fill your Water Reservoir.

**SOLUTION 2:** If the top lid of the Pod + Carafe Brew Area is open or not fully shut when making brew selections, the unit will not begin brewing. Before starting a brew cycle, make sure the top of the unit is fully shut. Keep lid closed tightly during the brewing process.

**PROBLEM:** Brewing is interrupted and cancels.

**SOLUTION 1:** If the user presses the Start/Cancel Button during a brew cycle, the unit will beep once, stop its current action, and return to a "Ready to Brew" state. If this occurs, dispose of the \*K-Cup® pod or ground coffee that was in the Brew Area and begin brew process again, adding desired \*K-Cup® pod or ground coffee to the Brew Area and making brew size selections.

**SOLUTION 2:** If the top lid of the Brew Area is opened during the brew cycle, brewing will cancel. All sizes will become extinguished on the Control Panel and the Brew Selector Dial will become inactive. Pod and/or Carafe will stay illuminated and the coffee maker will continue to display time. Make sure the top of the Brew Area is fully shut and tightly sealed during brew cycles.

**PROBLEM:** Coffee tastes bad.

**SOLUTION 1:** Too little ground coffee may have been added to the Gold Tone Filter. Use the Coffee Ground Scoop to adjust the amount of grounds you've added based on your preferred coffee taste and strength.

**SOLUTION 2:** Poor water quality used in Water Reservoir. Use filtered or bottled water for the best taste.


**SOLUTION 3:** The unit needs cleaning. See Care and Maintenance on page 28.

# Care & maintenance.

Cleaning the Brew Choice™ Pod + Carafe is quick and easy. Most accessories and removable components are dishwasher-safe, while the Unit Base should be handwashed with a damp cloth. Be sure to clean the Brew Choice™ Pod + Carafe and all accessories after every use.

## CLEANING THE BREW CHOICE™ POD + CARAFE

- 1 Unplug the unit from the outlet and allow to cool completely before cleaning (about 2 hours after use).
- 2 To clean the Unit Base, Water Reservoir, and Control Panel, wipe with a damp cloth or sponge. Avoid scrubbing with harsh or abrasive cleaners to protect the exterior.

 **CAUTION:** The Unit Base should only be cleaned with a damp cloth or sponge. Never place the Unit Base in the dishwasher or submerge in water or any other liquid.

## How to store.

Before storing or moving the unit, make sure to first turn it off, unplug it, and empty the Water Reservoir.

Make sure to store your device in a safe, dry, and frost-free environment.

## Replacement parts.

To order additional parts and accessories, please visit our website at [nutribullet.com/shop/accessories](https://nutribullet.com/shop/accessories) or feel free to contact Customer Service: **1 (800) 523-5993**.

## CLEANING THE PARTS AND ACCESSORIES

- 1 The following accessories and removable components (parts not permanently attached to the Unit Base) are dishwasher-safe:

- Glass Carafe
- Carafe Lid
- Brew Basket
- Gold Tone Filter
- Coffee Ground Scoop
- Reusable Pod
- Removable Mug Platform

**NOTE:** The lid detaches from the platform base to easily clean out excess coffee that has accumulated inside the platform.

Store unit upright to avoid potential water leakage.

**CAUTION:** Make sure unit is off and heat plate is cooled to room temperature before storing.

# NutriBullet® Brew Choice™ Pod + Carafe one-year limited warranty.

## LIMITED WARRANTY FOR NUTRIBULLET®

**NutriBullet's limited warranty obligations are confined to the terms set forth below:**

NutriBullet, LLC ("NutriBullet") warrants this NutriBullet® against defects in materials and workmanship for a period of one year from the date of original retail purchase. This limited warranty is valid only in the country in which the product is purchased and comes with the product at no extra charge, however shipping and processing fees will be incurred for returns, replacements and or refunds.

If a defect exists, and NutriBullet® is obligated under this limited warranty, at its option NutriBullet® will (1) repair the product at no charge, using new or refurbished replacement parts, (2) exchange the product with a product that is new or that has been manufactured from new or serviceable used parts and is at least functionally equivalent to the original product, or (3) refund the purchase price of

the product. A replacement product assumes the remaining warranty of the original product. A repaired product has a one-year warranty from the date of repair. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes NutriBullet's property. When a refund is given, your product becomes NutriBullet's property.

## OBTAINING WARRANTY SERVICE

For limited warranty service, simply call our customer service department at 1 (800) 523-5993 or contact us via email from our website at [nutribullet.com](https://nutribullet.com); click the Contact Us link, fill out and submit the customer contact form, and we will be glad to help you. When you contact our customer service department, you will be asked to provide your name, address, telephone number, and proof of the original purchase (receipt) containing a description of the product(s), purchase date, and the appropriate NutriBullet® serial number(s). Before sending your product for limited warranty service, please make sure to



keep a copy of all relevant documents for your files (receipt, etc.). It is always recommended to purchase product insurance and tracking services when sending your product for service. Remember, shipping and processing fees will be incurred and are not covered by the one-year limited warranty.

#### **EXCLUSIONS & LIMITATIONS**

This NutriBullet® One-Year Limited Warranty applies only to NutriBullet® products distributed by or for NutriBullet that can be identified by the “NutriBullet” trademark, trade name, logo, and bar code. This NutriBullet® Immersion Blender One-Year Limited Warranty does not apply to any other products that may appear to be authentic, but were not distributed/sold by NutriBullet.

Normal wear and tear is not covered by this limited warranty.

This limited warranty applies to consumer use only, and is void when the product is used in a commercial or institutional setting.

This limited warranty extends only to the original consumer purchaser and is not transferable. In addition, proof of purchase must be demonstrated.

Repair or replacement of the product (or, if repair or replacement is not feasible, a refund of the purchase price) is the exclusive remedy of the consumer under this limited warranty. NutriBullet shall not be liable for any incidental or consequential damages for breach of this limited warranty or any implied warranty on this product.

This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state. NutriBullet is not liable for any damage to products not covered by this warranty (e.g., cups, book, User Guide).

This limited warranty does not apply: (a) to damage caused by accident, abuse, misuse, or misapplication; (b) to damage caused by improper maintenance (including

unauthorized parts service); (c) to a product or a part that has been modified in any way; (d) if any NutriBullet® serial number or trademark has been removed or defaced; and/or (e) if the product has been used with an adapter/converter.

**THIS LIMITED WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. NUTRIBULLET SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IF NUTRIBULLET CANNOT LAWFULLY DISCLAIM IMPLIED WARRANTIES UNDER THIS LIMITED WARRANTY, ALL SUCH WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO THE DURATION OF THIS LIMITED WARRANTY.**

No NutriBullet® reseller, agent, or employee is authorized to make any modification to this warranty.

**NUTRIBULLET IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DOWNTIME, GOODWILL, DAMAGE TO OR REPLACEMENT OF EQUIPMENT AND PROPERTY. NUTRIBULLET SPECIFICALLY DOES NOT REPRESENT THAT IT WILL BE ABLE TO REPAIR ANY PRODUCT UNDER THIS LIMITED WARRANTY.**

Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages or exclusions or limitations on the duration of implied warranties or conditions, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary by state or province.

# Warranty registration.

Please visit [nutribullet.com/warranty-registration](http://nutribullet.com/warranty-registration) or call **1 (800) 523-5993** to register your new NutriBullet® Brew Choice™ Pod + Carafe. You will be asked to enter the **Serial Number\*** of your product, along with the purchase date and place of purchase.

The registration will enable us to contact you in the unlikely event of a product safety notification. By registering your product, you acknowledge you have read the instructions and understood the warnings as set forth in the accompanying instructions.



**To find the serial number, check the warranty card that came with the Brew Choice™ Pod + Carafe. If you cannot find the serial number, call customer service for assistance.**



**Capital Brands Distribution, LLC | [nutribullet.com](https://nutribullet.com) | All rights reserved.**

NutriBullet® and the NutriBullet logo are trademarks of CapBran Holdings, LLC registered in the U.S.A. and worldwide.

Illustrations may differ from the actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

**210625\_NBC50200**