

nutribullet®

SMART TOUCH
BLENDER™ COMBO



User guide.

Important safeguards.

Warning! To avoid the risk of serious injury, carefully read all instructions before operating your NutriBullet®. When using any electrical appliance, basic safety precautions should always be observed, including the following **important information.**

! Save these instructions! • FOR HOUSEHOLD USE ONLY

GENERAL SAFETY INFORMATION

- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
- Do not use outdoors.
- **NEVER LEAVE THE NUTRIBULLET® UNATTENDED WHILE IT IS IN USE.**
- **ALWAYS UNPLUG THE NUTRIBULLET® WHEN NOT IN USE.**

HEAT & PRESSURE SAFETY

- Always use extreme care and attention when blending hot liquids or hot ingredients. The release of thermal energy from the ingredients and friction from the rotating blades (during the blending process) can further heat and pressurize the mixture. Only operate with vented lid securely attached.
- Allow to cool before assembling or disassembling parts and before cleaning the appliance.

BLENDING WITH NUTRIBULLET® CUPS:

To avoid personal injury, never blend hot or carbonated ingredients or liquid in any sealed NutriBullet® cup! Only use the Pitcher with the vented lid when blending hot or warm ingredients.

WARNING! Heated ingredients can pressurize sealed containers when agitated and cause cup and blade separation or violently expel hot contents upon opening. Always start the blending process with room temperature or refrigerated ingredients and liquids (21°C/70°F or cooler).

When using the sealed cup, only blend for one minute or less. Friction from prolonged operation can heat ingredients and generate internal pressure in the sealed container. This pressure can cause the cup and blade to separate or blended contents to erupt from the container, resulting in possible personal injury and/or property damage. If the sealed NutriBullet® cups are warm to the touch, power off your machine leaving the cup attached to the base and allow the vessel to cool for fifteen minutes or more. Allow contents to settle before slowly releasing the cup from the motor base. With the NutriBullet® cup, pointed away from your face and body, slowly unscrew the easy-twist extractor blade to gently release any residual pressure.

If you need to blend for longer than one minute, blend for 1-minute intervals. After each 1-minute interval,

WARNING! allow the motor base to shut off completely and wait at least one minute before starting the next cycle. Do not run for more than 3 consecutive 1-minute intervals to prevent the contents from overheating. Allow contents to settle for 2–3 minutes after the third blending cycle to prevent overheating and build-up of pressure.

Sugar in fruits and vegetables can ferment over time, releasing gases that cause pressure to build up in a sealed NutriBullet® cup. **Do not store any smoothies or blended mixtures in vessels sealed with the easy-twist extractor blade.** If you will not consume your smoothie immediately, remove the easy-twist extractor blade and cover your NutriBullet® cup with plastic wrap before refrigerating. If your smoothie or blended mixture was made in the pitcher, transfer to another storage container before refrigerating. Never store any blended mixture in a sealed cup unrefrigerated, or for any prolonged period of time; contents will spoil and ferment, producing gases that might cause eruption.

Never blend carbonated liquids or effervescing ingredients (e.g., baking soda, baking powder, yeast, etc.). Pressure from released gases can cause a sealed

blending container to burst, resulting in possible injury and/or property damage.


BLENDING WITH THE PITCHER:

Use extra caution when blending hot liquids or ingredients in the pitcher.

Never turn the power on while using the pitcher without the vented lid cap inserted and locked into the pitcher lid, as ingredients can splash, and if hot or warm, could potentially cause thermal injury and/or property damage.

WARNING! Steam and splattering ingredients can escape through the pitcher lid, potentially scalding and/or burning the user. **NEVER blend hot liquids or ingredients in your pitcher without the pitcher lid and vented lid cap locked and attached.** The vented lid cap allows steam and pressure to escape, while guarding against excess splashing. **NEVER blend hot or carbonated ingredients or liquids in your NutriBullet® cups or any other sealed vessel.**

When blending hot liquids, add liquid and solid

WARNING! ingredients to your pitcher below their respective MAX lines. Attach the pitcher lid with the vented lid cap inserted and locked. Press **POWER**  and begin blending by selecting the desired program or if you are using manual speeds, start blending on the **LOW** setting. Once ingredients are integrated, adjust speed as needed.

When using the pitcher with vented lid to blend hot liquids or ingredients longer than one minute, always use caution when opening the pitcher lid.

BLADE SAFETY

Never store any easy-twist extractor blade in the motor base unattached to a NutriBullet® cup. An exposed blade can present a laceration hazard.

WARNING! Blades are sharp! Handle carefully. Use care when handling any blade. To avoid laceration injury, do not handle or touch any blade edge.

AVOID CONTACT WITH MOVING PARTS! Keep hands and utensils out of and away from blades while blending food to reduce the risk of severe personal injury.

- **TO REDUCE THE RISK OF PERSONAL INJURY OR PROPERTY DAMAGE,** never place the easy-twist extractor blade on the motor base without the cup properly attached. Make sure the easy-twist extractor blade is securely twisted (hand-tightened) onto the NutriBullet® cup before placing it on the motor base and operating the NutriBullet® Smart Touch Blender™ Combo. Check to make sure the easy-twist extractor blade is aligned properly before placing it on the motor base and operating your NutriBullet® Smart Touch Blender Combo™.
- After blending, turn the power button off. Wait to remove the NutriBullet® cup/easy-twist extractor blade assembly or the pitcher from the motor base until the blades come to a full stop and the unit powers down completely. Taking the blending vessel off the unit prior to complete power down can cause damage to the easy-twist extractor blade coupling or motor gear.

Never use the NutriBullet® Smart Touch Blender™ Combo without adding liquid, as doing so may damage the blades.

- The cyclonic action® of your NutriBullet Smart Touch Blender™ Combo requires the use of liquids to make smoothies and other nutritious items. The NutriBullet® Smart Touch Blender™ Combo is not intended to be used without liquids, or as an ice crusher. **ALWAYS ADD LIQUID to your recipe.**
- **DO NOT USE** the easy-twist extractor blade for grinding dry ingredients such as grains, cereal, or coffee, as this may damage the motor and/or the easy-twist extractor blade.
- We recommend replacing your easy-twist extractor blade every 6 months (depending on use) or as needed for optimal performance as the blade dulls with use.

PITCHER SAFETY

- Always operate the pitcher with the pitcher lid securely in place. Pitcher lid must be locked onto the pitcher in order to operate the unit.
- With recipes that require certain ingredients to be incorporated during blending, first add the base ingredients, seal the pitcher lid with vented lid cap attached, and begin blending. Then, once the ingredients are well mixed,

twist open the vented lid cap and carefully pour or drop ingredients into the mixture. If your blended mixture is hot or warm, use caution when opening the vented lid cap. Open the vented lid cap slowly.

- Keep hands and utensils, other than the tamper provided, out of container while blending to reduce the risk of severe injury to persons or damage to the blender. The cover must remain in place when using the tamper through the cover opening. A scraper may be used but must be used only when the blender is not running.
- If you need to push ingredients closer to the blade, **ONLY USE THE TAMPER PROVIDED** with the NutriBullet® Smart Touch Blender™ Combo. **DO NOT** use any apparatus other than the tamper to push ingredients toward the blade. The tamper is specifically designed not to come in contact with the blade. Spatulas, spoons and other tools can make contact with the blade, which may result in damage to the machine, shattering of the vessel, damage to property, and/or possible injury.
- **NEVER USE YOUR FINGERS OR ANY PART OF YOUR HAND TO PUSH INGREDIENTS DOWN TOWARD THE BLADE.** Only use the provided tamper.

ELECTRICAL SAFETY

WARNING! Do not use this product in locations with different electrical specifications or plug types. Do not operate with any type of plug adapter or voltage converter device, as these may cause electrical shorting, fire, electric shock, personal injury, or product damage.

- The use of attachments, including canning jars, is not recommended and may cause fire, electric shock, personal injury, or product damage and will void the product's warranty.
- To avoid the risk of electric shock, never immerse the cord, plug, or motor base of the NutriBullet® Smart Touch Blender™ Combo in water or other liquids. Discontinue use if the cord, plug, or motor base is damaged.
- Always **POWER OFF** and **UNPLUG** the NutriBullet® Smart Touch Blender™ Combo when it is not in use or **BEFORE** assembling, disassembling, changing accessories, or cleaning. Do not attempt to handle the NutriBullet® Smart Touch Blender™ Combo until all parts have stopped moving.
- To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.

- The Smart Touch Blender™ Combo is ready to operate when unit is plugged in and power icon is illuminated. Avoid inadvertent contact with the touch screen display.
- Do not allow the cord to hang over the edge of the table or counter. Do not pull, twist, or damage the power cord. Do not allow the cord to touch hot surfaces, including the stove.
- If the motor stops working, unplug the motor base and let it cool for at least 15 minutes before attempting to use it again. Your NutriBullet® has an internal thermal breaker that shuts off the motor when it overheats. The thermal breaker will reset when the unit is unplugged, and the thermal breaker cools down sufficiently.
- This appliance has important markings on the plug. The attachment plug or entire cord set is not suitable for replacement. If damaged, the appliance will be replaced.

STOVE-TOP HEATING SAFETY

Do not blend hot ingredients in any sealed NutriBullet® cup!

WARNING! To heat items that have been blended at room temperature or cooler (21°C/70°F or less), transfer mixture to a stove

WARNING! top pot to heat. Always use a thermometer to test the internal temperature of cooked ingredients; they may feel cool to the touch, yet still be hot inside.

The NutriBullet® Smart Touch Blender™ Combo is not intended for use on the stove top. Do not place the motor base or any NutriBullet® accessory on the stove or microwave or immerse in boiling water. This may result in damage to the accessory.

- Do not place any of the NutriBullet® Smart Touch Blender™ Combo parts in a microwave, oven, or in a stove top pot, or immerse in boiling water, as this may result in damage to the part.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

VENTILATION WARNINGS

WARNING! To prevent a fire hazard, power base openings (underneath the motor base) should be free of dust and lint and never obstructed with flammable materials such as newspapers, tablecloths, napkins, dish towels, place mats or other similar type materials.

- **CAUTION!** Always operate the NutriBullet® Smart Touch Blender™ Combo on a level surface, leaving unobstructed

space beneath and around the motor base to permit proper air circulation. Vents on the bottom of the product are provided for ventilation to ensure reliable motor operation and to prevent overheating.

MEDICAL SAFETY

- The information contained in this User Guide or Recipe Guide is not meant to replace the advice of your physician. Always consult your physician regarding health and nutrition concerns.

MEDICATION INTERACTIONS:

- If you are taking any medication, especially cholesterol-lowering medication, blood thinners, blood pressure drugs, tranquilizers, or antidepressants, please check with your physician before trying any of the recipes contained in this guide or the recipe guide.
- Avoid blending the following seeds and pits in the NutriBullet® Smart Touch Blender™ Combo, as they contain a chemical known to release cyanide into the body when ingested: apple seeds, cherry pits, plum pits, peach pits, and apricot pits. Fruit pits may also cause damage to the pitcher.

ADDITIONAL INSTRUCTIONS FOR PROPER USAGE

- **TO AVOID LEAKAGE, DO NOT OVERFILL THE BLENDING VESSELS!** The pitcher is marked with two MAX lines: one for solid ingredients (higher line) and one for liquid ingredients (lower line). Your NutriBullet® cups are also marked with a MAX line. When filling the blending vessels, make sure your ingredients do not exceed their respective MAX lines. Exceeding the indicated MAX lines can result in leakage, and may lead to dangerous pressurization.
- Blending vessels and easy-twist extractor blades are specific to the exact model of NutriBullet® Smart Touch Blender™ Combo you possess. Use of incompatible parts (parts from other models) may result in damage to your NutriBullet® Smart Touch Blender™ Combo or create safety hazards. When ordering replacement parts (NutriBullet® cups, pitcher, easy-twist extractor blades) on **nutribullet.com** or via customer service, please specify the machine model to ensure you receive parts that are compatible with your unit.

- Always use genuine NutriBullet® replacement parts. After market parts are not made to NutriBullet's specifications and may damage your unit or cause serious injury.
- Periodically inspect all NutriBullet® Smart Touch Blender™ Combo components for damage or wear that may impair proper function or present an electrical hazard. Make sure that the power cord and plug are undamaged. Discontinue use and replace blending vessels if you detect cracking, cloudiness, or damage to the plastic. Ensure that the blades rotate freely and that the structure is undamaged. Make sure that the motor base is unobstructed and clean. Follow maintenance recommended in the User Guide and never operate your NutriBullet® with damaged components. If your NutriBullet® malfunctions in any way, immediately discontinue use and contact customer service at **1 (800) 523-5993**. You may purchase new NutriBullet® cups, pitchers, and easy-twist extractor blades at **nutribullet.com** or by contacting customer service.

! Save these instructions!

If you have any comments, questions, or concerns, please go to **nutribullet.com**. Or call customer service at:

1 (800) 523-5993.



Contents.

12	What's included
13	Assembly guide
14	Getting started
14	Safety guide
14	Pitcher assembly & use
18	NutriBullet® cup assembly & use
20	Blending control panel
20	Manual speeds
22	Intelligent programs
24	Care & maintenance
24	How to clean the NutriBullet®
26	How to store
26	Replacement parts
27	NutriBullet® Smart Touch Blender™ Combo one-year limited warranty
30	Warranty registration

Thank you for purchasing the NutriBullet® Smart Touch Blender™ Combo.

What's included.



**1 32-oz
cup**



**1 20-oz
travel cup**



2 to-go lids



**1 pitcher with
integrated blade**



**1 pitcher lid with
pour spout**



**1 easy-twist
extractor blade**

 


1 motor base



1 tamper

Assembly guide.

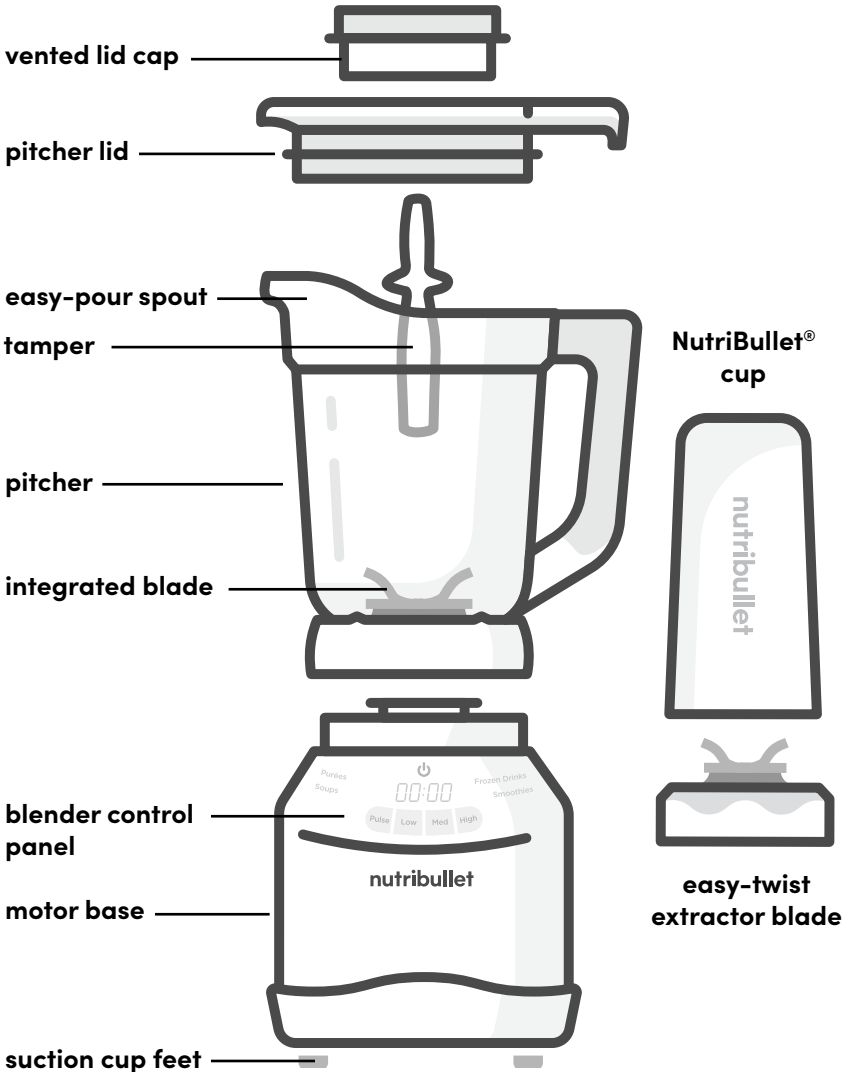

Getting started.

PLEASE KEEP THESE IMPORTANT SAFEGUARDS IN MIND WHEN USING THE APPLIANCE:

- Make sure the base is plugged in for use.
- Never run the appliance while empty.
- Appliance accessories are not intended to be used in the microwave as it may damage the accessories.
- **Never** leave the appliance unattended while in use.


Never blend hot or carbonated liquids or ingredients when using any sealed NutriBullet cups.

WARNING! Heated ingredients can pressurize sealed containers when agitated and violently expel hot contents upon opening. Always start the blending process with room temperature or refrigerated ingredients and liquids (21°C/70°F or cooler).



Use extra caution when blending hot liquids or ingredients in the pitcher.

WARNING! Steam and splatters can escape through the vented lid, potentially causing scalding and/or burns. **NEVER** blend hot liquids in your pitcher without the pitcher lid and vented lid cap attached. The vented lid cap is ventilated to allow steam and pressure to release, while guarding against excess splashing. **NEVER blend hot liquids in your NutriBullet cups or any other sealed vessel, only use the vented pitcher.**

When blending hot liquids in the vented pitcher, add liquid and solid ingredients to your pitcher below their respective MAX lines. Attach the pitcher lid with the vented lid cap inserted. Press **POWER** , then select desired program or begin blending on **LOW** setting. Once ingredients are integrated and the mixture is level (no splashing), increase speed as needed.

Always use care when opening the pitcher lid after blending hot ingredients making sure that excess pressure has been released.

Pitcher assembly & use.

Review all warning and caution statements in the Important Safeguards section (pg 2-9) and on the previous page before proceeding to Step 1.

1



Place the motor base on a clean, dry, level surface such as a counter or table.

 
2



Place the pitcher on a clean, dry, level surface. Add the ingredients to the pitcher, making sure they do not exceed the MAX line.

NOTE: The blending pitcher is marked with two MAX lines: one for solid ingredients (higher line) and one for liquids (lower line). When filling the blender, make sure your ingredients do not exceed their respective MAX lines.

4

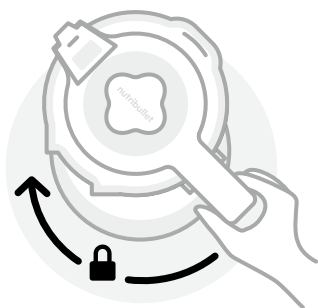

Place the pitcher (lid-side up) onto the motor base and twist clockwise to lock it into place. When you hear the click, it's locked and ready to blend.

NOTE: You may need to twist the pitcher slightly until you feel it settle into the grooves on top of the base.

3




Place the lid on top of the pitcher and press down firmly until locked in place. Place the lid cap over the lid opening, then press down and twist until locked in place.

NOTE: The motor will not run unless the lid is locked in place.

5



Plug the power cord into an electrical outlet and press **POWER**  to turn on the blender. Once the pitcher is fully locked and the unit is plugged in, the **Blending Control Panel** will illuminate and the unit will be ready to operate.

NOTE: If pitcher lid and pitcher are not fully secured onto the base, control panel will not illuminate.



6

To begin blending, select a manual speed or program on the **Blending Control Panel**. To pause blending, press the current speed or program once, the unit will stop running and the timer will pause. **To resume blending**, press a manual speed or the same program again.

NOTE: Go to the blending control panel section on pages 20-23 for speed and program definitions, images, and other information.

NOTE: If you need to add additional ingredients while blending, switch the setting to **LOW** and remove the lid cap from the pitcher lid, leaving the lid attached. Add ingredients through the hole in the top of the lid, followed by the tamper if necessary. Replace the lid cap, then increase to your desired speed. **DO NOT** attempt to add items through the vent hole when blending **HOT** ingredients.



CAUTION: Do not use any apparatus other than the tamper to push ingredients toward the blade. The tamper is specifically designed not to come in contact with the blade. Spatulas, spoons and other tools are long enough to reach the blade, which may result in damage to the machine, damage to property, and possible injury.



7

When you have reached your desired consistency, stop the appliance by pressing **POWER** ⏻. If you are using a program, you will hear a beep when the program has completed. Wait for the blades to stop turning. The unit will enter idle-mode. The timer will reset and the **Blending Control Panel** will remain illuminated. Press **POWER** ⏻ again to turn off the unit completely and the illuminated display will turn off.



8

Twist pitcher counterclockwise and lift off the motor base. Pour and enjoy!



WARNING: Blades are sharp. Never insert your hands into the pitcher.



NOTE: Press up with your thumb on the tab near handle first to loosen pitcher lid for easy removal!

NutriBullet® cup assembly & use.

 
Review all warning and caution statements in the Important Safeguards section (pg 3-9) and on the previous page before proceeding to Step 1.

1



Place the motor base on a clean, dry, level surface such as a counter or table.

2

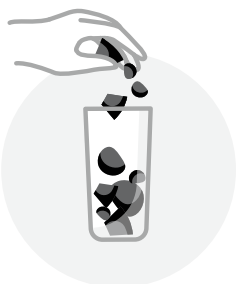


Add ingredients to the NutriBullet® cup.

NOTE: Do not overfill! To avoid leakage, do not add ingredients beyond the MAX line.



WARNING: NEVER BLEND HOT OR CARBONATED INGREDIENTS OR LIQUIDS IN THE SEALED VESSEL, as doing so may cause excessive pressure buildup, resulting in risk of personal injury and or property damage.

 3

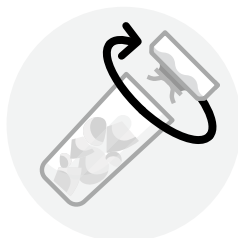



Twist the easy-twist extractor blade onto the cup until tightly sealed.



WARNING: Handle the easy-twist extractor blade assembly with care, as the blades are sharp. Never leave the appliance unattended while in use.

 4

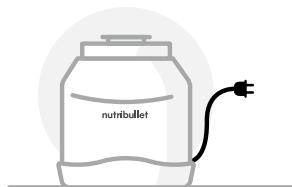

Plug the power cord into an electrical outlet and press **POWER**  to turn on the blender.

5



Turn the cup upside down and place it onto the motor base, gently turning the cup clockwise to lock into the motor base.

NOTE: The cup must be locked onto the base for the unit to operate.

6





To begin blending, select a manual speed or program on the **Blending Control Panel**. **To pause blending**, press the current speed or program once, the unit will stop running and the timer will pause. **To resume blending**, press a manual speed or the same program.

NOTE: Proceed to the blending control panel chart on page 20 for speed definitions.

7



When you have reached your desired consistency, stop the appliance by pressing **POWER** . The unit will enter idle-mode. The timer will reset and the **Blending Control Panel** will remain illuminated. Press **POWER**  again to turn off the unit completely.

NOTE: speeds will automatically shut off after 60 seconds.



CAUTION

Do not remove the easy-twist extractor blade from the NutriBullet® cup until blending has completely ceased. Do not use the easy-twist extractor blade as a storage lid for your cup. Some foods may contain active ingredients or release gases that will expand if left in a sealed container, resulting in excessive pressure buildup that can pose a risk of injury. When storing contents in the cup, use plastic wrap or foil to seal your container. Always point contents away from your body when unsealing.

 
8



Unlock the assembly by gently twisting the cup counterclockwise. You will hear a click. Enjoy!

NOTE: Blending should never take longer than one minute to yield smooth and creamy results.

Blending control panel: manual speeds.

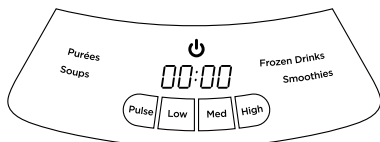


TURNING ON/OFF

The power button controls the master power of the appliance. If pitcher with pitcher lid or NutriBullet® cup is locked in place, pressing **POWER** will indicate the motor is powered on and illuminate the **Blending Control Panel**.



TIMER

 When using a blending speed: timer starts at zero (00:00) and increases during operation, showing time elapsed since blending began. **When using program presets:** timer counts down during operation until program is completed.

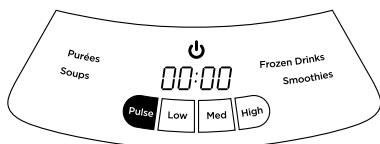


PULSE

Use to control chopping and processing.



 WARNING: DO NOT use this setting with hot ingredients as ingredients may splash.

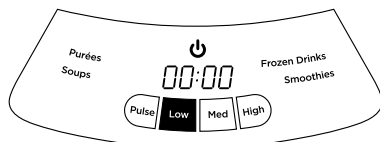


LOW SPEED

Use to mix thin batters, gravies and marinades. Or, to scramble eggs, process cooked foods and uncooked fruits.




WARNING!

 NEVER BLEND HOT LIQUIDS OR OTHER HOT INGREDIENTS IN ANY SEALED NUTRIBULLET® CUP. Doing so may cause excessive pressure buildup, resulting in risk of personal injury or property damage. Hot items should only be blended in the pitcher using proper safeguards.

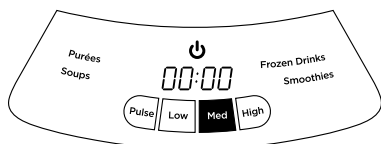

MEDIUM SPEED

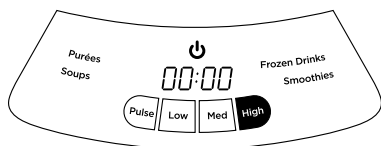 

Use to cream soups, blend sauces and spreads, or mix dips. Also great for grinding nuts, making mixed drinks, powdered drinks or milkshakes.



HIGH SPEED

Use to liquefy thick mixtures and extract frozen fruits and vegetables into smoothies.

TO SELECT A SPEED

 
Press the desired speed once to turn on. The selected speed will illuminate and the rest of the speeds will dim. To toggle to another blending speed, press the inactive, dimmed speed desired. To pause blending at any point, press the active speed, the motor will stop and the timer will pause counting. To resume blending, press a manual speed button again. To return to main blending control panel, press **POWER**  once. To fully power down after pausing, press **POWER**  twice and unplug the unit.

PULSE

Press and release the **PULSE** button to chop ingredients. If you hold the **PULSE** button down, it will continue to run until you release it. Do not hold and run the pulse continuously for more than one minute.


NOTE: If the unit stops running and power and timer display are flashing, your device may be overheated. Unplug your device and wait 15 minutes. Plug back in to reset.

Blending control panel: intelligent programs.

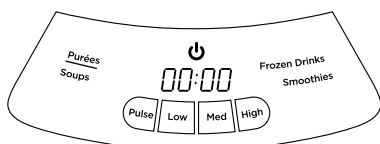

PURÉES

 
Delivers a perfectly smooth texture — ideal for dips, sauces and spreads of all kinds.

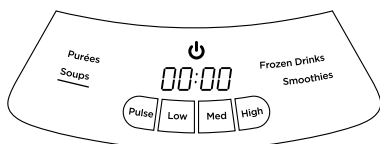

SOUPS


Blends sweet or savory ingredients into the silkiest of ready to heat soups and chilled gazpachos. **The Soups program is only available when using the pitcher.**

 NOTE: The **Soups program** does not heat the ingredients you are blending. Always be careful when opening the pitcher after blending hot or warm ingredients.

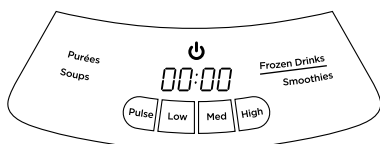

FROZEN DRINKS

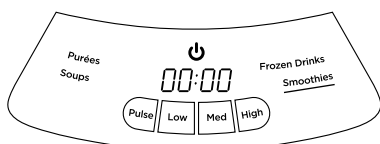 

Perfect for ice-blended mocktails or cocktails, and frappe style drinks.



SMOOTHIES

Easily turn fresh or frozen fruits and vegetables into sippable nutritious smoothies.

TO SELECT A PROGRAM

Press the desired program to turn on. The selected program will illuminate and the rest of the blending control panel will disappear. The program will start to run, and timer will countdown until the program is complete. When the program is complete, there will be an audible alert and main blending control panel will be illuminated. To pause a program before completion, press the active program. The motor will stop and the timer will pause counting. To resume the program, press the program button again. To return to main blending control panel, press **POWER**  once. To fully power down, press **POWER**  twice and unplug the unit.

Our intelligent programs are expertly designed to give you the perfect results every time. During each program, the unit may pulse, change speeds, and blend as needed until the program is complete.

NOTE: If the unit stops running and power and timer display are flashing, your device may be overheated. Unplug your device and wait 15 minutes. Plug back in to reset.

Care & maintenance.

Cleaning the NutriBullet® is easy. The pitcher is dishwasher-safe while the cups and to-go lids are **TOP RACK** dishwasher-safe. The easy-twist extractor blade and motor base can be quickly hand-washed with soap and water. Read on for best practices.

Here's how to clean the NutriBullet®:

STEP 1:

The most important thing — **ALWAYS POWER OFF THE UNIT** and **UNPLUG** the motor base from the power outlet when it is not in use. Do not attempt to handle the appliance until all parts have stopped moving! This includes during assembly and disassembly, while changing accessories during cleaning, and any time you leave the machine unattended.

STEP 2:

Detach the NutriBullet® cup / easy-twist extractor blade or pitcher from the motor base.

STEP 3:

Clean the individual components (motor base, easy-twist extractor blade, NutriBullet® cups) as recommended on the following pages.

MOTOR BASE:

- To avoid risk of injury, **NEVER** attempt to clean the actuator system on the motor base while the NutriBullet® Smart Touch Blender™ Combo is plugged in.
- Do not attempt to remove any pieces from the motor base.
- Use a sponge or dish cloth dampened with warm soapy water to wipe down the motor base until clean.
- If necessary, you may use a small brush to scrub the actuator system area to ensure it's clean.
- To clean leakage residue from the motor base, wipe with a damp sponge and warm water.
- If necessary, you may use a small brush to scrub the actuator system area to ensure it's clean.



WARNING: Never submerge the motor base in water.

EASY-TWIST EXTRACTOR BLADE:

- Blades are sharp! Handle the easy-twist extractor blade with care when cleaning! It is best to clean blades immediately after use to reduce buildup of residue. If food particles get stuck, use a small brush or sponge to target and dislodge them.
- **Do not remove any components of the easy-twist extractor blade;** this can result in permanent damage to the blade, resulting in leakage when blending. If, over time, the easy-twist extractor blade becomes loose or damaged, you may order a new easy-twist extractor blade at nutribullet.com or contact customer service.
- Dry the easy-twist extractor blade completely after every use.
- Regularly check the condition of the bottom of the blade for cracking or breakage. If damaged, replace easy-twist extractor blade immediately to prevent possible personal injury.

NUTRIBULLET® CUPS & TO-GO LIDS:

These items are **TOP RACK** dishwasher-safe. We recommend rinsing and briefly scrubbing them with a dish brush to remove any remaining debris before placing in the dishwasher. **NEVER** use the sanitize cycle to wash the cups — heat this high can warp the plastic.

NUTRIBULLET® PITCHER:



WARNING: Blades are sharp! Use caution when cleaning the pitcher.

- The pitcher is top-rack dishwasher-safe. We recommend rinsing and briefly scrubbing it with a dish brush to remove any remaining debris before placing in the dishwasher. **NEVER** use the sanitize cycle to wash the pitcher — heat this high can warp the plastic.
- If preferred, hand-wash the pitcher with soap and water. Stuck-on ingredients might require extra scrubbing from a dish brush or sponge. **The blades are sharp. Take care not to touch while hand-washing.**

- Regularly check the structure of the pitcher and twisting threads for cracking, crazing, or breakage. If damaged, replace immediately to prevent possible personal injury.

TAMPER

- Always hand-wash the tamper with soap and water. Stuck-on ingredients might require extra scrubbing from a dish brush or sponge.

How to store:

Store the NutriBullet® Smart Touch Blender™ Combo pitcher upright with the pitcher lid secured on top. Do not place anything on top of the pitcher lid. Store remaining pieces in a safe place where they will not be damaged and won't cause harm.



WARNING: NEVER store the easy-twist extractor blade on the motor base without a NutriBullet® cup or the pitcher as the exposed blades pose a serious laceration hazard.

Replacement parts.

To order additional parts and accessories, please visit our website at **nutribullet.com/shop/accessories** or feel free to contact customer service: **1 (800) 523-5993**.

NutriBullet® Smart Touch Blender™ Combo one-year limited warranty.

LIMITED WARRANTY FOR NUTRIBULLET®

NutriBullet's limited warranty obligations are confined to the terms set forth below:

NutriBullet, LLC ("NutriBullet") warrants this NutriBullet® against defects in materials and workmanship for a period of one year from the date of original retail purchase. This limited warranty is valid only in the country in which the product is purchased and comes with the product at no extra charge, however shipping and processing fees will be incurred for returns, replacements and or refunds.

If a defect exists, and NutriBullet® is obligated under this limited warranty, at its option NutriBullet® will (1) repair the product at no charge, using new or refurbished replacement parts, (2) exchange the product with a product that is new or that has been manufactured

from new or serviceable used parts and is at least functionally equivalent to the original product, or (3) refund the purchase price of the product. A replacement product assumes the remaining warranty of the original product. A repaired product has a one-year warranty from the date of repair. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes NutriBullet's property. When a refund is given, your product becomes NutriBullet's property.

OBTAINING WARRANTY SERVICE

For limited warranty service, simply call our customer service department at 1 (800) 523-5993 or contact us via email from our website at nutribullet.com, simply click the contact us link, fill out and submit the customer contact form and we will be glad to help you. When you contact our

customer service department you will be asked for your name, address, telephone number and to provide proof of the original purchase (receipt) containing a description of the product(s), purchase date, and the appropriate NutriBullet® serial number(s). Before you send your product for limited warranty service please make sure to keep a copy of all relevant documents for your files (receipt, etc.). It is always recommended to purchase product insurance and tracking services when sending your product for service. Remember, shipping and processing fees will be incurred and are not covered by the one-year limited warranty.

EXCLUSIONS & LIMITATIONS

This NutriBullet® One-Year Limited Warranty applies only to NutriBullet® products distributed by or for NutriBullet® that can be identified by the “NutriBullet” trademark, trade name, logo and bar code. NutriBullet® Blender Combo’s One-Year Limited Warranty does not apply to any other products that may appear to be authentic, but were not distributed/sold by NutriBullet, LLC.

Normal wear and tear is not covered by this limited warranty.

This limited warranty applies to consumer use only, and is void when the product is used in a commercial or institutional setting.

This limited warranty extends only to the original consumer purchaser and is not transferable. In addition, proof of purchase must be demonstrated.

Repair or replacement of the product (or, if repair or replacement is not feasible, a refund of the purchase price) is the exclusive remedy of the consumer under this limited warranty. NutriBullet, LLC shall not be liable for any incidental or consequential damages for breach of this limited warranty or any implied warranty on this product.

This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state. NutriBullet® is not liable for any damage to products not covered by this warranty (e.g., cups, book, User Guide).

This limited warranty does not apply: (a) to damage caused by accident, abuse, misuse, or misapplication; (b) to damage caused by improper maintenance (including unauthorized parts service);

(c) to a product or a part that has been modified in any way; (d) if any NutriBullet® serial number or trademark has been removed or defaced; and or (e) if the product has been used with an adapter/converter.

THIS LIMITED WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. NUTRIBULLET® SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IF NUTRIBULLET CANNOT LAWFULLY DISCLAIM IMPLIED WARRANTIES UNDER THIS LIMITED WARRANTY, ALL SUCH WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO THE DURATION OF THIS LIMITED WARRANTY.

No NutriBullet® reseller, agent, or employee is authorized to make any modification to this warranty.

NUTRIBULLET IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES

RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DOWNTIME, GOODWILL, DAMAGE TO OR REPLACEMENT OF EQUIPMENT AND PROPERTY. NUTRIBULLET® SPECIFICALLY DOES NOT REPRESENT THAT IT WILL BE ABLE TO REPAIR ANY PRODUCT UNDER THIS LIMITED WARRANTY.

Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages or exclusions or limitations on the duration of implied warranties or conditions, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary by state or province.

Warranty registration.

Please visit nutribullet.com/warranty-registration or call **1 (800) 523-5993** to register your new NutriBullet® Smart Touch Blender™ Combo. You will be asked to enter the **Serial Number*** of your product, along with the purchase date and place of purchase.

The registration will enable us to contact you in the unlikely event of product safety notification. By registering your product you acknowledge to have read and understood the instructions for use, and warnings set forth in the accompanying instructions.



**How to find serial number
under the motor base.**

1 (800) 523-5993 | nutribullet.com

NutriBullet, LLC | www.nutribullet.com | All rights reserved.

NutriBullet® and the NutriBullet logo are trademarks of CapBran Holdings, LLC registered in the U.S.A. and worldwide.

Illustrations may differ from the actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

201116_NBF50520