

nutribullet
JUICER™



Scan here to
access delicious
recipes for
the nutribullet
juicer™



User guide.

! **WARNING!** To reduce the risk of serious injury, read this User Guide before operating your nutribullet Juicer™. Save these instructions. Be sure anyone who uses the nutribullet® knows how to do so safely.

Important safeguards.

When operating your nutribullet Juicer™, remember: **SAFETY COMES FIRST.**

 **WARNING!** To avoid the risk of serious injury, carefully read all instructions before operating your nutribullet Juicer™. When using any electrical appliance, basic safety precautions should always be observed, including the following important information. **READ CAREFULLY AND THOROUGHLY BEFORE OPERATING.**

If you let anyone else use your nutribullet Juicer™, make sure that they understand the health and safety information in this User Guide, as well as any additional safety or usage instructions provided. Each person using a device should read the User Guide completely and become familiar with the safe operation of the unit.

! Save these instructions! ● FOR HOUSEHOLD USE ONLY

GENERAL SAFETY INFORMATION

- This juicer system has sharp blades and moving parts, and is **NOT** intended for use by children or persons with reduced physical, sensory, or mental capabilities, or who lack experience and knowledge of its safe operation. Such persons require close supervision and thorough instruction on its proper use and safe operation. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
- To protect against fire, electrical shock and injury to persons, do not immerse the juicer, Motor Base, cord or plug in water or any other liquid.
- Turn the juicer **OFF**, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning or moving the appliance. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- **AVOID CONTACT WITH MOVING PARTS. DO NOT ATTEMPT TO DEFEAT ANY SAFETY INTERLOCK MECHANISMS.**
- Regularly inspect the power cord, plug and the actual juicer for any damage.
- Do not operate this or any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact nutribullet® Customer Service for assistance at **1 (800) 523-5993**.
- The use of attachments not recommended or sold by nutribullet® may cause fire, electric shock or injury.
- This juicer is for household use only. Do not use this juicer for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. Misuse may cause injury.
- Do not let the power cord hang over the edge of a table or counter-top.
- Do not let the power cord touch hot surfaces, such as a stove or let it become tangled or knotted.
- Always make sure the Pulp Basin Cover is clamped securely in place (with locking handle) before the motor is turned on. Do not unfasten the clamps (locking handle) while the juicer is in operation.

! WARNING! ALWAYS ENSURE THE JUICER IS TURNED OFF AFTER EACH USE. BEFORE DISASSEMBLING, MAKE SURE THE SIEVE HAS STOPPED ROTATING AND THE MOTOR HAS COMPLETELY STOPPED.

- Do not push food into the Feed Chute with your fingers or utensils. Always use the Food Pusher provided. Do not place your hand or fingers into the Feed Chute when it is attached to the juicer. If food becomes lodged in the Feed Chute, use the Food Pusher provided or another piece of fruit or vegetable to push it down. Turn the motor off and ensure that all moving parts have stopped before disassembling the juicer to remove the remaining pulp.
- Do not use the juicer if the rotating sieve is damaged.
- Do not use the juicer without the Pulp Basin and Basin Lid attached to the Motor Base. Please see assembly instructions for proper placement.
- Do not modify the plug in any way. This juicer has a polarized plug. To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.

ADDITIONAL SAFEGUARDS

! WARNING! THIS APPLIANCE IS WIRED FOR DOMESTIC USE ONLY. TO AVOID AN ELECTRICAL HAZARD, THIS APPLIANCE MUST NOT BE POWERED OR SUPPLIED THROUGH AN EXTERNAL SWITCHING DEVICE, SUCH AS A TIMER OR VOLTAGE CONVERTER.

! WARNING! REMOVE AND SAFELY DISCARD ANY PACKAGING MATERIAL OR PROMOTIONAL LABELS BEFORE USING THE JUICER FOR THE FIRST TIME.

TO ELIMINATE A CHOKING HAZARD FOR YOUNG CHILDREN, REMOVE AND SAFELY DISCARD THE PROTECTIVE COVER FITTED TO THE POWER PLUG OF THIS JUICER.

DO NOT TOUCH THE SMALL CUTTING BLADES/TEETH ON THE BOTTOM/ BASE OF THE SIEVE. BLADES ARE SHARP! HANDLE WITH EXTREME CARE!

KEEP FINGERS AWAY FROM THE SHARP BLADE IN THE FEED CHUTE.

ALWAYS MAKE SURE THE JUICER IS PROPERLY AND COMPLETELY ASSEMBLED BEFORE CONNECTING TO THE POWER OUTLET AND OPERATING.

ENSURE THAT THE SURFACE WHERE THE APPLIANCE OPERATES IS STABLE, LEVEL, CLEAN AND DRY.

- Vibration can occur during normal operation. If extreme vibration occurs, discontinue use and call Customer Service.
- If the juicer leaks or there is a spill under or around the juicer, or onto the juicer itself, clean and dry before continuing use.
- When using this juicer, make sure there is adequate air space around and under it for proper air circulation.

! WARNING! THIS JUICER IS ONLY DESIGNED TO JUICE FRUITS AND VEGETABLES. PLEASE REFER TO THE JUICING GUIDE TO DETERMINE THE CORRECT SPEED FOR THE FRUITS AND VEGETABLES SELECTED FOR JUICING. DO NOT USE ANY FROZEN FRUITS OR VEGETABLES.

- Hard fruits and vegetables will put excess strain onto the motor if a low speed is selected.
- **REMOVE RIND FROM ALL CITRUS FRUITS BEFORE JUICING.**

! WARNING! DO NOT JUICE STONE FRUIT UNLESS PITS HAVE BEEN REMOVED.

- Do not leave the appliance unattended when in use.
- Keep hands, fingers, hair, clothing as well as spatulas and other utensils away from the appliance during operation.
- Keep the juicer clean. Refer to care and cleaning section for further information.
- Any maintenance other than cleaning should be performed by an authorized electrician. Do not attempt to repair or service the juicer, contact Customer Service for assistance at **1 (800) 523-5993**.
- If any of the instructions or warnings are not understood please contact Customer Service for assistance at **1 (800) 523-5993**.
- Do not place any of the nutriBullet Juicer™ parts in a microwave or immerse them in or hold them over boiling water, as this may result in damage to the part that can cause bodily injury during use.

! WARNING! PERIODICALLY INSPECT YOUR NUTRIBULLET JUICER™ COMPONENTS FOR DAMAGE OR WEAR THAT MAY IMPAIR PROPER FUNCTION OR PRESENT A DANGER OR SAFETY HAZARD. DISCONTINUE USE IF YOU DETECT CRACKING OR DAMAGE TO THE PULP BASIN, PULP BASIN COVER, OR OTHER PARTS. ALWAYS INSPECT THE SIEVE BEFORE EACH USE. NEVER USE A CRACKED, BENT, OR DAMAGED SIEVE. USING A DAMAGED SIEVE MAY RESULT IN PERSONAL INJURY. FOLLOW THE MAINTENANCE INSTRUCTIONS IN THIS USER GUIDE. NEVER OPERATE YOUR NUTRIBULLET JUICER™ WITH DAMAGED PARTS OR COMPONENTS. IF YOUR NUTRIBULLET JUICER™ MALFUNCTIONS OR IS DAMAGED OR COMPROMISED IN ANY WAY, IMMEDIATELY DISCONTINUE USE

AND CONTACT CUSTOMER SERVICE AT 1 (800) 523-5993 WITH ANY COMMENTS, QUESTIONS, OR CONCERNS.

- Always use genuine nutriBullet® parts and accessories ordered from nutriBullet.com or Customer Service at **1 (800) 523-5993**. Use of incompatible or aftermarket parts may result in damage to your nutriBullet Juicer™ or create safety hazards that may cause personal injury.
- The vitamin/nutrition tips included in this product's user guide and in recipes found on our nutriBullet® website are not meant to replace the advice of your physician. If you are taking medication, especially medication for cholesterol blood thinners, blood pressure, tranquilizers, or antidepressants, please check with your physician regarding health and nutrition concerns before trying any of our recipes.

! Save these instructions!

Contents.




- 03 Important safeguards**
- 08 What's included**
- 09 Assembly guide**
- 10 Assembly & use**
 - 12 Usage instructions
 - 15 Control dial
 - 16 Juicing tips
- 20 Disassembly**
- 22 Care instructions**
 - 23 Replacement parts
 - 23 How to store
- 24 nutribullet Juicer™
one-year limited warranty**
- 27 Product registration**

Thank you for purchasing the nutribullet Juicer™.

What's included.




800 WATT MOTOR
BASE WITH
LOCKING HANDLE

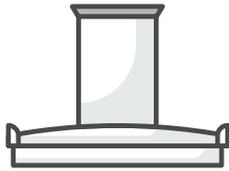

PULP BASIN COVER
WITH 3" FEED CHUTE



FOOD PUSHER

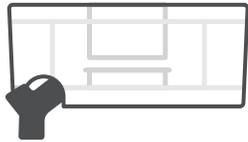

1.5L PULP BASIN WITH
NO-DRIP SPOUT



STAINLESS STEEL SIEVE



27 OZ JUICE PITCHER




JUICE PITCHER LID
WITH FROTH SEPARATOR



CLEANING BRUSH

Assembly guide.

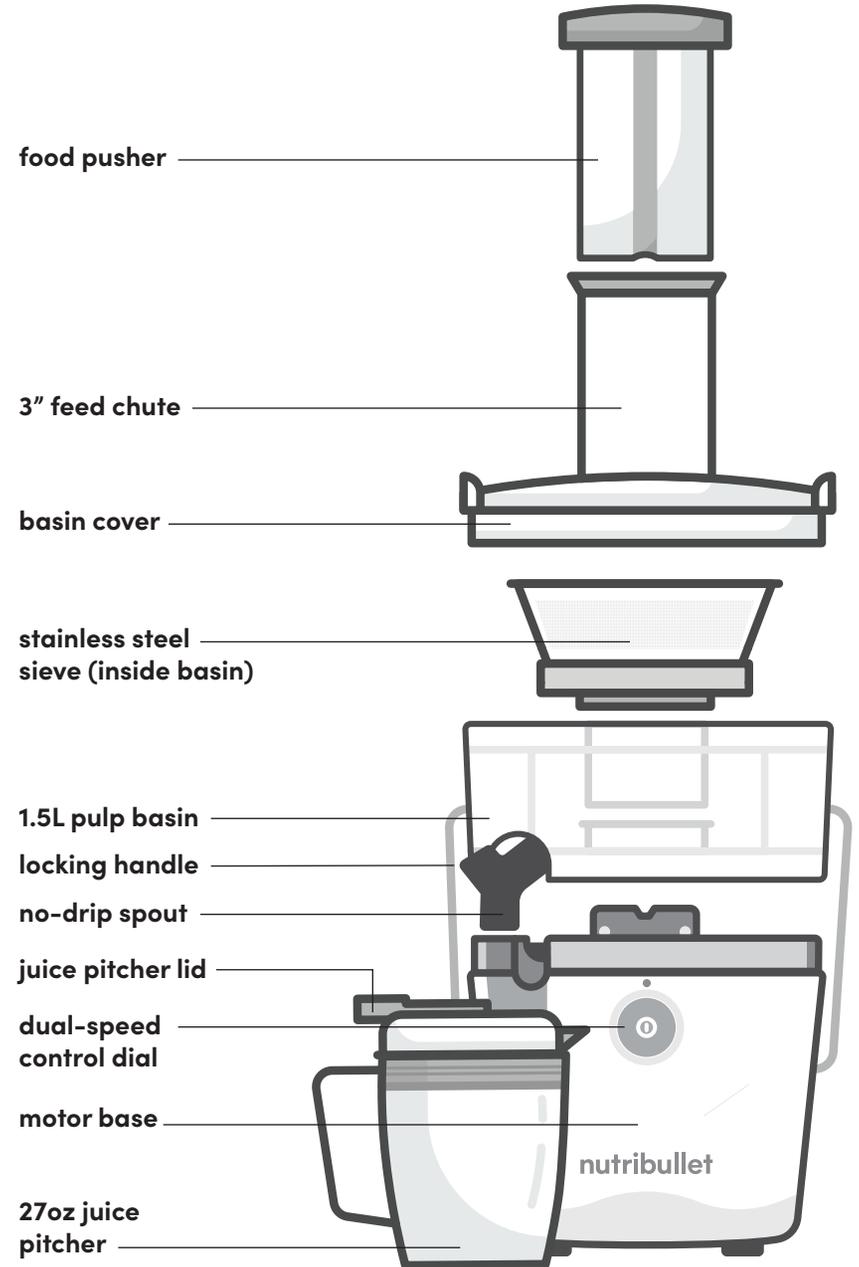


Assembly.



- 1** Place the **Motor Base** on a dry, level counter top. Ensure the **Power Button**, in the center of the dial, is in the **"OFF"** position, and the unit is unplugged.



- 3** Align the **Sieve** with the motor drive coupling, carefully holding it by the rim to avoid touching the sharp teeth at the base. Push down until it clicks into place, ensuring it's securely seated in the **Pulp Basin**.

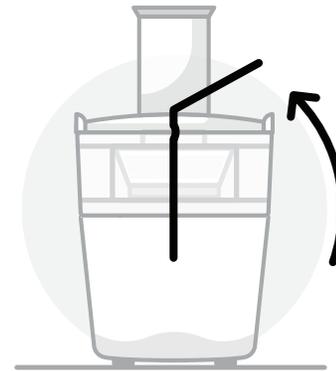

- 5** Secure the **Locking Handle** into the "ears" on either side of the **Basin Cover**. The handle will click into place when locked.


NOTE: The juicer will not power on if the **Locking Handle** is not properly secured.




- 7** Place the **Juice Pitcher Lid** on top of the **Juice Pitcher** and open the flip-top portion of the **Juice Pitcher Lid**.



- 2** Place the **Pulp Basin** on top of the **Motor Base**. Align the **Pulp Basin** with the **Motor Base** so that the **No-Drip Spout** is aligned with the dimpled side of the **Motor Base**.

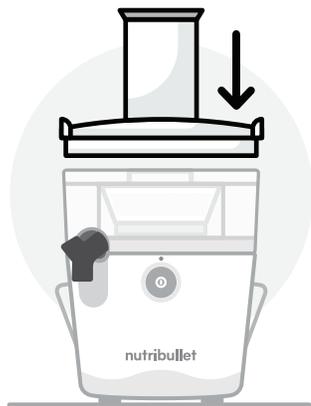

- 4** Place the **Basin Cover** over the **Sieve** and **Pulp Basin**. The side "ears" on the **Basin Cover** should align with the "ears" on the sides of the **Pulp Basin**.

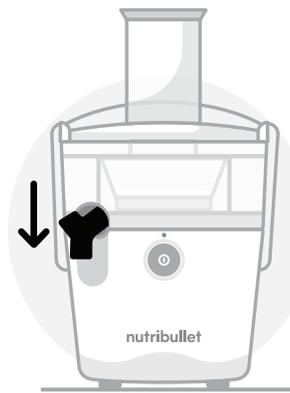

- 6** Ensure the **No-Drip Spout** opening is facing down for proper juice flow.



- 8** Secure the **Juice Pitcher** by angling it slightly so the **No-Drip Spout** fits into the flip-top opening. Then, set the **Juice Pitcher** flat on the surface, ensuring the **No-Drip Spout** sits snugly inside.


Usage instructions.



- 1** Gather all of your desired ingredients and wash them. Prepare the ingredients to be juiced by cutting, skinning, or removing the rind, stems, or stone seeds.



- 2** Once the juicer is assembled, plug the power cord into an outlet. Use the **Dual-Speed Control Dial** to select a speed, then press the **Power Button** to begin juicing. You can switch between speeds as needed based on the type of produce (refer to the chart on page 16 for recommendations).

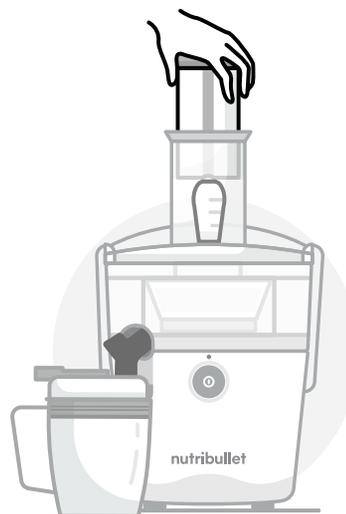


- 3** Start the motor **FIRST** before inserting ingredients. With the motor running, use the **Food Pusher** to gently guide ingredients down the **Feed Chute**.

NOTE: When pushing ingredients through the **Feed Chute**, avoid using excessive force or speed, as this can reduce juice yield.

! WARNING! DO NOT use excessive force when pushing ingredients through the Feed Chute, as this can reduce juice yield and may damage the unit.


! WARNING! Never use hands/fingers or other tools to push food down the Feed Chute into the Sieve. Only the Food Pusher should be used to push down ingredients.

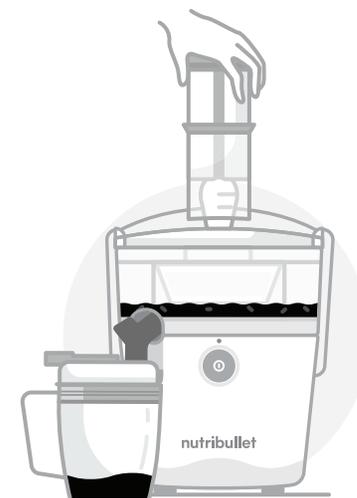

- 4** Juice will flow from the **No-Drip Spout** into the **Juice Pitcher**, while pulp is separated and stored in the **Pulp Basin**. Ensure the **No-Drip Spout** is facing down for proper juice flow.



5 If the **Pulp Basin** becomes too full during juicing, you will need to empty it before continuing juicing. See Disassembly Instructions on page 20.

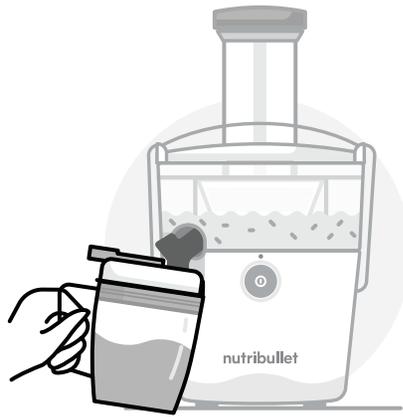

7 Remove the **Juice Pitcher** by tilting it forward at a slight angle to create separation between the flip-top opening and the **No-Drip Spout**, then slide it out. You can store juice in the **Juice Pitcher** if desired.



6 Turn the juicer off by pushing the **Power Button**. Unplug the unit. Wait until the **Sieve** comes to a complete stop spinning before proceeding to remove the **Juice Pitcher**.




8 Immediately turn the **No-Drip Spout** upward to prevent any residual drips onto the unit or surface below.

TIP: Use your left hand to pull the **Juice Pitcher** away while using your right hand to turn the **No-Drip Spout**.


Control dial.

DUAL-SPEED CONTROL DIAL & JUICING SETTINGS

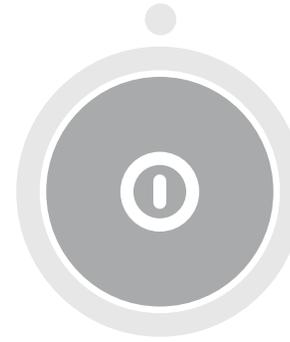


OFF:

Off is the default position for your juicer. When the unit is off, the center **Power Button** is flush with the **Dial Ring** and the green indicator ring is not visible.

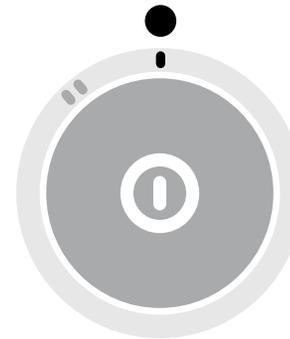

LOW SPEED (I):

For low speed, align the single-line on the **Dial Ring** with the white dot above. Press the **Power Button**. The green indicator ring will be visible and the machine will start juicing. Use this speed for softer fruits and vegetables.

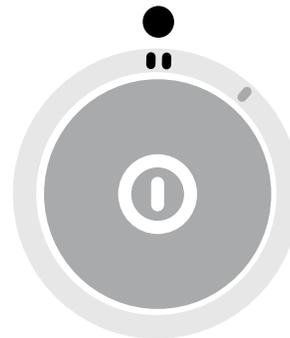

HIGH SPEED (II):

For high speed, align the double-line on the **Dial Ring** with the white dot above. Press the **Power Button**. The green indicator ring will be visible and the machine will start juicing. Use this speed for harder ingredients like carrots and beets.

Juicing tips.

JUICING SPEED SELECTION GUIDE

INGREDIENTS	SPEEDS	SEASONS
Apple	High	All Year
Beets	High	Summer / Fall / Winter
Blueberry	High	Summer
Broccoli	High	Fall / Spring
Brussels Sprouts	High	Fall / Winter
Cabbage	Low	Fall / Winter / Spring
Carrots	High	All Year
Cauliflower	High	Fall
Celery	High	All Year
Cucumber	Low	Summer
Fennel	High	All Year
Ginger	High	Fall
Grapes	Low	Fall
Grapefruit	Low	Winter
Kale	High	Fall / Winter / Spring
Kiwi	Low	Fall / Winter / Spring
Lemon	Low	All Year
Lime	Low	All Year
Melons (all)	Low	Summer
Orange	High	Winter
Peaches	Low	Summer
Pears	High	Fall / Winter
Pineapple	High	Fall / Winter / Spring
Plums	High	Summer
Raspberries	Low	Summer / Fall
Spinach	Low	Fall / Spring
Sweet Potato (raw)	High	Fall / Winter
Tomatoes	Low	Summer

VITAMINS / NUTRIENTS

source of quercetin
excellent source of folate
good source of vitamin C
high in vitamin C, high in folate, good source of potassium
high in vitamin C, good source of folate
high in vitamin C
excellent source of vitamin A, good source of vitamin C
high in vitamin C, good source of folate
good source of vitamin C, good source of vitamin A
good source of vitamin C
good source of vitamin C and potassium
contains vitamin C, magnesium, and potassium
good source of vitamin K
high in vitamin A, high in vitamin C
excellent source of vitamin A and vitamin C, good source of calcium and potassium
high in vitamin C, good source of potassium and vitamin E
high in vitamin C
high in vitamin C
high in vitamin A, high in vitamin C
high in vitamin C
good source of vitamin C
good source of vitamin C
high in vitamin C
good source of vitamin C
high in vitamin C
high in vitamin A, vitamin C, iron, and folate, good source of magnesium
good source of potassium, high in vitamin A and vitamin C
high in vitamin A, high in vitamin C, good source of potassium

⚠️ WARNING! DO NOT attempt to juice ingredients with very little water content, such as avocados, coconut, rhubarb, and bananas. These are generally not suitable for juicing because they lack the necessary liquid for the juicer to function properly, and may cause the unit to clog.

⚠️ WARNING! Apples can be juiced, but you should remove the seeds first. Apple seeds contain amygdalin, which can be poisonous when metabolized.

PROPER PRODUCE PREP

Prepare fruit and veggies before inserting them into the juicer:

- Properly clean produce (rinse with lukewarm water, produce wash, or water and apple cider vinegar).
- Peel or remove skin as needed, and chop food items down to the right size – just small enough to fit easily into the Feed Chute, without having to force the pieces down with the Food Pusher.
- Remove rind from all citrus fruits before juicing.
- Remove large pits and seeds from stone fruits before juicing.

FEED CHUTE

- Never place your hand or fingers into the Feed Chute when it is attached to the appliance.
- Always start the juicer before adding food to the Feed Chute. The juicer must be running when items enter it.
- Do not overload the Feed Chute. Items must be added gradually, at a pace the juicer can keep up with.
- Use only the provided Food Pusher to push food into the Feed Chute. Never use fingers, utensils, or any other apparatus.
- Never use excessive force to push items into the Feed Chute.
- When juicing, ensure all produce has moved through the Feed Chute and into the Sieve before adding more.

- If any food gets stuck in the Feed Chute, use the Food Pusher to move it down the chute and into the Sieve.
- **IMPORTANT TIP:** Always start the motor first before inserting ingredients into the Feed Chute. Overfilling the Feed Chute before starting may overheat the motor. Also, do not use excessive force when pushing ingredients through the Feed Chute as it may strain the motor and cause it to overheat.

CONSUMING JUICE & PULP

Instead of composting or throwing away the pulp left over after juicing, you can choose to consume it. Check out our recipe section on **nutribullet.com** for some fun tips on what to do with leftover pulp. By using these creative ideas, you can enjoy pulp in a variety of delicious (and healthy) ways.

- Whether you prefer sweet or savory, you can use pulp to create some tasty treats!
- For best taste, consume fresh juice and pulp within 48 hours of juicing.

NO-GO FOODS

Foods that should NEVER be used in this juicer:

- Foods that do not contain juice to extract (for example, bananas or avocados).
- Frozen fruits or vegetables.
- Stone fruits that have large pits or seeds that have not been removed. Stone fruits may be used only if the seed or pit has been removed.


OVERHEATING

- If the motor overheats, the juicer will turn off.
- If the juicer stops working, unplug it and allow it to cool down for at least fifteen minutes before attempting to use again.

Disassembly.



- 1 Ensure the unit is powered off and unplugged.

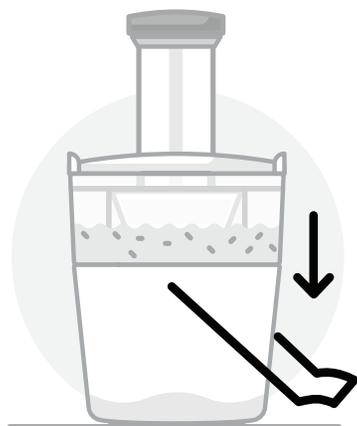


- 3 Unlock the **Locking Handle** from the **Basin Cover** by pulling the handle backward out of the "ears" on either side of the **Basin Cover**. Move the handle down.




- 2 Remove the **Juice Pitcher** from under the **No-Drip Spout**. To prevent drips, turn the **No-Drip Spout** upwards.


NOTE: The **No-Drip Spout** can be removed. Wash and rinse with water. **DO NOT** wash **No-Drip Spout** in dishwasher

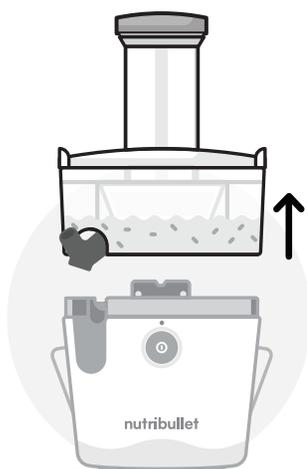

- 4 Remove the **Pulp Basin** from the **Motor Base** by pulling upwards with the **Basin Cover** and **Sieve** still in place. Take it directly to your sink.

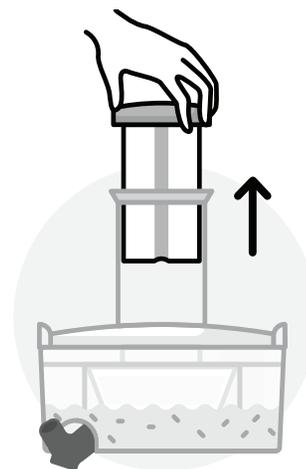


- 5 Remove the **Food Pusher** by lifting it out of the **Feed Chute**.

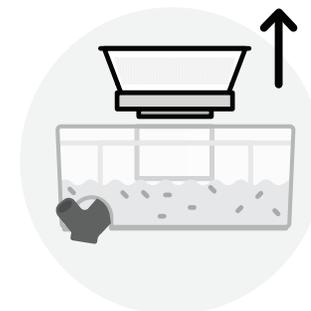


- 7 Gently lift the **Sieve** vertically out of the center of the **Pulp Basin**. Clean the **Sieve** right away (see care instructions).

WARNING! The **Sieve** contains sharp blades. Do not touch the blades. Use the **Cleaning Brush**.

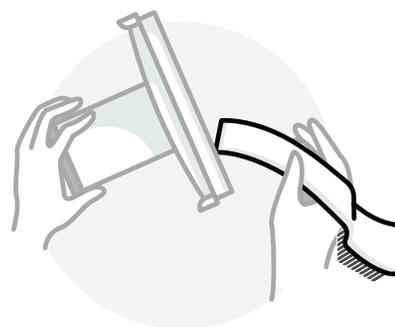

- 6 Lift the **Basin Cover** vertically off of the **Pulp Basin** and remove any pulp from the inside of the cover. You may use the flat end of the **Cleaning Brush** to scrape pulp off of the cover.

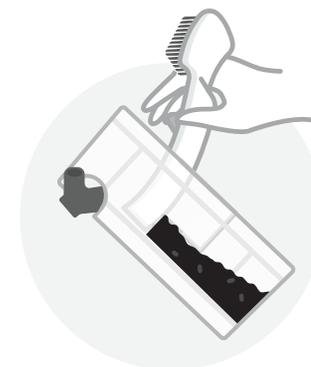

- 8 Empty the **Pulp Basin**. Use the flat end of the **Cleaning Brush** to scrape out the pulp, setting it aside for use in other recipes or composting. You can also empty the pulp directly into your waste bin or compost.

Care instructions.

- 1 Always ensure the **Motor Base** is unplugged before you begin assembly, disassembly, cleaning or storage of the unit.
- 2 Once the **Pulp Basin** is emptied, rinse all parts under running water.
- 3 Use the **Cleaning Brush** to scrub the **Sieve** under running water. Be sure to properly clean the **Sieve** every time you juice. Residue from fruits and vegetables can cause buildup in the **Sieve** which can clog the holes and may prohibit maximum juice extraction.

 **WARNING!** Always use precaution when cleaning the **Sieve**, as it contains sharp blade teeth on the flat disc part.

TIP: Clean the **Sieve** immediately after juicing with the **Cleaning Brush** to prevent pulp from drying and clogging the holes. If buildup occurs, soak the **Sieve** in hot water for 30 minutes before scrubbing.

- 4 All of the components except the **Food Pusher**, **Motor Base**, and **No-Drip Spout** are dishwasher safe. You may also hand wash all pieces with warm soapy water.

TIP: Do not use the Sterilize cycle on your dishwasher to clean your juicer, as high temperatures may deform parts.

- 5 Wipe down the **Motor Base** with a clean, damp cloth.

 **WARNING!** Never submerge **Motor Base** into water or other liquid.

Replacement parts.

Periodically inspect your nutribullet Juicer™ for damage or wear that may impair proper function or present a danger or safety hazard. Discontinue use if you detect cracking or damage. Never operate your nutribullet Juicer™ with damaged parts or components.

Always use genuine nutribullet® parts and accessories. Use of incompatible or aftermarket parts may result in damage to your nutribullet Juicer™ or create safety hazards that may cause personal injury or damage.

To order additional parts and accessories, please visit our website at [nutribullet.com/shop/accessories](https://www.nutribullet.com/shop/accessories) or feel free to contact Customer Service: **1 (800) 523-5993**.

How to store.

Store the Juice Pitcher upright with the Pitcher Lid secured on top. Do not place anything on top of the Pitcher Lid. Store remaining pieces in a safe place where they will not be damaged and won't cause harm, as some of the pieces are sharp.

nutribullet Juicer™

one-year limited warranty.

LIMITED WARRANTY FOR NUTRIBULLET®

nutribullet's limited warranty obligations are confined to the terms set forth below:

nutribullet, LLC and Capital Brands Distribution, LLC (together, "nutribullet") warrants this nutribullet® against defects in materials and workmanship for a period of one year from the date of original retail purchase or date of delivery of the product, whichever is later. This limited warranty is valid only in the country in which the product is purchased and comes with the product at no extra charge. However, shipping and processing fees will be incurred by you for returns, replacements and/or refunds. If a defect exists and is subject to this limited warranty, at its option, nutribullet® will (1) repair the product free of charge, using new or refurbished replacement parts, (2) exchange the product with a product that is new or

that has been manufactured from new or serviceable used parts and is at least functionally equivalent to the original product, or (3) refund the purchase price of the product. A replacement product assumes the remaining warranty of the original product. A repaired product has a one-year warranty from the date of repair. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes nutribullet's property. When a refund is given, your product becomes nutribullet's property.

OBTAINING WARRANTY SERVICE

For limited warranty service, call our Customer Service Department at **1 (800) 523-5993** or contact us via email from our website at **nutribullet.com**. Click the "contact us" link, fill out and submit the customer contact form, and our team will respond to you in a timely manner. When you contact Customer Service, you will be asked to provide your

name, address, and telephone number, as well as proof of original purchase (receipt) containing a description of the product(s), purchase date or date of delivery, whichever is later, and appropriate nutribullet® serial number(s). Before you send your product for limited warranty service, please make sure to keep a copy of all relevant documents for your files (receipt, etc.). It is always recommended to purchase product insurance and tracking services when sending your product in for service. The customer is responsible for all shipping processing fees; they are not covered by the One-Year Limited Warranty.

EXCLUSIONS & LIMITATIONS

This nutribullet® One-Year Limited Warranty applies only to nutribullet® products distributed by or for nutribullet that can be identified by the "nutribullet" trademark, trade name, logo and bar code. This nutribullet Juicer™ One-Year Limited Warranty does not apply to any unauthentic product or accessory that was not distributed/sold by nutribullet.

Normal wear and tear is not covered by this limited warranty.

This limited warranty applies to household use only, and is void when the product is used in a commercial or institutional setting. This limited warranty extends only to the original consumer purchaser and is not transferable. In addition, proof of purchase must be demonstrated. Repair or replacement of the product (or, if repair or replacement is not feasible, a refund of the purchase price,) is the exclusive remedy of the consumer under this limited warranty. nutribullet shall not be liable for any incidental or consequential damages for breach of this limited warranty or any implied warranty on this product.

This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state. nutribullet is not liable for any damage to products not covered by this warranty (e.g., cups, book, User Guide). This limited warranty does not apply: (a) to damage caused by accident, abuse, misuse, or misapplication; (b) to damage caused by improper maintenance (including unauthorized parts service); (c) to a product or a part that has been modified in any way; (d) if any nutribullet® serial number or trademark has been removed or defaced; (e) if the product

has been used with an adapter/ converter; and/or (f) if the product is used for commercial or industrial purposes.

THIS LIMITED WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. NUTRIBULLET SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IF NUTRIBULLET CANNOT LAWFULLY DISCLAIM IMPLIED WARRANTIES UNDER THIS LIMITED WARRANTY, ALL SUCH WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO THE DURATION OF THIS LIMITED WARRANTY.

No nutribullet® reseller, agent, or employee is authorized to make any modification to this warranty.

NUTRIBULLET IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DOWNTIME,

GOODWILL, DAMAGE TO OR REPLACEMENT OF EQUIPMENT AND PROPERTY. NUTRIBULLET SPECIFICALLY DOES NOT REPRESENT THAT IT WILL BE ABLE TO REPAIR ANY PRODUCT UNDER THIS LIMITED WARRANTY.

Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages, or exclusions or limitations on the duration of implied warranties or conditions, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary by state or province.

Product registration.

Visit nutribullet.com/register or call **1 (800) 523-5993** to register your new nutribullet Juicer™. You will be asked to enter the **Serial Number*** of your product, along with the purchase date and place of purchase. The information you submit is for product registration. Failure to complete product registration does not diminish your warranty rights.

The registration will enable us to contact you in the unlikely event of product safety notification. By registering your product, you acknowledge you have read the instructions and understood the warnings as set forth in the accompanying instructions.



***How to find serial number under the Motor Base.**

1 (800) 523-5993 | nutribullet.com

nutribullet® is the registered trademark of Capbran Holdings, LLC
Copyright © 2025 Capbran Holdings, LLC. Distributed By Capital Brands Distribution,
LLC. Los Angeles, CA 90024 USA. All Rights Reserved. Made In China.

Illustrations may differ from the actual product. We are constantly striving
to improve our products, therefore the specifications contained herein
are subject to change without notice.

250407_NBJ50100