

nutribullet

LIMITLESS™

FOOD PROCESSOR



User guide.

⚠ WARNING! To reduce the risk of serious injury, read the User guide before operating your nutribullet Limitless™ Food Processor. Save these instructions. Be sure anyone who uses the nutribullet® knows how to do so safely.

IMPORTANT SAFEGUARDS.

WARNING! To avoid the risk of serious injury, carefully read all instructions before operating your nutribullet Limitless™ Food Processor. When using any electrical appliance, basic safety precautions should always be observed, including the following important information.

When operating your nutribullet Limitless™ Food Processor, remember:
SAFETY COMES FIRST. READ CAREFULLY AND THOROUGHLY BEFORE OPERATING.

If you let anyone else use your nutribullet Limitless™ Food Processor, make sure that they understand the health and safety information in this User Guide, as well as any additional safety or usage instructions provided. Each person using a device should read the User Guide completely and become familiar with the safe operation of the unit.

! Save these instructions! • FOR HOUSEHOLD USE ONLY

GENERAL SAFETY INFORMATION

! WARNING! BLADES AND DISCS ARE SHARP. READ ALL INSTRUCTIONS. FAILURE TO FOLLOW ALL INSTRUCTIONS REGARDING USING YOUR NUTRIBULLET® DEVICE MAY RESULT IN SERIOUS PERSONAL INJURY, DEATH, OR PROPERTY DAMAGE.

- Do not leave the appliance unattended when in use.
- This appliance is not intended for use by children or people with reduced physical, sensory, or mental capabilities. People who also lack experience and knowledge should not operate this appliance unless supervised and instructed concerning proper use by a person responsible for their safety.
- Ensure that the surface where the appliance operates is stable, level, clean and dry.
- To protect against the risk of electrical shock, never operate the device near water or on a wet surface. Any significant spillage onto the surface, under, around, or onto the appliance itself should be

cleaned and dried before continuing to use the appliance.

- Close supervision is necessary when any appliance is used by or near children to ensure that they do not play with the appliance.
- **TO PROTECT AGAINST RISK OF ELECTRICAL SHOCK DO NOT IMMERSE THE APPLIANCE, MOTOR BASE, CORD, OR PLUG IN WATER OR ANY OTHER LIQUID.**
- When using this appliance, provide adequate air space above, below, and on all sides for circulation.
- Vibration may occur during normal operation.
- Do not let the cord hang over the edge of a table, counter, or touch hot surfaces.
- Avoid contact with moving parts.

! WARNING! ALWAYS MAKE SURE THAT THE MOTOR BASE IS POWERED OFF AND THE BLADES ARE COMPLETELY STOPPED BEFORE REMOVING ANY ATTACHMENT, DISASSEMBLY, OR BEFORE CLEANING. NEVER STORE THE BLADE ATTACHMENTS IN THE WORK BOWL WITHOUT THE LID IN PLACE. EXPOSED BLADES CAN PRESENT A DANGEROUS HAZARD.

- **DO NOT** use this appliance if any part appear to be damaged. If you have any questions or concerns, please contact Customer Service.
- **DO NOT** place any nutribullet® parts or accessories in the microwave, parts and accessories are not microwave-safe.
- Do not use outdoors.
- Use of incompatible or aftermarket parts may result in damage to your nutribullet® unit and may create safety hazards that may cause personal injury or damage. **ALWAYS** use genuine nutribullet® parts and accessories. Using incompatible or aftermarket parts may result in damage to your nutribullet® unit and may create safety hazards that may cause personal injury or damage. Order replacement parts and accessories from nutribullet.com or contact Customer Service.

WORK BOWL & FEED CHUTE

- Do not overfill the Work Bowl. Make sure to stay at or below the **LIQUID MAX** line when using liquid ingredients to reduce the risk of injury or damage to the machine. Overfilling the Work Bowl can cause damage to the Work Bowl or cover and cause the ingredients to leak.
- Always make sure the unit is properly and completely assembled with the Work Bowl securely locked in place (with lid on) before connecting to power outlet and turning on the motor.
- **NEVER** attempt to remove the Work Bowl or open Lid while the unit is in operation or when the blades or discs are still moving to avoid the risk of severe bodily injury or damage. **ALWAYS** allow the blades or discs to come to a complete stop before handling.
- **NEVER** push food into the Feed Chute with your fingers or utensils. Only use the Food Pusher provided.
- To prevent the risk of severe bodily injury or property damage, keep

hands, fingers, and utensils out of the Feed Chute and Work Bowl and away from moving blades or discs to prevent the risk of severe injury to persons or property damage. A scraper or spatula may be used, **BUT ONLY WHEN THE APPLIANCE IS OFF.**

- **DO NOT** overload the Feed Chute with ingredients or use excessive force on the Food Pusher when pushing food through. This may cause the blades or discs to seize, resulting in the motor overheating, or cause the Work Bowl to fracture and break.
- For best results, start the Food Processor first before placing ingredients into the Feed Chute. Wait until food naturally moves down the Feed Chute and slowly start adding more ingredients into the Feed Chute.

GENERAL BLADE & DISC SAFETY

- Always **POWER OFF** and **UNPLUG** the unit and wait until the blades or discs come to a complete stop before assembling, disassembling, changing accessories, or cleaning to avoid laceration or other bodily injury.
- ! WARNING! ALWAYS REMOVE THE BLADES OR DISCS BEFORE ACCESSING THE FOOD FROM THE WORK BOWL. NEVER TILT THE WORK BOWL ATTEMPTING TO HAVE THE BLADE OR DISC DROP OUT ONTO YOUR HAND.**
- Blade is sharp. Handle carefully.
 - To reduce the risk of injury, never place Chopping Blade and Slice/Shred Disc on base without first putting bowl properly in place.
 - **AVOID CONTACT WITH MOVING PARTS!** Keep fingers out of discharge opening. Do not attempt to defeat any safety interlock mechanisms.

- **DO NOT** leave non-food items (such as a spoon or fork) in the Work Bowl and avoid processing hard ingredients like nuts, coffee beans, and fruit pits. These items can damage your nutribullet® device and may result in bodily injury or damage to the unit.
- **NEVER** leave or store an exposed blade or disc on the Motor Base. Exposed blades and discs present a safety hazard that may result in severe laceration injuries. Always place blades and discs in the Work Bowl and cover with the Work Bowl Lid.
- **NEVER** store the blade attachments in the Work Bowl without the Lid in place. Exposed blades can present a dangerous hazard.
- Do not use the blades or discs for grinding dry ingredients such as grains, cereal, or coffee, as this may damage the motor, blades and discs. Use of dry ingredients may cause the motor to overheat.



WARNING! ALWAYS USE EXTREME CARE AND EXERCISE CAUTION WHEN CLEANING THE BLADES OR DISCS BY HAND. DO NOT TOUCH THE SHARP EDGES OF THE BLADES OR DISCS WITH YOUR HANDS OR FINGERS TO AVOID SEVERE LACERATION INJURIES.

ELECTRICAL SAFETY



WARNING! DO NOT USE THIS PRODUCT IN LOCATIONS WITH DIFFERENT ELECTRICAL SPECIFICATIONS OR PLUG TYPES. DO NOT OPERATE WITH ANY TYPE OF PLUG ADAPTER OR VOLTAGE CONVERTER DEVICE, AS THESE MAY CAUSE ELECTRICAL SHORTING, FIRE, ELECTRIC SHOCK, PERSONAL INJURY OR PRODUCT DAMAGE. THIS APPLIANCE HAS IMPORTANT MARKINGS ON THE PLUG BLADE. THE CORD IS NOT SUITABLE FOR REPLACEMENT. IF DAMAGED, THE APPLIANCE MUST BE REPLACED.

- Do not modify the plug in any way. This appliance has important markings on the plug blade. The cord is not suitable for replacement. If damaged, the appliance must be replaced.
- Always turn the appliance **OFF** and **UNPLUG** from the outlet **AFTER** use, **BEFORE** assembling and disassembling parts, and before cleaning.
- To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- Do not let the power supply cord hang over the edge of a table or countertop.
- Do not let the power supply cord touch hot surfaces, including stove, or become knotted or tangled.
- This unit has a polarized plug. To reduce the risk of electric shock, this plug will fit into a polarized outlet only one way. If the plug does not fit fully inside the outlet, reverse the plug. **IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN.**
- Regularly inspect the power cord, plug, and appliance for any damage. **DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED CORD OR PLUG OR IF THE APPLIANCE MALFUNCTIONS, OR IS DROPPED OR DAMAGED IN ANY MANNER.** Contact Customer Service for assistance at **1 (800) 523-5993**.

ADDITIONAL SAFEGUARDS

- Remove and safely discard any packaging material or promotional labels before using the appliance for the first time.
- Do not put any non-food items in any of the appliance pieces, as doing so may damage the unit and or cause severe personal injury or property damage.

- This appliance is not intended to be an ice crusher. Attempting to crush ice may cause permanent damage to the blades or cause the unit to malfunction, resulting in personal injury or property damage.
- Make sure you have removed any rind from fruit prior to adding to the Work Bowl. Do not use fruits that contain seeds or pits unless they have been completely removed.
- **DO NOT** attempt to use blade, cup or Work Bowl attachments from another nutribullet® or a magic bullet® product or an attachment from another brand with the nutribullet Limitless™ Food Processor. Only use the Work Bowl and blade attachments included with your unit.
- Only use genuine nutribullet® parts specifically for your nutribullet® Food Processor from nutribullet.com. Use of incompatible or aftermarket parts may result in damage to your nutribullet® unit and may create safety hazards that may cause personal injury or damage.
- Periodically inspect all nutribullet® components, including the power cord and plug, for damage or wear that may impair proper function or present an electrical hazard. Discontinue use and contact Customer Service for assistance.
- If your nutribullet® malfunctions in any way, immediately discontinue use and contact Customer Service at **1 (800) 523-5993**.
- If you have any questions or comments, or if some aspect of this user guide is not clear, please contact Customer Service for assistance at **1 (800) 523-5993**.

* The power rating of this appliance was obtained by using 400g Syrup at 20°C.

!SAVE THESE INSTRUCTIONS!



Contents.


08	What's included
09	Assembly guide
10	Control panel
11	Assembly & use
11	Before first use
12	Recommended maximum Work Bowl capacity
13	Assembly
14	Using the Chopping Blade
17	Using the Reversible Slice/Shred Disc
20	Using the Endless Chute
22	Using the Food Pusher
23	Troubleshooting
24	Care & maintenance
25	How to store
25	Replacement parts
26	nutribullet Limitless™ Food Processor one-year limited warranty
29	Product registration

Thank you for purchasing the nutribullet Limitless™ Food Processor.

What's included.




motor base

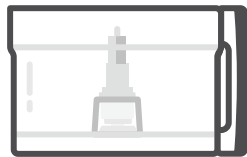

5 1/2-cup
work bowl



 work bowl lid
with feed chute




food pusher




chopping blade



reversible
slice/shred disc





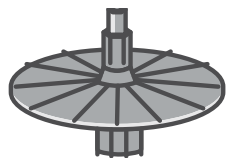


slinger disc

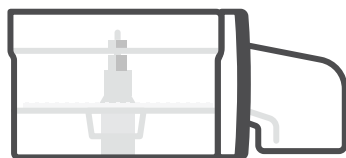

endless chute
attachment

Assembly guide.

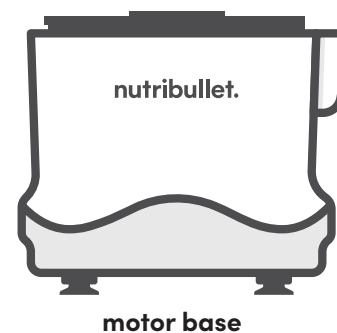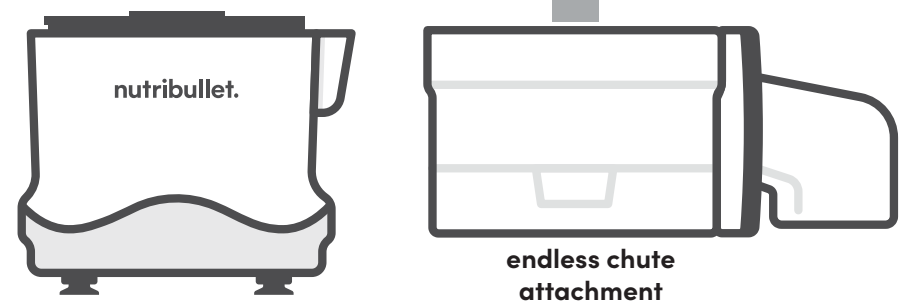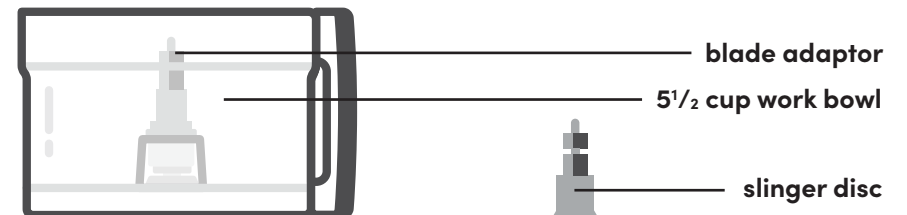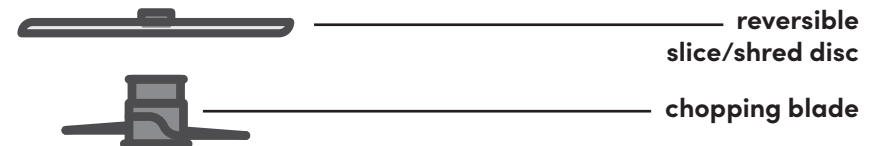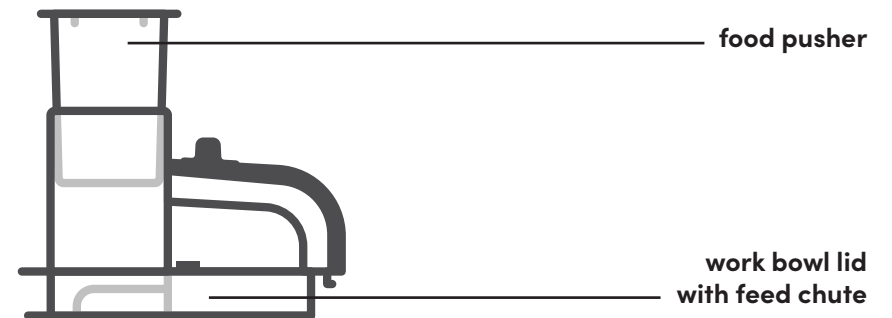


WARNING: Blades are sharp. Handle carefully.

* The power rating of this appliance was obtained by using 400g syrup at 20°C.

Control panel.

The nutribullet Limitless™ Food Processor features a sliding speed control toggle, conveniently located on the handle of the Work Bowl.

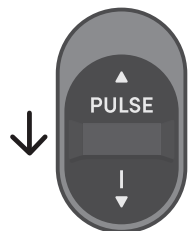


ON:

Slide the toggle to the **ON** position. The toggle will remain in the **ON** position until it is turned off.



OFF:

Slide the toggle to the **OFF** position to stop the food processor.

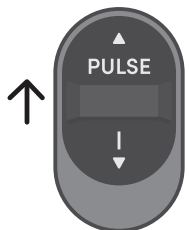

PULSE:

Slide the toggle to the **PULSE** position to activate a burst of chopping or mixing. The food processor will operate while the toggle is held in the **PULSE** position, and automatically reset to the **OFF** position when released.

Assembly & use.

Before first use.

Before using your nutribullet Limitless™ Food Processor for the first time, please take a moment to perform the steps below.

1. UNPACK

Open box. Remove the **Motor Base** and all attachments. Place all parts on a flat, dry surface.



WARNING! Blades and discs are sharp. Handle with care. NEVER tilt the Work Bowl attempting to have the blade or disc drop out onto your hand.

2. CLEAN

Rinse all detachable parts and accessories. All parts except the **Motor Base** are dishwasher safe, or can be cleaned by rinsing with warm, soapy water. Clean the **Motor Base** with a clean, damp cloth.



WARNING! Blades and discs are sharp. Handle with care. NEVER tilt the Work Bowl attempting to have the blade or disc drop out onto your hand.



WARNING! Never submerge the Motor Base in water or any other liquid. See Care & Maintenance instructions on page 24 for more detailed cleaning instructions.


Recommended maximum Work Bowl capacity.

Food	Max Capacity	Time (Seconds, Pulses)*
Chopped fruit or vegetables (cut into 2-3-inch pieces)	2 cups	5-10 pulses
Sliced or shredded fruit or vegetables	3 cups	10-20 seconds
Chopped meat, or, seafood (cut into 2-inch pieces)	1 pound	5-10 pulses
Chopped cheese (Cut into 2-inch pieces)	3 cups	10-20 seconds
Sliced or shredded cheese	3 cups	10-20 seconds
Herbs	1 ½ cups (packed)	5-10 pulses
Nuts	2 cups	5-10 pulses


*Endless Chute Attachment times out at 120 seconds.

Assembly.

Review all warning and caution statements in the Important Safeguards section (pages 2-5) and above before proceeding to Step 1.

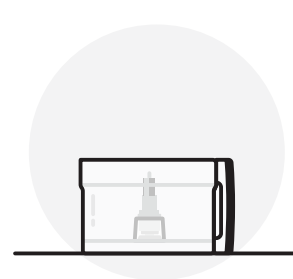


- 1** Place the **Work Bowl** on a clean, dry, flat surface, like a countertop or table.

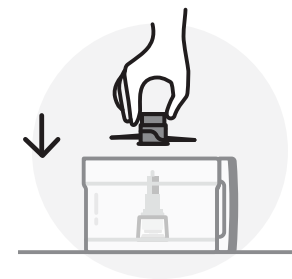

- 2a** If using the **Chopping Blade**: Holding the plastic knob at the top of the blade, carefully slide the hollow blade center down the **Blade Adapter** until it reaches the bottom of the **Work Bowl**. Press it down firmly to set it in place.

! WARNING! Blades are sharp! Handle carefully. Keep fingers away from the blade's sharp edges. Always hold blades by grasping the plastic areas.

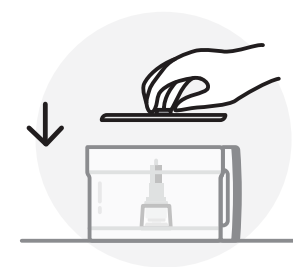


- 2b** If using the **Reversible Slice/Shred Disc attachment**: With the required side (slice or shred) facing up, hold the disc by the plastic knob at the center and carefully secure onto the **Blade Adapter**.

! WARNING! Never run the motor with more than 1 blade attached.


! WARNING! Always power off and unplug the unit before assembling, disassembling, changing accessories, or cleaning to avoid laceration or other bodily injury.

Using the Chopping Blade.

The **Chopping Blade** is a versatile blade that can be used to chop, mix, mince, or purée foods.

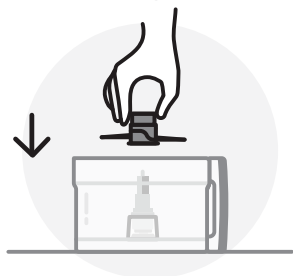


- 1 Place the **Work Bowl**, with the **Chopping Blade** attached, on a clean, dry, flat surface like a countertop. Refer to the assembly instructions on page 13 for how to properly attach the **Chopping Blade**.

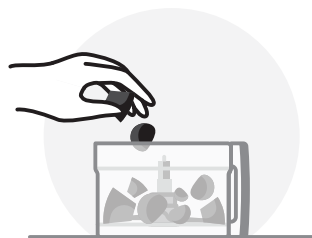


- 2 Prepare food (cut into smaller pieces, remove seeds, etc.) and place into the **Work Bowl**. Do not overload **Work Bowl** with food. If you are using liquid ingredients do not fill past the **LIQUID MAX** line.

NOTE: Make sure the **Chopping Blade** has been attached to the **Work Bowl** **BEFORE** adding food to the **Work Bowl**.

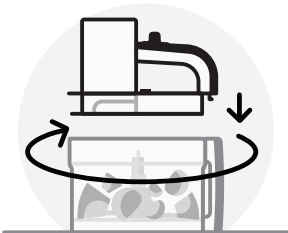


- 3 Place the **Work Bowl Lid** on top of the **Work Bowl**. Turn the lid clockwise, lining up the markings on the lid and handle, to lock into place. Place the **Food Pusher** into the **Feed Chute**.

NOTE: The motor will not run unless the lid is locked into place.

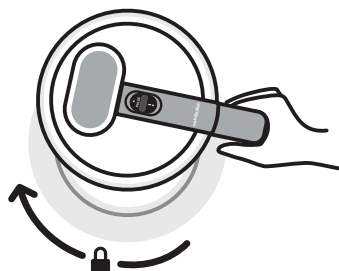


- 4 Place the **Work Bowl**, with lid attached, onto the **Motor Base**. Turn the **Work Bowl** clockwise to lock into place. You should hear a click when the **Work Bowl** is properly locked into place.

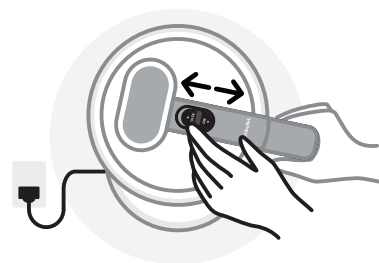

- 5a Plug in the unit, slide the toggle to the **ON** or **PULSE** position to start processing food.




- 6 When you're finished, slide the toggle to the **OFF** position. Wait until the **Chopping Blade** has come to a complete stop. Remove the **Work Bowl** by turning the handle counterclockwise to unlock it from the **Motor Base**. Lift the **Work Bowl** up off the base and set it on a flat surface.

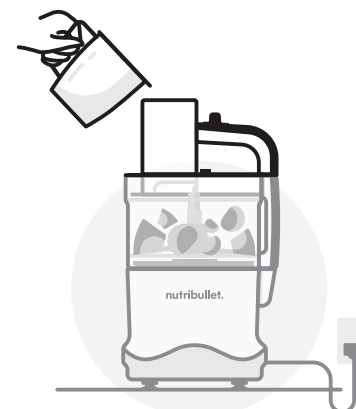


- 5b If you need to add liquid while processing, lift the **Pusher** and drizzle liquid through the **Feed Chute**.

NOTE: Do not fill liquid ingredients past the **LIQUID MAX** line.

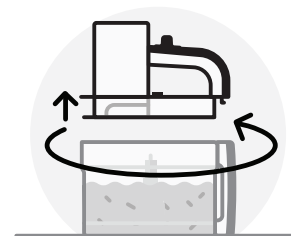


- 7 Remove the **Work Bowl Lid** from the **Work Bowl** by turning the lid counterclockwise to unlock. Carefully remove the lid and set it aside.

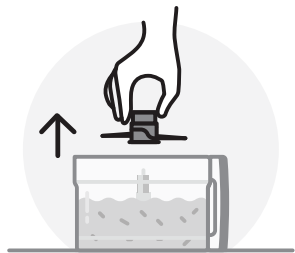

- 8** Carefully remove the **Chopping Blade** from the **Work Bowl** and set aside.

WARNING! Blades are sharp! Handle carefully. Keep fingers away from the blade's sharp edges. Always hold blades by grasping the plastic areas.


WARNING! Never tilt the **Work Bowl** to have the blade or disc drop out onto your hand.

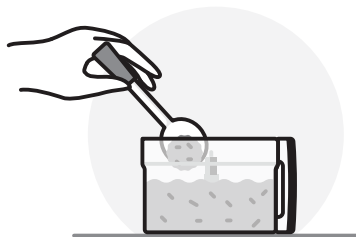

- 9** Remove your food from the **Work Bowl** using a spatula or spoon. Dispose of any leftover food in the **Work Bowl**, then clean the **Work Bowl**, blades, and other parts to avoid food residue buildup.


Using a Disc Attachment.

The disc attachment is for slicing or shredding your ingredients. The **Slice/Shred Disc** is reversible. Place the side you want to use with its name facing up.

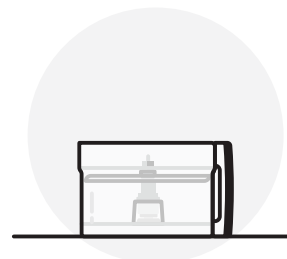


- 1** Place the **Work Bowl**, with **Reversible Slice/Shred Disc** attached, on a clean, dry, flat surface like a countertop. Refer to the assembly instructions on page 13 for how to properly attach a disc for use.

WARNING! Blades and discs are sharp! Handle with care!

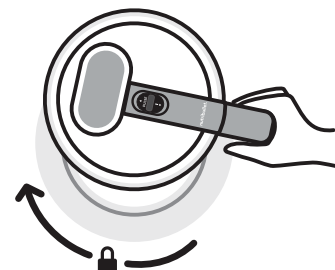

- 3** Place the **Work Bowl**, with lid attached, onto the **Motor Base**. Turn the **Work Bowl** clockwise to lock in place. You should hear a click when the **Work Bowl** is properly locked in place.

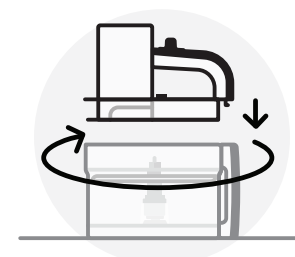


- 2** Place the **Work Bowl Lid** on top of the **Work Bowl**. Turn the lid clockwise, lining up the arrows on the lid and handle to lock into place.


NOTE: The motor will not run unless the lid is locked in place.



- 4** Prepare food (cut into smaller pieces, remove seeds, etc.) and set aside.

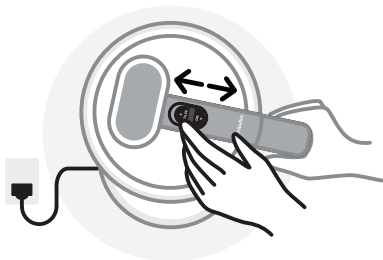


- 5** Plug in the unit and slide the toggle to the **ON** or **PULSE** position.

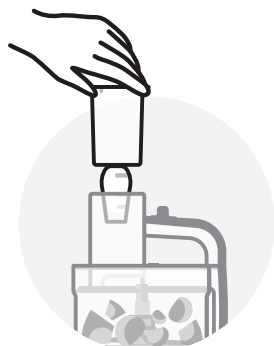

- 6** With the motor running, place food into the **Feed Chute**, carefully guiding it down using the **Food Pusher**.


! WARNING! Always use the **Food Pusher**, not fingers or utensils, to push food down chute. Do not insert too much food at one time. Never force stuck food down chute.

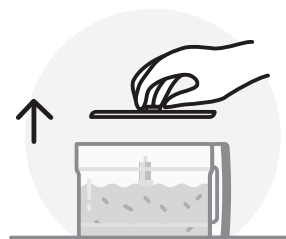


- 9** Carefully remove the **Disc** from the **Work Bowl** and set aside.

! WARNING! Keep fingers away from the discs sharp blades, handle by using the plastic center hub only.


! WARNING! Never attempt to remove the blade or disc by tilting the **Work Bowl** and dropping out the blade or disc onto your hand.

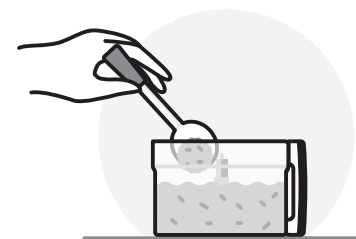

- 10** Remove your food from the **Work Bowl** using a spatula or spoon. Dispose of any leftover food in the **Work Bowl**, then clean the **Work Bowl**, blades, and other parts to avoid food residue buildup.

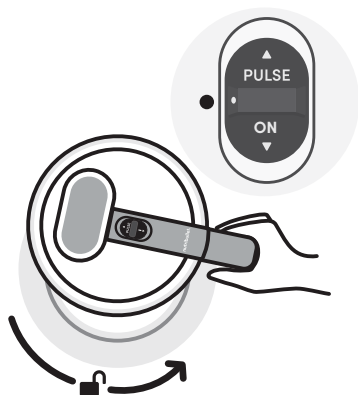


- 7** When you're finished, slide the toggle to the **OFF** position. Wait until the **Disc** has come to a complete stop. Remove the **Work Bowl** by turning the handle counterclockwise to unlock it from the **Motor Base**. Lift the **Work Bowl** up off the base and set it on a flat surface.

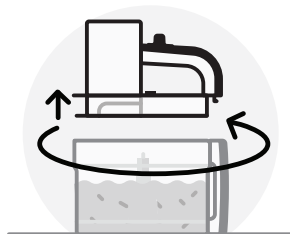


- 8** Remove the **Work Bowl Lid** from the **Work Bowl** by turning the lid counterclockwise to unlock. Carefully remove the lid and set it aside.

Using the Endless Chute.


The Endless Chute can be used for non-stop slicing and shredding without having to stop and empty the Work Bowl. The total amount of food you can slice or shred is limited only by the size of the receptacle under the chute. You can replace the full receptacle with an empty one and continue slicing or shredding.

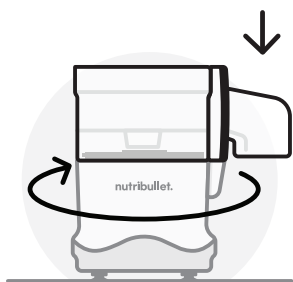


- 1** Place the **Endless Chute** on top of the **Motor Base**. Turn the **Endless Chute** clockwise to lock it onto the **Motor Base**.

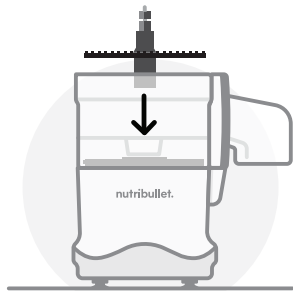


- 2** Insert the **Slinger Disc** into the hole at the bottom of the **Endless Chute**. Push down so the **Slinger Disc** is firmly and securely in place.

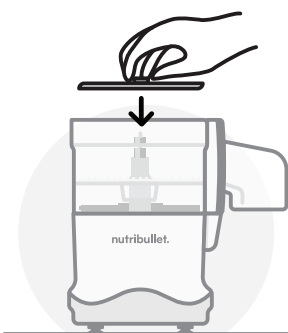


- 3** Carefully attach the **Slice/Shred Disc** to the **Slinger Disc** stem with the required side (slice or shred) facing up.

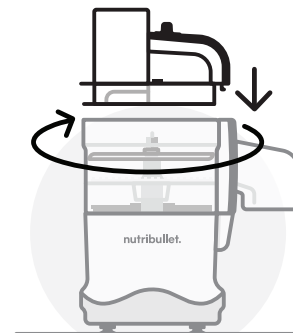

- 4** Place the **Work Bowl Lid** on the **Endless Chute** **Work Bowl**. Turn the **Lid** clockwise, lining up the markings on the **Lid** handle and **Work Bowl** handle to lock into place.

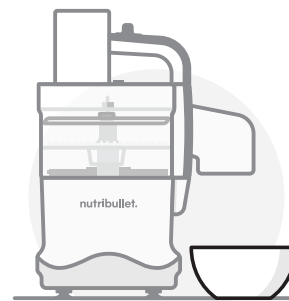

- 5** Place a receptacle for processed food on the counter under the **Endless Chute**. You can use bowls or saucepans. Those with high (under 5 inches, or 12.7cm) straight sides work best.

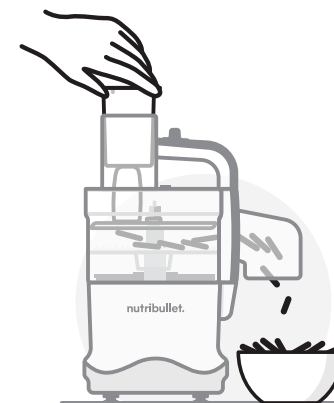

- 6** With the motor running, place food into the **Feed Chute**, carefully guiding it down using the **Food Pusher**.

NOTE: Remember to cut one end of the food flat if you are slicing to insert into feed tube flat side down. **Slinger Disc** will direct food through chute into receptacle.


! WARNING! Blades are sharp! Handle carefully. Keep fingers away from the disc and rotate until the markings line up and the disc sits in the higher position.

! WARNING! Never use hands, fingers or utensils to push food down into the Feed Chute or Work Bowl. Only use the Food Pusher provided.

Using the Food Pusher.

Use the pusher for guiding pieces of food down the **Feed Chute**.

TIP: For best results, start the Food Processor first and then place the ingredients into the Feed Chute. Use the Food Pusher to gently guide the food down the Feed Chute. Do not use excessive pressure as it may cause the motor to seize and overheat or crack the Work Bowl.

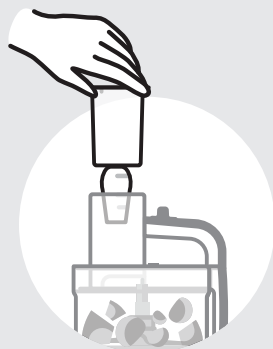

WARNING! Blades are sharp! Handle carefully. Keep fingers away from the blades' sharp edges. Always hold blades by grasping the plastic areas.

Troubleshooting.

PROBLEM

Unit does not power on.

SOLUTIONS

Make sure the Power Cord is plugged into an electrical outlet, and that outlet has power.

Make sure the Work Bowl Lid is locked into place on top of the Work Bowl. The markings on the Lid and handle should line up when properly locked in place. If the Lid becomes unlocked at any time while the motor is running, the unit will stop running and the blue lights around the buttons will flash.

Make sure the Work Bowl is locked into place on the Motor Base. When placing the Work Bowl on the Motor Base, turn the handle clockwise until you hear a click – indicating that the Work Bowl is properly locked in place.

PROBLEM

Feed Chute is blocked.

SOLUTIONS

If you notice that a piece or cluster of food appears to be stuck in the Feed Chute, blocking food flow, turn the motor OFF. Unlock the Work Bowl Lid from the Work Bowl, and use the Food Pusher, a spatula, or spoon to remove the stuck food before reassembling.

If the Work Bowl is nearly full of food, that may stop the flow of food down the Feed Chute. If the food has reached to just below the disc attachment, you'll need to empty the Work Bowl before processing more food. Turn the motor OFF, wait until the blades have come to a complete stop and disassemble the unit to empty the Work Bowl.

Care & maintenance.

Cleaning the **nutribullet Limitless™ Food Processor** is quick and easy. All detachable parts (Blade Adaptor, Chopping Blade, Slice/Shred Disc, Endless Chute and Slinger Disc) are **TOP RACK** dishwasher-safe. The Motor Base can be quickly hand-washed with a damp cloth.

NOTE: DO NOT use the heat/sanitize cycle when using the dishwasher.

STEP 1:

The most important thing — **ALWAYS POWER OFF THE UNIT** and **UNPLUG** the Motor Base from the power outlet when it is not in use.

NOTE: Do not attempt to handle the appliance until all parts have stopped moving! This includes during assembly and disassembly, while changing accessories, during cleaning, and any time you leave the machine unattended.

STEP 2:

Detach the blades and other attachments from the Motor Base.

STEP 3:

Clean the individual components as recommended below.

 **WARNING! NEVER store or leave blades or discs exposed. Always cover or store with the appropriate lid or cover.**

MOTOR BASE:

- To avoid risk of injury, **NEVER** attempt to clean the actuator system on the Motor Base while the unit is plugged in.

- Do not attempt to remove any pieces from the Motor Base.
- Use a sponge or dish cloth dampened with warm soapy water to wipe down the Motor Base until clean.
- If necessary, you may use a small brush to scrub the actuator system area to ensure it's clean.
- To clean leakage residue from the Motor Base, wipe with a damp sponge and warm water.

 **WARNING! Never submerge the Motor Base in water.**

ALL DETACHABLE PARTS:

 **WARNING! Blades are sharp! Handle all blade attachments with care when cleaning!**

- Work Bowl, Chopping Blade, Lid, Food Pusher, Reversible Slice/Shred Disc, direct serve chute and slinger disc are all **TOP RACK** dishwasher-safe. These parts may also be cleaned by hand with warm soapy water.

- We recommend cleaning all removable parts after each use to reduce the buildup of residue.

 **WARNING! Never use the sanitize cycle — heat this high can warp the plastic.**

 **WARNING! Do not clean the Work Bowl, Work Bowl Lid, or other parts of the appliance with steel wool pads/balls or other hard material that might scratch your nutribullet Limitless™ Food Processor.**

How to store.

The Chopping Blade and Reversible Slice/Shred Disc can be conveniently stored within the Work Bowl when not in use. Make sure the unit is powered off and unplugged before placing attachments in the Work Bowl for storage.

STEP 1:

Lower the Chopping Blade onto the Blade Adaptor.

STEP 2:

Lower the disc attachment onto the adaptor, on top of the Chopping Blade.

STEP 3:

Place the Work Bowl Lid onto the Work Bowl and lock into place with the Food Pusher nestled in the Feed Chute.

STEP 4:

Endless Chute and Slinger Disc can be stored separately.

Replacement parts.

To order additional parts and accessories, please visit our website at nutribullet.com/shop/accessories or feel free to contact Customer Service: 1 (800) 523-5993.

nutribullet Limitless™

Food Processor one-year limited warranty.

LIMITED WARRANTY FOR NUTRIBULLET®

nutribullet's limited warranty obligations are confined to the terms set forth below:

nutribullet, LLC ("nutribullet") warrants this nutribullet® against defects in materials and workmanship for a period of one year from the date of original retail purchase, product pick up or delivery whichever is later as applicable in your jurisdiction. This limited warranty is valid only in the country in which the product is purchased and comes with the product at no extra charge, however shipping and processing fees will be incurred for returns, replacements and or refunds.

If a defect exists, and this limited warranty is valid, at its option nutribullet® will (1) repair the product at no charge, using new or refurbished replacement parts, (2) exchange the product with a product that is new or that has been manufactured

from new or serviceable used parts and is at least functionally equivalent to the original product, or (3) refund the purchase price of the product. A replacement product assumes the remaining warranty of the original product. A repaired product has a one-year warranty from the date of delivery of the product to the consumer. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes nutribullet's property. When a refund is given, your product becomes nutribullet's property.

OBTAINING WARRANTY SERVICE

For limited warranty service, simply call our customer service department at **1 (800) 523-5993** or contact us via email from our website at **nutribullet.com**, simply click the contact us link, fill out and submit the customer contact form and we will be glad to help you. When you contact our

customer service department you will be asked for your name, address, telephone number and to provide proof of the original purchase (receipt) containing a description of the product(s), purchase date or date of delivery, whichever is later, and the appropriate nutribullet® serial number(s). Before you send your product for limited warranty service please make sure to keep a copy of all relevant documents for your files (receipt, etc.). It is always recommended to purchase product insurance and tracking services when sending your product for service. Remember, shipping and processing fees will be incurred and are not covered by the one-year limited warranty.

EXCLUSIONS & LIMITATIONS

This nutribullet® One-Year Limited Warranty applies only to nutribullet® products distributed by or for nutribullet® that can be identified by the "nutribullet" trademark, trade name, logo and bar code. nutribullet's One-Year Limited Warranty does not apply to any other products that may appear to be authentic, but were not distributed/sold by nutribullet, LLC.

Normal wear and tear is not covered by this limited warranty.

This limited warranty applies to consumer use only, and is void when the product is used in a commercial or institutional setting. This limited warranty extends only to the original consumer purchaser and is not transferable. In addition, proof of purchase must be demonstrated.

Repair or replacement of the product (or, if repair or replacement is not feasible, a refund of the purchase price) is the exclusive remedy of the consumer under this limited warranty. nutribullet, LLC shall not be liable for any incidental or consequential damages for breach of this limited warranty or any implied warranty on this product.

This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state. nutribullet® is not liable for any damage to products not covered by this warranty (e.g., cups, book, User Guide).

This limited warranty does not apply: (a) to damage caused by accident, abuse, misuse, or misapplication; (b) to damage caused by improper maintenance (including unauthorized parts service); (c) to a product or a part that has been modified in any way;

(d) if any nutribullet® serial number or trademark has been removed or defaced; and or (e) if the product has been used with an adapter/converter.

THIS LIMITED WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. NUTRIBULLET® SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IF NUTRIBULLET® CANNOT LAWFULLY DISCLAIM IMPLIED WARRANTIES UNDER THIS LIMITED WARRANTY, ALL SUCH WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO THE DURATION OF THIS LIMITED WARRANTY.

No nutribullet® reseller, agent, or employee is authorized to make any modification to this warranty.

NUTRIBULLET® IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY,

INCLUDING BUT NOT LIMITED TO LOST PROFITS, DOWNTIME, GOODWILL, DAMAGE TO OR REPLACEMENT OF EQUIPMENT AND PROPERTY. NUTRIBULLET® SPECIFICALLY DOES NOT REPRESENT THAT IT WILL BE ABLE TO REPAIR ANY PRODUCT UNDER THIS LIMITED WARRANTY.

Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages or exclusions or limitations on the duration of implied warranties or conditions, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary by state or province.

Product registration.

Visit nutribullet.com/register or call 1 (800) 523-5993 to register your new nutribullet Limitless™ Food Processor. You will be asked to enter the **Serial Number*** of your product, along with the purchase date and place of purchase. The information you submit is for product registration. Failure to complete product registration does not diminish your warranty rights.

The registration will enable us to contact you in the unlikely event of a product safety notification. By registering your product, you acknowledge that you have read and understood the instructions for use and the warnings set forth in the accompanying instructions.



*** How to find serial number under the Motor Base.**

Capital Brands Distribution, LLC | nutribullet.com | All rights reserved.

nutribullet® and the nutribullet logo are trademarks of CapBran Holdings, LLC registered in the U.S.A. and worldwide.

Illustrations may differ from the actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

250729_NBP50500