

# nutribullet CrispLite™ Vision 8 QT Air Fryer Quick Start Guide

## BEFORE FIRST USE:

**WARNING!** READ ALL SAFETY WARNINGS AND INSTRUCTIONS IN THE USER GUIDE BEFORE OPERATING.


**WARNING!** NEVER overfill the Cooking Drawer. Leave at least 2 inches of space at the top of the Cooking Drawer. Overfilling the Cooking Drawer prevents the hot air from circulating, which may cause smoke and possible fire hazard. overfilling may also cause the food to come into contact with the heating element, which may cause smoke and/or possible fire.

**WARNING!** DO NOT TOUCH HOT SURFACES. Always use insulated oven gloves and utensils when removing hot foods from the Cooking Drawer or Tray. Allow the Cooking Drawer or Tray to cool before directly handling and NEVER touch or attempt to clean the heating element as it may cause severe burn injuries or damage the unit.


**WARNING!** NEVER preheat with parchment paper or foil in the basket. Only use liners with food placed immediately on top.

**WARNING!** Always ensure parchment paper or foil do not extend above the rim of the basket where it may touch the heating element.


**WARNING!** Loose or lightweight items can be sucked into the heating element and ignite instantly. Always weigh down with heavier ingredients.

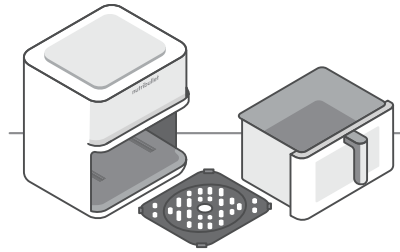


- 1 Open the box and remove the **Air Fryer Base** with **Cooking Drawer** and **3-in-1 VersaPlate™**, placing all parts on a flat, level, and dry surface.

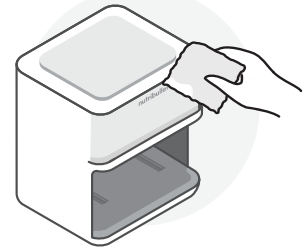

- 2 Rinse **Cooking Drawer** and **VersaPlate™** with hot, soapy water. Wipe exterior of **Air Fryer Base** with a clean, damp cloth.

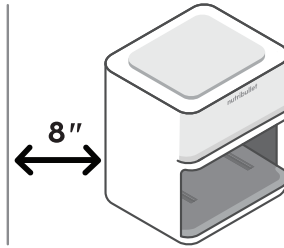

- 3 Move the **Air Fryer** 8 inches away from the wall to ensure proper air ventilation while in use.

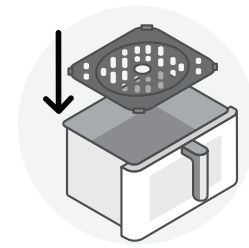


- 4 Insert the **VersaPlate™** into the bottom of the **Cooking Drawer**, making sure it is secure and level.

**NOTE:** To eliminate any new-machine odors that may be present or to thoroughly clean the inside of the Air Fryer, you can run the Air Fryer at its highest temperature about 5 minutes without putting any food inside.

**NOTE:** We suggest placing the unit on top of a heat proof mat to prevent risks of heat damage to surface of benchtop.

## USING THE AIR FRYER:

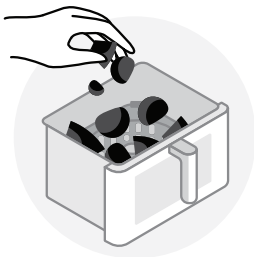


- 1 Place food into the **Cooking Drawer**.



- 2 Holding the **Cooking Drawer** by the handle, place it into the **Base**.

**NOTE:** The Air Fryer will not operate unless the **Cooking Drawer** is installed correctly.

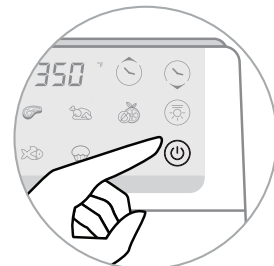


- 3 Plug the unit in and press the **Power Button** to turn the Air Fryer on.




- 4 **TO USE A COOKING PROGRAM:** Press the **Menu** button until your desired cooking program flashes. The default time and temperature for the flashing program will load on the **Control Panel**. Press the **Start/Stop** button to begin cooking.



- 5 **TO CHANGE TEMPERATURE/TIME SETTING:** To adjust a program's cooking temperature or time after it has been selected, press the **Time/Temperature** button and use the +/- buttons to first adjust the temperature. Once you've reached your desired temperature, press the **Time/Temperature** button again to set. Use the +/- buttons to adjust your cooking time. Once you've reached your desired time, press the **Start/Stop** button to set the time and begin cooking.

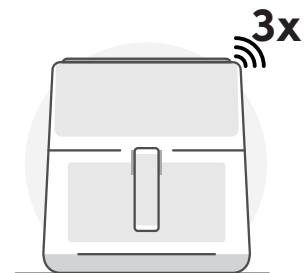

- 6 Once the Air Fryer has reached the end of its cooking time, you will hear 3 beeps to alert you that the cooking has completed.

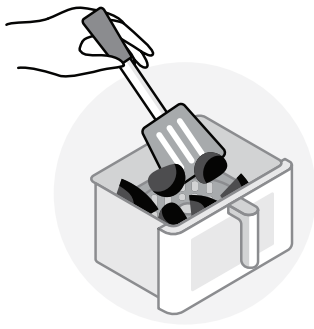

- 7** Open the **Cooking Drawer** and remove food using a utensil – **NEVER** use your hands


**WARNING!** Removing the **Cooking Drawer** too quickly may result in splattering and could potentially be dangerous

**WARNING!** Be careful when opening the **Cooking Drawer** as there may be hot steam.




- 8** Turn off **Air Fryer** by pressing and holding **Power Button** until the unit powers off

## CLEANING THE AIR FRYER:

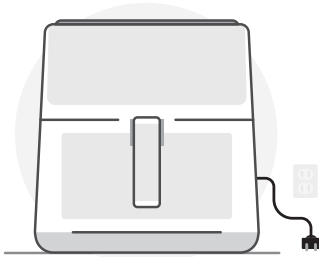


- 1** Turn the Air Fryer **OFF**, **UNPLUG** the unit, and allow it to cool down thoroughly after use.

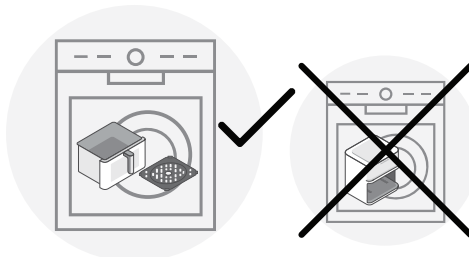

- 2** Remove the **Cooking Drawer** and **VersaPlate™**. The **Cooking Drawer** and **VersaPlate™** are **TOP RACK** dishwasher safe, or can be cleaned by rinsing in warm soapy water. **DO NOT** place the **Air Fryer Base** in the dishwasher.

**WARNING!** **NEVER** use the sanitize cycle – heat this high can warp the plastic.

**WARNING!** **DO NOT** use an abrasive or metal cleaning tool to clean the **Cooking Drawer** or **VersaPlate™**. Doing so can damage the ceramic non-stick coating on the surface of these items.

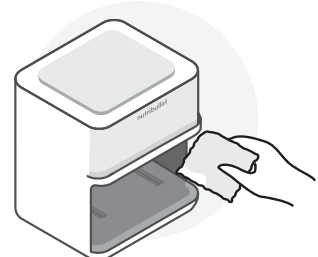

- 3** Clean the inner wall of the **Air Fryer Base** by gently wiping off any residue with a warm cotton cloth, then dry it with a dry cloth. The interior and exterior of the **Base** should only be cleaned by wiping it with a damp cloth.

**WARNING!** **NEVER** submerge the **Base** in water or any other liquid.

**WARNING!** Always **UNPLUG** and allow the unit to **COMPLETELY COOL** before cleaning.

**WARNING!** Accumulated fat, oil, and food particles are highly flammable. **ALWAYS** remove fat, oil and food particles after each batch to prevent smoking or igniting.

**WARNING!** Only when the unit is **COMPLETELY COOL AND UNPLUGGED**, periodically check the heating coil for oil splatter and wipe it down with a lint free cloth.



Scan here to access additional information and the full online User Guide for your **nutribullet Crisplite™ Vision 8 QT Air Fryer**.